

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Cecotec](#) /
- › [Cecotec Toast & Taste 9000 Double Slot Toaster 980W User Manual](#)

### Cecotec 03179

# Cecotec Toast & Taste 9000 Double Slot Toaster 980W User Manual

Model: 03179

## INTRODUCTION

---

This manual provides comprehensive instructions for the safe and efficient operation of your Cecotec Toast & Taste 9000 Double Slot Toaster. Please read this manual thoroughly before first use and retain it for future reference.



*Image: The Cecotec Toast & Taste 9000 Double Slot Toaster, featuring its sleek black design and integrated bun warmer rack.*

## IMPORTANT SAFETY INSTRUCTIONS

---

- Always ensure the appliance is unplugged before cleaning or when not in use.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Keep out of reach of children.
- Do not operate the toaster with a damaged cord or plug. If the cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Avoid touching hot surfaces. Use handles or knobs.
- Do not place the toaster near flammable materials such as curtains or drapes.
- Never attempt to remove jammed bread with a metal utensil while the toaster is plugged in. Always unplug first.
- Ensure the crumb tray is regularly emptied to prevent fire hazards.

## PRODUCT COMPONENTS

---

Familiarize yourself with the parts of your toaster:

1. **Toasting Slots:** Two extra-wide slots designed to accommodate various types of bread.

2. **Browning Control Dial:** Adjusts the browning level from 1 (lightest) to 6 (darkest).
3. **Function Buttons:**
  - **Cancel Button:** Stops the toasting cycle immediately.
  - **Reheat Button:** Warms previously toasted bread without further browning.
  - **Defrost Button:** Defrosts and toasts frozen bread.
4. **High-Lift Lever:** Lifts toast higher for easy removal of smaller items.
5. **Bun Warmer Rack:** Detachable rack for warming pastries and larger items.
6. **Crumb Tray:** Removable tray located at the bottom for collecting crumbs.
7. **Power Cord with Storage:** For convenient storage on the base.



*Image: A close-up view of the toaster's control panel, showing the browning dial (1-6) and the illuminated Cancel, Reheat, and Defrost buttons.*

## SETUP AND FIRST USE

- 
1. **Unpacking:** Carefully remove the toaster and all accessories from the packaging. Dispose of packaging materials responsibly.
  2. **Placement:** Place the toaster on a stable, heat-resistant, and non-slip surface, away from walls, curtains, and other flammable materials. Ensure adequate ventilation around the appliance.
  3. **Initial Cleaning:** Wipe the exterior with a damp cloth. Ensure the crumb tray is empty and properly inserted.
  4. **First Use (Burn-off):**
    - Plug the toaster into a grounded electrical outlet.
    - Set the browning control to a medium setting (e.g., 3 or 4).
    - Operate the toaster without bread for 2-3 cycles to burn off any manufacturing residues. A slight odor or smoke is normal during this process. Ensure good ventilation in the area.
    - Unplug and allow to cool completely before first use with food.

## OPERATING INSTRUCTIONS

---

### Toasting Bread

1. Ensure the toaster is plugged into a suitable power outlet.
2. Place slices of bread into the toasting slots. The automatic centering system will hold the bread in place for even browning.
3. Select your desired browning level using the browning control dial (1 for light, 6 for dark).
4. Press the high-lift lever down until it locks into place. The indicator light will illuminate, and toasting will begin.
5. Once the selected browning level is reached, the toast will automatically pop up, and the indicator light will turn off.
6. If the toast is not sufficiently browned, you can lower the lever again for a short period.
7. To stop toasting at any time, press the **Cancel** button.



Image: The toaster in operation on a kitchen counter, with a slice of bread emerging from one of the slots, surrounded by breakfast items.

## Using the Defrost Function

This function is ideal for toasting frozen bread directly.

1. Place frozen bread into the toasting slots.
2. Select your desired browning level.
3. Press the high-lift lever down, then press the **Defrost** button. The defrost indicator light will illuminate.
4. The toaster will automatically adjust the toasting time to first defrost and then toast the bread.

## Using the Reheat Function

Use this function to warm up already toasted bread without further browning.

1. Place the cold, toasted bread into the slots.
2. Press the high-lift lever down, then press the **Reheat** button. The reheat indicator light will illuminate.

3. The toaster will briefly warm the bread.

## Using the Bun Warmer Rack

The bun warmer rack is designed for warming larger items like croissants, pastries, or buns.

1. Place the bun warmer rack onto the top of the toaster slots.
2. Place the items to be warmed on the rack.
3. Set the browning control to a low setting (e.g., 1 or 2).
4. Press the high-lift lever down. The toaster will begin to heat.
5. Monitor the warming process closely to prevent burning. Press the **Cancel** button when desired warmth is achieved.
6. Remove warmed items carefully, as they will be hot.



*Image: The toaster with two croissants placed on its upper warming rack, ready for gentle heating.*

## CARE AND MAINTENANCE



---

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. **Always Unplug:** Before cleaning, always unplug the toaster from the power outlet and allow it to cool completely.
2. **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners, harsh chemicals, or metal scouring pads, as these can scratch or damage the finish.
3. **Crumb Tray:**
  - Pull out the crumb tray from the bottom of the toaster.
  - Empty crumbs into a waste bin.
  - Wipe the tray clean with a damp cloth and dry thoroughly before reinserting.
  - Ensure the crumb tray is fully and correctly inserted before using the toaster.



*Image: A hand removing the easy-slide crumb tray from the bottom of the toaster, showing accumulated crumbs.*

**Storage:** When not in use, store the toaster in a clean, dry place. The power cord can be wrapped around the cord storage area on the base for neat storage.

## Troubleshooting

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet faulty; circuit breaker tripped.	Ensure plug is securely in outlet. Test outlet with another appliance. Check household circuit breaker.
Bread does not toast or toasts unevenly.	Browning level set too low; bread too thick or irregularly shaped; crumb tray full.	Increase browning level. Ensure bread fits freely in slots. Empty crumb tray.
Smoke or burning smell.	Crumbs accumulated; food jammed in slots; first use burn-off.	<b>Immediately unplug.</b> Empty crumb tray. Carefully remove any jammed food (only when unplugged and cool). Ensure good ventilation during first use. If smoke persists, discontinue use.
Lever does not stay down.	Toaster not plugged in; internal mechanism issue.	Ensure toaster is plugged in. If problem persists after checking power, contact customer support.

## Product Specifications

Feature	Detail
Brand	Cecotec
Model Number	03179
Power	980 Watts
Voltage	230 Volts
Number of Slots	2 (Extra-wide)
Browning Levels	6
Functions	Reheat, Defrost, Cancel
Special Features	Bun warmer rack, Removable crumb tray, High-lift function, Automatic centering, Non-slip base, Cord storage
Material	Plastic with Stainless Steel finishes
Color	Black
Dimensions (L x W x H)	31.5 x 21 x 23.2 cm
Weight	1.3 kg



# WARRANTY AND SUPPORT

Cecotec products are manufactured to high-quality standards. This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions regarding coverage and duration.

For technical support, spare parts, or warranty claims, please contact Cecotec customer service through their official website or the contact information provided in your product documentation. Spare parts are generally available for up to 10 years from the date of purchase, ensuring long-term usability.




**Manufacturer:** Cecotec

**Website:** [www.cecotec.com](http://www.cecotec.com)



© 2023 Cecotec. All rights reserved.

## Related Documents - 03179

	<p><a href="#">Cecotec Toast&amp;Taste 9000/10000/16000 Double Extra Plastic Toaster User Manual &amp; Instructions</a></p> <p>Comprehensive user manual for Cecotec Toast&amp;Taste double slot plastic toasters (models 9000, 10000, 16000). Includes safety, operation, cleaning, specifications, and warranty information.</p>
	<p><a href="#">Cecotec Toast&amp;Taste 9000/10000 Double/Extra White Toaster: Instruction Manual</a></p> <p>Comprehensive instruction manual for the Cecotec Toast&amp;Taste 9000 Double White and Toast&amp;Taste 10000 Extra White toasters, covering safety, operation, cleaning, specifications, and warranty.</p>
	<p><a href="#">Manual de Instrucciones Cecotec Toast&amp;Taste 9000 Double, 10000 Extra, 16000 Extra Double</a></p> <p>Guía completa de usuario para las tostadoras Cecotec Toast&amp;Taste (9000 Double, 10000 Extra, 16000 Extra Double). Incluye instrucciones de seguridad, funcionamiento, limpieza, mantenimiento, especificaciones técnicas y garantía.</p>



[Cecotec Toast&Taste 1000 Retro Double Toaster: User Manual and Safety Guide](#)  
Comprehensive user manual and safety instructions for the Cecotec Toast&Taste 1000 Retro Double Toaster. Learn about operation, cleaning, specifications, and warranty.



[Manual de Instrucciones Cecotec Toast&Taste 16000 Extra Double - Uso y Seguridad](#)  
Descargue el manual de instrucciones completo para la tostadora Cecotec Toast&Taste 16000 Extra Double. Encuentre guías detalladas sobre su uso, limpieza, mantenimiento, especificaciones técnicas y consejos para un tostado perfecto. Diseñada para uso doméstico.



[Manual de Instrucciones Cecotec Yummy Toast Double](#)  
Guía completa de usuario para la tostadora Cecotec Yummy Toast Double. Incluye instrucciones de seguridad, funcionamiento, limpieza, mantenimiento, especificaciones técnicas y garantía.