

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [COOKTRON](#) /

› [COOKTRON 1.7L Electric Kettle Quiet Instruction Manual](#)

COOKTRON 1.7L Electric Kettle Quiet

COOKTRON 1.7L Electric Kettle Quiet

INSTRUCTION MANUAL

[Safety Information](#) [Setup](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

Introduction

Thank you for choosing the COOKTRON 1.7L Electric Kettle Quiet. This manual provides essential information for the safe and efficient use of your new appliance. Please read it thoroughly before first use and keep it for future reference.

Video: What to Know! Cooktron Electric Kettle

This video provides a general overview of the COOKTRON 1.7L Electric Kettle, highlighting its key features and benefits for daily use.

Important Safety Information

- Read all instructions before use.
- Do not immerse the kettle, power base, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only the power base provided with the kettle.
- The kettle features automatic shut-off and boil-dry protection for enhanced safety.
- Ensure the kettle is placed on a stable, flat, heat-resistant surface.

Video: No Plastic Inside This Kettle!

This video demonstrates the 100% food-grade 304 stainless steel interior, ensuring no plastic contact with hot water for safe drinking.

Setup

- 1. Unpack:** Carefully remove all packaging materials from the kettle and its accessories.
- 2. Initial Cleaning:** Before first use, fill the kettle with water to the MAX line, boil it, then discard the water. Repeat this process 2-3 times to remove any manufacturing residue.
- 3. Place the Power Base:** Position the power base on a dry, flat, stable, and heat-resistant surface near a power outlet.
- 4. Cord Management:** The power base features a 360° rotatable design for convenient cord storage and placement. Adjust the cord length as needed.

Video: The Unboxing Of COOKTRON 1.7L Electric Kettle

This video guides you through the unboxing process and initial setup steps for your new kettle.



The image shows the 360° swivel base for flexible placement and the one-touch illuminating ON/OFF switch for easy operation.

Operating Instructions

- 1. Fill the Kettle:** Open the lid and fill the kettle with the desired amount of water. Do not fill below the MIN mark or above the MAX (1.7L) line.
- 2. Place on Base:** Place the kettle securely onto the power base.

- Power On:** Plug the power cord into a suitable electrical outlet. Press the ON/OFF switch down. The indicator light will illuminate, signaling that the kettle is heating.
- Boiling:** The 1500W heating element will rapidly and quietly boil the water (within 3-7 minutes for 1.7L). The kettle operates at less than 30 dB.
- Automatic Shut-Off:** Once the water reaches a rolling boil, the kettle will automatically shut off, and the indicator light will extinguish.
- Pouring:** Carefully lift the kettle from the base and pour the hot water. The double-wall construction ensures the exterior remains cool to the touch.



The image illustrates the kettle's 1.7L capacity, capable of boiling 8 cups of water in 6-7 minutes.

Maintenance & Cleaning

- Unplug:** Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
- Exterior Cleaning:** Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Interior Cleaning (Descaling):** Over time, mineral deposits (limescale) may build up inside the kettle. To descale:

- Fill the kettle with 1 part white vinegar and 2 parts water.
- Boil the mixture and let it soak for at least 30 minutes, or overnight for heavy buildup.
- Discard the mixture and rinse the interior thoroughly with fresh water.
- For stubborn stains, a non-abrasive brush can be used.

- **Storage:** When not in use, store the kettle in a clean, dry place.



EASY TO CLEAN

WIDE-CALIBRE OPENING

REACH A HAND IN FOR COMPLETE, HYGIENIC CLEANING

The image highlights the wide-calibre opening of the kettle, allowing for easy access and hygienic cleaning of the stainless steel interior.

Troubleshooting

- **Kettle does not heat:** Ensure the power cord is securely plugged into a working outlet and the ON/OFF switch is pressed down. Check if the kettle is properly seated on the power base.
- **Kettle shuts off before boiling:** This may indicate limescale buildup. Perform descaling as described in the Maintenance section.
- **Water has a strange taste/odor:** Ensure initial cleaning steps were followed. If the issue persists, try boiling and discarding water several times. The 100% stainless steel interior minimizes taste transfer.
- **Exterior is hot:** While the double-wall design keeps the exterior cool to the touch, prolonged boiling or

very high ambient temperatures might cause slight warmth. It should not be hot enough to burn.

Specifications

Brand	COOKTRON
Model Name	COOKTRON 1.7L Electric Kettle Quiet
Capacity	1.7 Liters (8 cups)
Power	1500W
Material	Food-grade 304 Stainless Steel (interior), BPA-free plastic (exterior)
Special Features	Automatic Shut-Off, Boil-Dry Protection, Quiet Boil (<30dB), Cool-Touch Exterior, 360° Rotatable Base
Product Dimensions	8.98" L x 6.42" W x 11.02" H
Item Weight	3.5 Pounds



This diagram illustrates the dimensions of the COOKTRON 1.7L Electric Kettle: 8.98 inches (Length), 6.42 inches (Width), and 11.02 inches (Height).

Warranty & Support

The COOKTRON 1.7L Electric Kettle Quiet comes with a **2-Year Warranty** from the date of purchase, covering defects in material and workmanship under normal use.

For technical support, troubleshooting assistance, or warranty claims, please contact COOKTRON Customer Service:

- **Email:** support@cooktron.com

- **Phone:** (XXX) XXX-XXXX (Please refer to your product packaging for the most current contact number)
- **Support Hours:** Monday - Friday, 9:00 AM - 5:00 PM PST/PDT

© 2026 COOKTRON. All rights reserved.