

COOKTRON JK17MB-150-06

COOKTRON 1.7L Quiet Electric Kettle Instruction Manual

Model: JK17MB-150-06 | Brand: COOKTRON

IMPORTANT SAFEGUARDS

Please read all instructions carefully before using your COOKTRON Electric Kettle. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- Do not touch hot surfaces. Always use the handle.
- To protect against electrical hazards, do not immerse the kettle, power base, or power cord in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Avoid contact with steam from the spout when water is boiling.
- Ensure the lid is securely closed before operating.

PRODUCT OVERVIEW

The COOKTRON 1.7L Electric Kettle is designed for efficient and safe water boiling. Familiarize yourself with its components:

- **Kettle Body:** The main container for water, featuring a double-wall design.

- **Lid:** Hinged lid for easy filling and secure closure.
- **Handle:** Ergonomically designed for a comfortable and cool grip.
- **Spout with Filter:** Ensures smooth pouring and filters out impurities.
- **On/Off Switch:** Located at the base of the handle, illuminates when active.
- **Power Base:** Cordless 360° rotatable base for convenient placement and power connection.



Image: Front view of the COOKTRON 1.7L Electric Kettle, showcasing its sleek black design.



EASY TO CLEAN

WIDE-CALIBRE OPENING

REACH A HAND IN FOR COMPLETE, HYGIENIC CLEANING

Image: An internal diagram illustrating the kettle's 100% food-grade 304 stainless steel interior and the thermal insulation layer of the double-wall construction.

BEFORE FIRST USE

Before using your new electric kettle, it is recommended to clean it thoroughly.

Initial Cleaning

1. Open the lid and fill the kettle with clean water up to the 'MAX' fill line.
2. Close the lid securely.
3. Place the kettle on its power base and plug it into a grounded electrical outlet.
4. Press the On/Off switch to boil the water. The indicator light will illuminate.
5. Once the water has boiled, the kettle will automatically shut off.
6. Carefully pour out the boiled water and rinse the interior of the kettle with fresh water.
7. Repeat this process 2-3 times to ensure thorough cleaning and remove any manufacturing residues.

SETUP

Setting up your COOKTRON Electric Kettle is straightforward:

Placing the Kettle

1. Place the power base on a dry, flat, and stable surface, away from the edge of the countertop.
2. Ensure the power cord is not dangling or in a position where it can be tripped over.
3. The kettle can be placed on the 360° swivel base from any angle.



Image: The kettle positioned on its 360° swivel base, highlighting the convenience of cordless operation and the integrated cord storage beneath the base.

OPERATING INSTRUCTIONS

Filling the Kettle

1. Press the button on the handle to open the lid.

2. Fill the kettle with fresh, cold water. Do not fill below the 'MIN' mark or above the 'MAX' mark indicated inside the kettle. Overfilling may cause boiling water to spill out.
3. Close the lid firmly until it clicks into place.



Image: Demonstrating the kettle's 1.7L capacity, capable of providing 8 cups of hot water.

Boiling Water

1. Place the filled kettle onto the power base.
2. Plug the power base into a standard grounded electrical outlet.
3. Flip the On/Off switch downwards to the 'ON' position. The indicator light will illuminate, signaling that the kettle is heating.
4. The kettle will automatically shut off once the water reaches a rolling boil. The indicator light will turn off.

Pouring

1. Carefully lift the kettle from its power base.
2. Pour the hot water slowly and steadily to avoid splashing.
3. Always pour away from your body to prevent steam burns.

FEATURES

The COOKTRON Electric Kettle incorporates several features for enhanced performance and safety:

- **Double-Wall Structure:** The kettle features a BPA-free plastic exterior and a 100% food-grade 304 stainless steel interior. This design keeps the exterior cool to the touch, preventing accidental burns, and helps maintain water temperature longer.
- **Auto Shut-Off & Boil-Dry Protection:** Equipped with British Strix thermostat technology, the kettle automatically turns off once water boils. It also has boil-dry protection, which prevents the kettle from operating if there is no water inside, enhancing safety and product longevity.
- **Quiet Operation:** Designed to heat water quickly and quietly, operating at less than 30 dB.
- **360° Rotatable Power Base:** Offers flexibility in placing the kettle on its base from any direction.
- **100% Stainless Steel Interior:** Ensures no plastic contact with hot water, providing safe and clean drinking water.



Image: The kettle operating with low noise, suitable for quiet environments.

MAINTENANCE AND CLEANING

Regular cleaning and descaling will ensure the longevity and optimal performance of your kettle.

Regular Cleaning

1. Always unplug the kettle and allow it to cool completely before cleaning.
2. Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
3. The interior can be cleaned with a soft sponge and mild dish soap. Rinse thoroughly.
4. The wide top opening allows for easy access to the interior for cleaning.



Image: The wide-calibre opening of the kettle's interior, designed for easy and hygienic cleaning.

Descaling

Mineral deposits (limescale) can build up inside the kettle, especially in hard water areas. Descaling regularly to maintain efficiency.

1. Fill the kettle with 2 cups of white vinegar and 2 cups of water.
2. Bring the mixture to a boil and then let it soak for at least 30 minutes, or overnight for heavy buildup.

- Pour out the mixture and rinse the kettle thoroughly several times with fresh water.
- For stubborn deposits, gently scrub the interior with a non-abrasive brush or sponge.

TROUBLESHOOTING

If you encounter any issues with your kettle, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Kettle does not turn on.	Not plugged in; On/Off switch not engaged; No power at outlet.	Ensure power base is plugged in; Flip switch to 'ON'; Check outlet with another appliance.
Kettle boils but does not shut off automatically.	Lid is not closed properly; Kettle has been overfilled.	Ensure lid is securely closed; Do not overfill past the 'MAX' line.
Water has an unusual taste or odor.	New appliance odor; Mineral deposits.	Perform initial cleaning steps; Descale the kettle.
Exterior of kettle gets hot.	This model features a cool-touch exterior due to its double-wall design. If the exterior is hot, contact customer support.	Discontinue use and contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	COOKTRON
Model Name	JK17MB-150-06
Capacity	1.7 Liters (1.8 Quarts)
Power	1500W
Material	100% Food-Grade 304 Stainless Steel Interior, BPA-Free Plastic Exterior
Special Features	Double-Wall, Cool-Touch, Auto Shut-Off, Boil-Dry Protection, Quiet Operation, 360° Swivel Base
Product Dimensions	8.98" L x 6.42" W x 11.02" H

Feature	Detail
Item Weight	3.23 pounds



Image: Product dimensions for the COOKTRON Electric Kettle.

WARRANTY AND SUPPORT

COOKTRON products are manufactured with quality and care. For warranty information or customer

support, please refer to the product packaging or contact COOKTRON directly through their official website or customer service channels. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2023 COOKTRON. All rights reserved.