

[Manuals.plus](#) /

› [SogesHome](#) /

› SogesHome 4-Tier Kitchen Baker's Rack (Model NSDUS-171-FG) Instruction Manual

SogesHome NSDUS-171-FG

SogesHome 4-Tier Kitchen Baker's Rack Instruction Manual

Model: NSDUS-171-FG

INTRODUCTION

Thank you for choosing the SogesHome 4-Tier Kitchen Baker's Rack. This manual provides essential information for the safe assembly, operation, and maintenance of your new storage unit. Please read these instructions carefully before beginning assembly and retain them for future reference.



Image: The fully assembled SogesHome 4-Tier Kitchen Baker's Rack, showcasing its utility in a kitchen environment with various items stored on its shelves.

SAFETY INFORMATION

To ensure safe use of your SogesHome Baker's Rack, please observe the following:

- **Do not overload shelves:** Exceeding the weight capacity of the shelves can lead to structural failure and potential injury.
- **Assemble according to instructions:** Incorrect assembly may compromise the stability and safety of the rack.
- **Keep children away during assembly:** Small parts may pose a choking hazard.
- **Place on a level surface:** Ensure the rack is stable to prevent tipping.
- **Regularly check connections:** Periodically inspect all screws and bolts to ensure they remain tight.

PACKAGE CONTENTS

Before assembly, please verify that all components and hardware are present. All necessary hardware and tools for assembly are included in the package.



Image: An empty SogesHome 4-Tier Kitchen Baker's Rack, providing a clear view of its frame and shelf design before items are placed on it.

ASSEMBLY INSTRUCTIONS

Assembly of the SogesHome Baker's Rack is designed to be straightforward. Follow these steps carefully:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Identify Parts:** Refer to the included diagram to identify each component (shelves, frame pieces, screws, etc.).
3. **Assemble Frame:** Begin by attaching the main vertical frame pieces using the provided hardware. Do not fully tighten



screws until all parts are in place.

4. **Attach Shelves:** Secure the shelves to the frame at the designated heights. Ensure they are level before tightening.
5. **Install Cross Braces:** Attach the X-frame diagonal braces to the back of the unit for enhanced stability.
6. **Attach Hooks:** Install the five movable hooks on the side rail for hanging utensils.
7. **Adjust Foot Pads:** Once assembled, place the rack in its desired location and adjust the foot pads (1-2 cm) to ensure stability on uneven floors.
8. **Final Tightening:** Once all components are correctly positioned, securely tighten all screws and bolts.



1-2 cm adjustable foot pads,
maintain stability

5 additional hooks, can be used
to hang kitchen utensils

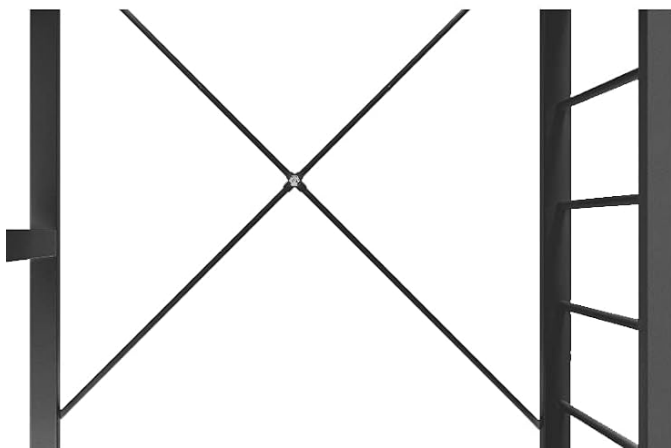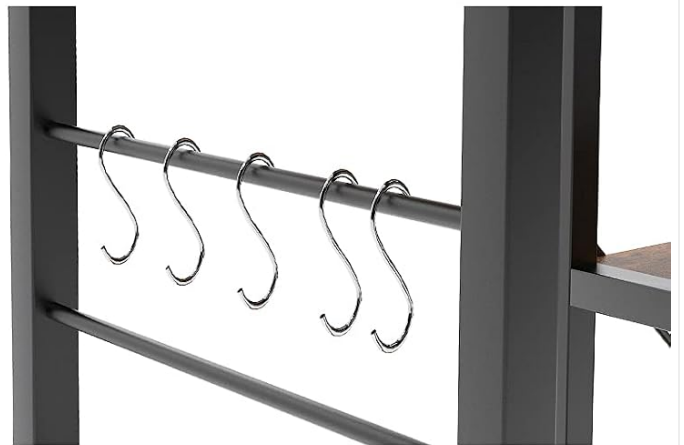

X frame design adds stability &
durability of the rack.

Image: Detailed view of key features including adjustable foot pads for stability, five movable hooks for kitchen utensils, and the X-frame design that enhances the rack's durability.

OPERATING INSTRUCTIONS

The SogesHome 4-Tier Kitchen Baker's Rack is designed for versatile storage in various rooms. Utilize its multiple tiers and features as follows:

- **Top Shelf:** Ideal for placing a microwave oven, coffee maker, toaster, or other small appliances.
- **Middle Shelves:** Use for storing dishes, bowls, cookbooks, or pantry items. The varying heights accommodate different sized accessories.
- **Bottom Shelf:** Suitable for larger pots, pans, or storage containers.
- **Side Hooks:** Hang frequently used kitchen utensils, towels, or oven mitts for easy access.
- **Placement:** This rack is suitable for use in kitchens, dining areas, living rooms, or bedrooms as a utility storage shelf or snack station.



Image: The baker's rack in a functional kitchen setting, demonstrating its capacity to hold a microwave, various dishes, and cooking essentials, enhancing kitchen organization.

MAINTENANCE

To maintain the appearance and longevity of your SogesHome Baker's Rack:

- **Cleaning:** Wipe with a dry cloth to remove dust and spills. For stubborn marks, use a slightly damp cloth and dry

immediately. Avoid harsh chemicals.

- **Water Resistance:** The shelves feature a waterproof and anti-scratch finish, making them easy to clean. However, prolonged exposure to moisture should be avoided.
- **Inspection:** Periodically check all connections to ensure screws and bolts are tight. Re-tighten if necessary.



Water
Resistant
Resistente
al Agua



Easy to
Clean Facil
de Limpiar



Image: Visual representation of the rack's water-resistant and easy-to-clean properties, highlighting the durable surface of the shelves.

TROUBLESHOOTING

If you encounter any issues with your baker's rack, refer to the following common solutions:

- **Wobbling/Instability:** Ensure the rack is placed on a flat, level surface. Adjust the foot pads at the bottom of the legs to compensate for uneven flooring. Verify all screws and bolts are fully tightened.
- **Difficulty Assembling:** Double-check that you are using the correct hardware for each step. Refer to the assembly diagram. Do not overtighten screws until all parts are loosely fitted.
- **Missing Parts:** If any parts are missing or damaged upon arrival, please contact customer support immediately for assistance.

SPECIFICATIONS

Brand	SogesHome
Model Number	NSDUS-171-FG
Material	Engineered Wood, Powder-Coated Metal Frame
Color	Vintage Brown
Product Dimensions (L x W x H)	35.4" x 15.4" x 32.7" (90cm x 39cm x 83cm)
Number of Shelves	4
Special Features	Durable, Waterproof, Anti-scratch, Adjustable Foot Pads, 5 Movable Hooks, X-frame Design
Assembly Required	Yes



Image: A detailed diagram illustrating the precise measurements of the baker's rack, including overall dimensions and spacing between shelves.

WARRANTY AND SUPPORT

SogesHome is committed to providing quality products. For specific warranty details regarding your 4-Tier Kitchen Baker's Rack, please refer to the documentation included with your purchase or contact SogesHome customer service.

Customer Support: For any questions, concerns, or assistance with assembly or product issues, please contact SogesHome customer service. 7x24 hour customer help is available to assist you before and after your purchase. You can typically find contact information on the manufacturer's website or through your retailer.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question