

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [AULCMEET](#) /

› AN-MR650A Replacement Voice Remote Control Compatible with LG Smart TV UHD 4K OLED TV Models

AULCMEET AN-MR650A

User Manual: AN-MR650A Replacement Voice Remote Control

Brand: AULCMEET | Model: AN-MR650A

1. INTRODUCTION

This manual provides detailed instructions for the AULCMEET AN-MR650A Replacement Voice Remote Control. Designed for seamless compatibility with a wide range of LG Smart TV UHD 4K OLED TV models, this remote offers intuitive control and voice search functionality, enhancing your television viewing experience.

Please read this manual thoroughly before using the remote control to ensure proper operation and to maximize its features.





Image 1.1: Front view of the AN-MR650A Replacement Voice Remote Control. This image displays the full layout of the remote, including the power button, number pad, navigation wheel, voice command button, and dedicated app buttons for Netflix and Amazon.

2. SETUP

2.1 Battery Installation

The AN-MR650A remote control requires two (2) AAA 1.5V Alkaline batteries for operation.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA 1.5V Alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Close the battery compartment cover securely until it clicks into place.

2.2 Initial Pairing (If Required)

This remote control uses Bluetooth connectivity. While many replacement remotes are plug-and-play, some may require initial pairing with your LG Smart TV. If the remote does not respond after battery installation, follow these general pairing steps:

1. Ensure your TV is powered on.
2. Point the remote control towards the TV.
3. Press and hold the **HOME** button and the **BACK** button simultaneously for 5-10 seconds until a pairing message appears on your TV screen.
4. Release the buttons once the pairing message is displayed. The remote should now be paired and ready for use.

Note: Specific pairing instructions may vary slightly depending on your LG TV model. Refer to your TV's user manual for detailed pairing procedures if the above steps are unsuccessful.

3. OPERATING THE REMOTE CONTROL

The AN-MR650A remote control provides comprehensive functionality for navigating your LG Smart TV. Below are key features and button descriptions:

3.1 Key Button Functions

- **Power Button ()**: Turns the TV on or off.
- **STB PWR**: Power button for a Set-Top Box (if connected).
- **Number Pad (0-9)**: Directly input channel numbers or text.
- **LIST**: Displays a list of channels or content.
- **QUICK ACCESS**: Provides quick access to frequently used apps or functions.
- **AD**: Audio Description button.
- **Volume Up/Down (/)**: Adjusts the TV volume.
- **Mute ()**: Mutes or unmutes the TV sound.
- **Channel Up/Down (P / P)**: Changes TV channels.
- **Home ()**: Accesses the TV's Smart Home dashboard.
- **Recents**: Displays recently used applications or content.
- **Settings ()**: Opens the TV's settings menu.
- **Navigation Wheel/OK Button**: Used for scrolling and selecting items on screen. Press the wheel to confirm selection.
- **BACK / EXIT**: Returns to the previous screen or exits a menu/app.
- **GUIDE**: Opens the electronic program guide.
- **Netflix / Amazon**: Dedicated buttons for direct access to Netflix and Amazon Prime Video.
- **Color Buttons (Red, Green, Yellow, Blue)**: Context-sensitive buttons for various functions within menus or apps.
- **TEXT**: Accesses Teletext (if available).
- **T.OPT**: Teletext Options.
- **LIVE ZOOM**: Zooms in on a specific area of the screen.
- **MAGIC LINK**: Provides related content information.
- **FOCUS**: Focuses on a specific area for detailed viewing.

3.2 Voice Control Function

The AN-MR650A features a built-in microphone for voice commands. This allows you to search for content, change settings, or control your TV using your voice.

1. Press and hold the **Microphone Button ()** located below the navigation wheel.
2. Speak clearly into the microphone on the remote control.
3. Release the Microphone Button when you have finished speaking. Your TV will process the command.

Tip: Ensure your TV's voice recognition settings are enabled for optimal performance.



Image 3.1: A user operating the AN-MR650A remote control while watching television. This image illustrates the remote being used in a typical home entertainment setting, highlighting its ergonomic design and ease of use.

4. MAINTENANCE

4.1 Cleaning the Remote Control

To maintain the remote control's appearance and functionality, clean it regularly.

- Use a soft, dry cloth to wipe the surface of the remote.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning materials, as these can damage the remote's finish or internal components.

4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new AAA 1.5V Alkaline batteries.

- Follow the battery installation steps outlined in Section 2.1.
- Dispose of used batteries responsibly according to local regulations.

5. TROUBLESHOOTING

If you encounter issues with your AN-MR650A remote control, try the following troubleshooting steps:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with new AAA 1.5V Alkaline batteries.
 - Ensure there are no obstructions between the remote and the TV's sensor.
 - Try re-pairing the remote with your TV (refer to Section 2.2).
- **Voice Control Not Working:**
 - Ensure the remote is properly paired with the TV.
 - Check the TV's settings to ensure voice recognition is enabled.
 - Speak clearly and hold the microphone button while speaking.
 - Ensure there is no physical obstruction over the microphone on the remote.
- **Specific Buttons Not Working:**
 - Clean the remote control, especially around the non-functioning buttons, to remove any dirt or debris.
 - If only certain buttons are unresponsive, it might indicate a hardware issue.

If the problem persists after trying these steps, please contact customer support.

6. SPECIFICATIONS

Feature	Description
Brand	AULCMEET
Model	AN-MR650A
Key Feature	Voice Search
Maximum Supported Devices	1 (Television)
Connectivity Technology	Bluetooth

Battery Type Required	2 x AAA 1.5V Alkaline batteries
Compatible LG TV Models	<p>W7, G7, E7, C7, B7A SJ9570, SJ9500, SJ8570, SJ857A, SJ8500, SJ850A, SJ8000, UJ7700, UJ6570, UJ657A, UJ6540, UJ6500 Series, 65UJ7700, 65UJ7700-UA, 65UJ7750-UB, 70UJ6520-UA, 70UJ6570, 70UJ6570-UB, 70UJ657A-UC, 70UJ657T, 72SJ8570, 74UJ6450, 74UJ6450UD, 74UJ6450-UD, 75SJ8570, 75SJ8570UB, 75SJ8570-UB, 75SJ857A, 75SJ857AUC, 75SJ857A-UC, 75UJ6450UD, 75UJ6450-UD, 75UJ6470UC, 75UJ6470-UC, 75UJ6520-UA, 75UJ657A-UB, 86SJ9570, 86SJ9570UA, 86SJ9570-UA, OLED55B7A, OLED55B7AU, OLED55B7A-U, OLED55B7P, OLED55B7PU, OLED55B7P-U, OLED55C7C, OLED55C7P, OLED55C7PU, OLED55C7P-U, OLED55E7P, OLED55E7PU, OLED55E7P-U, OLED65B7, OLED65B7A, OLED65B7AUA, OLED65B7A-UA, OLED65B7AU, OLED65B7A-U, OLED65B7P, OLED65B7PU, OLED65B7P-U, OLED65C7P, OLED65C7PU, OLED65C7P-U, OLED65E7P, OLED65E7PU, OLED65E7P-U, 49SM8670PUA, 55SM8670PUA, 65SM8670PUA, 70UJ6570, 43UJ6500-UB, 49UJ6500-UB, 49UJ6560-UF, 49UJ7700, 49UJ7700-UA, 55SJ8000, 55SJ8000UA, 55SJ8000-UA, 55SJ800A, 55SJ8500, 55SJ8500UB, 55SJ8500-UB, 55UJ6520-UD, 55UJ6540-UB, 55UJ6580-UE, 55UJ7700, 55UJ7700-UA, 55UJ7750-UB, 60SJ8000, 60SJ8000UA, 60SJ8000-UA, 60SJ800A, 60SJ8500, 60SJ8500UB, 60SJ8500-UB, 60UJ6540-UB, 60UJ7700, 60UJ7700-UA, 65SJ8000, 65SJ8000UA, 65SJ8000-UA, 65SJ800A, 65SJ800AUB, 65SJ800A-UB, 65SJ850AUC, 65SJ850A-UC, 65SJ8500, 65SJ8500UB, 65SJ8500-UB, 65SJ850A, 65SJ9500, 65SJ9500UA, 65SJ9500-UA, 65UJ6520-UD, 65UJ6540-UB, 65UJ6580-UE.</p>

7. WARRANTY AND SUPPORT

For any questions, concerns, or issues regarding your AULCMEET AN-MR650A Replacement Voice Remote Control, please contact the seller or manufacturer directly. Refer to your purchase documentation for specific warranty information and contact details.

The manufacturer is committed to providing quality products and support to ensure your satisfaction.