

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Logitech](#) /

› [Logitech Wireless Mouse M190 Instruction Manual](#)

Logitech M190

Logitech Wireless Mouse M190 Instruction Manual

Model: M190

INTRODUCTION

The Logitech Wireless Mouse M190 is a full-size wireless mouse designed for comfort and reliable performance. It features a contoured shape suitable for medium to large hands, offering an ambidextrous design for both left and right-handed users. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your M190 mouse.

Experience a lag-free wireless connection up to 10 meters, precise cursor control, and line-by-line scrolling. The M190 is built for durability and offers an extended 18-month battery life with an automatic power-saving mode.

WHAT'S IN THE BOX

Your Logitech Wireless Mouse M190 package should contain the following items:

- Logitech Wireless Mouse M190
- USB Receiver
- 1 AA Battery (pre-installed or included separately)



WHAT'S IN THE BOX

Image: Logitech M190 retail packaging, displaying the mouse, USB receiver, and AA battery.

SETUP GUIDE

Follow these steps to set up your Logitech Wireless Mouse M190:

1. **Insert Battery:** If the AA battery is not already installed, open the battery compartment cover on the underside of the mouse and insert the provided AA battery, ensuring correct polarity. Close the cover securely.
2. **Connect USB Receiver:** Locate an available USB port on your computer. Plug the small USB receiver into the USB port.
3. **Power On:** The mouse should automatically power on once the battery is inserted and the receiver is connected. There is no separate on/off switch.
4. **Automatic Connection:** Your computer should automatically detect and connect to the mouse. No additional software or drivers are typically required for basic functionality.



LAG-FREE WIRELESS


Strong, reliable connection

Image: The Logitech M190 mouse positioned next to a keyboard, illustrating its wireless connectivity.

OPERATING INSTRUCTIONS

The Logitech M190 mouse offers intuitive control for everyday computing tasks:

- **Left Click:** Press the left button for primary actions like selecting items, opening files, or clicking links.
- **Right Click:** Press the right button to access contextual menus or secondary functions.
- **Scroll Wheel:** Roll the scroll wheel up or down to navigate through documents and web pages. The M190 provides precise line-by-line scrolling.
- **Cursor Control:** The optical sensor provides smooth and accurate cursor movement on various surfaces.
- **Wireless Range:** Maintain a reliable connection up to 10 meters (33 feet) from your computer.
- **Power Saving Mode:** The mouse automatically enters a power-saving mode when not in use to conserve battery life.

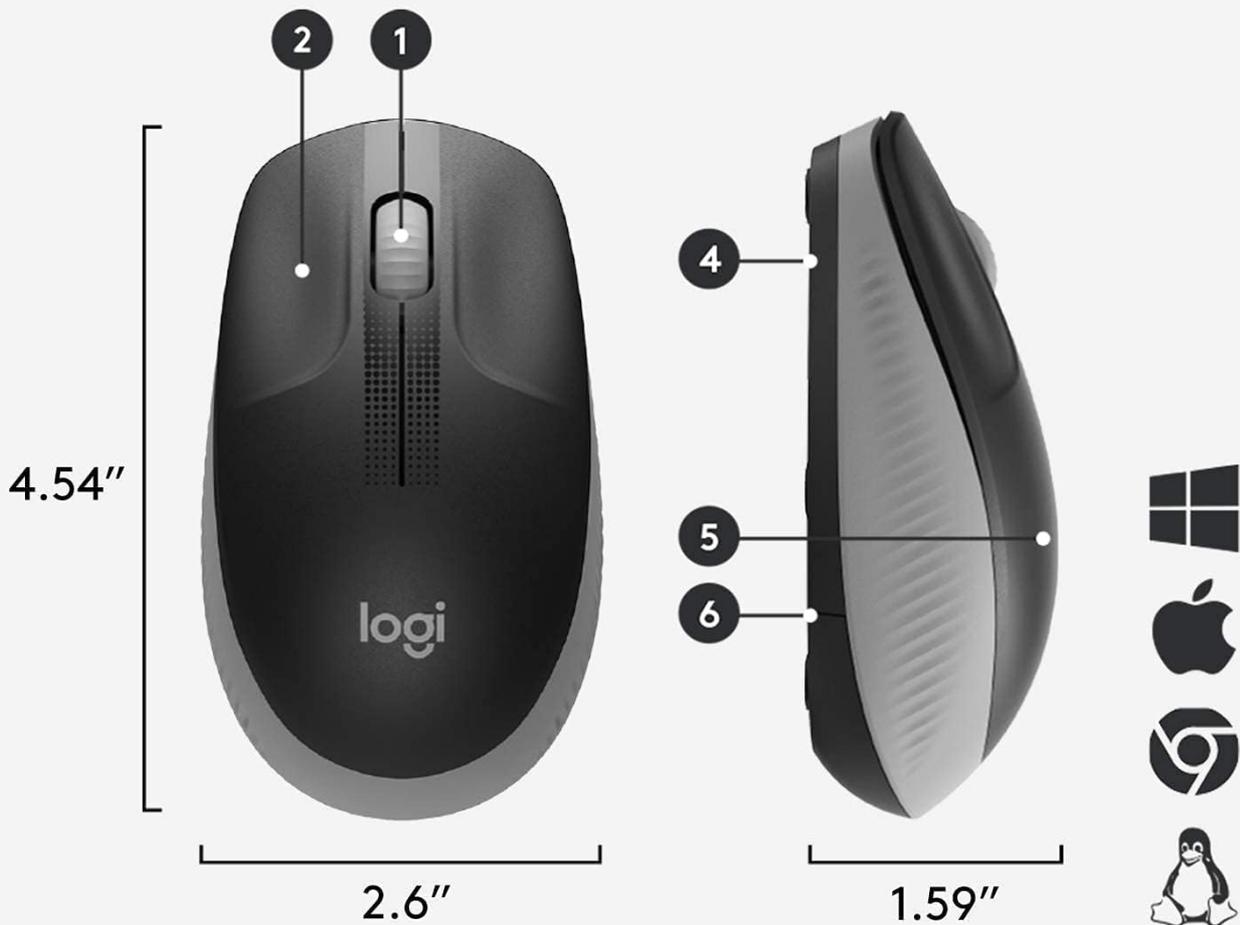

1. Precise scrolling
2. Comfortable shape
3. Better side grips

4. Smooth cursor
5. Palm support
6. Lag-free wireless

Image: A detailed diagram of the Logitech M190 mouse, highlighting its dimensions and key features such as precise scrolling, comfortable shape, better side grips, smooth cursor, palm support, and lag-free wireless.

MAINTENANCE

To ensure optimal performance and longevity of your Logitech Wireless Mouse M190:

- **Battery Replacement:** The mouse uses one AA battery. When performance degrades or the mouse stops responding, replace the battery. The typical battery life is up to 18 months, depending on usage.
- **Cleaning:** Use a soft, dry, or slightly damp cloth to clean the exterior of the mouse. Avoid using harsh chemicals or abrasive cleaners. For the optical sensor, use a cotton swab to gently remove any dust or debris.
- **Storage:** When not in use for extended periods, you may remove the battery to prevent potential leakage, although the mouse's power-saving features are designed to minimize power consumption.

TROUBLESHOOTING

If you encounter issues with your Logitech Wireless Mouse M190, try the following solutions:

- **Mouse Not Responding:**

- Check the battery: Ensure the AA battery is correctly inserted and has sufficient charge. Replace the battery if it is weak or depleted.
- Check the USB receiver: Ensure the USB receiver is securely plugged into a working USB port on your computer. Try plugging it into a different USB port.
- Restart your computer: Sometimes a simple restart can resolve connectivity issues.

- **Lag or Intermittent Connection:**

- Reduce distance: Ensure the mouse is within the 10-meter operating range of the USB receiver.
- Remove obstructions: Large metal objects or other electronic devices can interfere with the wireless signal. Try moving the mouse closer to the receiver or clearing obstructions.
- Avoid interference: Other wireless devices operating on the 2.4 GHz frequency (like Wi-Fi routers or cordless phones) can cause interference. Try to minimize their proximity.

- **Cursor Movement is Erratic:**

- Clean the optical sensor: Dust or debris on the optical sensor can affect tracking. Gently clean the sensor on the underside of the mouse with a cotton swab.
- Change surface: The mouse may not track well on highly reflective, transparent, or uneven surfaces. Try using a mouse pad or a different surface.

SPECIFICATIONS

Feature	Detail
Brand	Logitech
Model	M190
Connectivity Technology	USB Wireless (2.4 GHz)
Movement Detection Technology	Optical
Special Feature	Wireless, Ambidextrous Design, Power Saving Mode
Battery Type	1 x AA Battery
Battery Life	Up to 18 months
Wireless Range	Up to 10 meters (33 feet)
Item Weight	3.2 ounces
Package Dimensions	5.28 x 3.07 x 1.81 inches

WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or to access additional resources for your Logitech Wireless Mouse M190, please visit the official Logitech support website. You can typically find detailed warranty terms and contact information for customer service there.

Logitech Support Website: www.logitech.com/support

