

[Manuals.plus](#) /

› [JOYIN](#) /

› JOYIN Large Friction Powered Garbage Truck Toy Set Instruction Manual

JOYIN 50018

JOYIN Large Friction Powered Garbage Truck Toy Set

Model: 50018

Brand: JOYIN

1. INTRODUCTION

This instruction manual provides essential information for the safe and proper use, setup, operation, and maintenance of your JOYIN Large Friction Powered Garbage Truck Toy Set. Please read this manual thoroughly before initial use and retain it for future reference.



Image 1.1: The JOYIN Large Friction Powered Garbage Truck Toy Set, including the truck, dumpster, trash bins, and learning cards.

2. WHAT'S IN THE BOX

The JOYIN Large Friction Powered Garbage Truck Toy Set includes the following components:

- 1 x Friction-powered Garbage Truck
- 1 x Large Dumpster Container (Red)
- 3 x Color Printed Trash Bins (Recyclable, Trash, Food Scraps)
- 3 x Mini Trash Learning Cards (containing 30 unique trash images)

FLIP TRUCK CONTAINER



1 DUMPSTER 3 TRASH BINS 30 TRASH CARDS



SIDE TRASH LIFTING FUNCTION



TRASH BIN LOADING FUNCTION



Image 2.1: A visual representation of all included components: the garbage truck, red dumpster, three colored trash bins, and the mini trash learning cards.

3. SAFETY INFORMATION

Your safety and the safety of others are paramount. Please adhere to the following safety guidelines:

- This product is ASTM-F963 approved, non-toxic, and BPA-free, meeting US toy safety standards.
- Recommended for ages 36 months to 12 years. Adult supervision is advised for younger children, especially during initial play.
- Keep small parts (like the mini trash learning cards) away from children under 3 years to prevent choking hazards.
- Do not throw or hit the toy against hard surfaces, as this may cause damage to the toy or injury.
- Ensure batteries are installed correctly and replaced by an adult. Do not mix old and new batteries, or different types of batteries.

4. SETUP

The garbage truck requires batteries for its sound and light features. The batteries are included with the product.

4.1 Battery Installation

1. Locate the battery compartment on the underside of the truck.
2. Using a small Phillips head screwdriver (not included), unscrew the battery compartment cover.
3. Insert 3 x LR44 batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Replace the cover and secure it with the screw.

Once batteries are installed, the truck is ready for operation.

5. OPERATING INSTRUCTIONS

The JOYIN Garbage Truck offers multiple interactive play functions:

5.1 Friction Power Operation

To make the truck move, simply push it forward or pull it backward on a flat surface. The friction mechanism will store energy, allowing the truck to continue moving on its own for a distance after release.

5.2 Sound and Light Activation

The truck is equipped with an electronic console featuring buttons for simulated sounds and lights. These buttons are located on the top of the truck's cabin.

- Press the designated buttons to activate realistic horn sounds, working sounds, and flashing headlights.

BUTTON PANELS FOR SOUND & LIGHTS



FRONT LOAD DUMPSTER LIFTING FUNCTION



TRUNK LOADING FUNCTION



SIMULATED LED HEADLIGHT



Image 5.1: Detail of the truck's cabin, highlighting the accessible buttons for activating simulated sounds and lights, and the illuminated headlights.



Image 5.2: A child interacting with the garbage truck, demonstrating the activation of its simulated working sounds and lights by pressing the buttons on the cabin roof.

5.3 Waste Collection Functions

The truck features three distinct waste collection mechanisms:

- **Front Dumper Dumping Function:** The large red dumpster can be attached to the front mechanism. Manually lift and tilt the dumpster to simulate dumping its contents into the truck's main compartment.
- **Side Lifting Function:** The smaller colored trash bins can be attached to the side lifting arm. Operate the arm to lift and empty the bins into the truck.
- **Rear Trunk Trash Bin Dumping:** The rear section of the truck can be opened and tilted to simulate emptying the collected waste.

ENHANCED DESIGN

**Larger Size
16 X 8 X 7 Inches**



**Versatile Play
Lift and dump functions**



Friction-Powered: Easily operated for extended driving distances

Image 5.3: An illustration detailing the various operational features of the garbage truck, including the front dumper, side lifting mechanism, and rear trunk dumping, demonstrating its versatile play capabilities.

5.4 Trash Classification Learning Cards

Use the included mini trash learning cards with the colored trash bins to engage in educational play. The cards feature various trash images (30 in total) that can be sorted into the corresponding bins (Recyclable, Trash, Food Scraps), teaching children about waste classification.

6. MAINTENANCE

Proper maintenance will ensure the longevity and optimal performance of your toy set.

6.1 Cleaning

- Wipe the truck and accessories with a soft, damp cloth.
- Do not immerse the electronic parts of the truck in water.

- Avoid using harsh chemicals or abrasive cleaners.

6.2 Battery Care

- Remove batteries if the toy will not be used for an extended period to prevent leakage.
- Dispose of used batteries responsibly according to local regulations.

6.3 Storage

- Store the toy set in a cool, dry place away from direct sunlight and extreme temperatures.
- Keep all components together to prevent loss.

7. TROUBLESHOOTING

If you encounter any issues with your JOYIN Garbage Truck, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No sound or lights	Batteries are dead or incorrectly installed.	Check battery polarity. Replace with new LR44 batteries.
Friction power not working effectively	Wheels are obstructed or mechanism is dirty.	Ensure wheels are clear of debris. Clean the underside of the truck.
Dumping/lifting mechanisms are stiff or stuck	Debris caught in moving parts or mechanism misaligned.	Carefully inspect and remove any obstructions. Gently realign parts if necessary.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

- **Product Dimensions:** 17.32 x 8.27 x 6.93 inches
- **Item Weight:** 3.41 pounds
- **Model Number:** 50018
- **Manufacturer Recommended Age:** 36 months - 12 years
- **Batteries:** 3 x LR44 batteries (included)
- **Material:** Durable, non-toxic, BPA-free plastic

9. WARRANTY AND SUPPORT

For warranty information, product support, or any inquiries not covered in this manual, please contact the seller, JoyinDirect, through the platform where the product was purchased. Please have your purchase details and model number (50018) ready when contacting support.

No official product videos from the seller were available for embedding in this manual.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B095XJDJ8V>

More documents and user manuals: <https://manuals.plus/>