

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Waffle Wow!](#) /
- › [Waffle Wow! Waffle Maker Bundle - Mini Emojis, Outer Space, and Dungeon Heroes Instruction Manual](#)

Waffle Wow! Waffle Maker Bundle

Waffle Wow! Waffle Maker Bundle Instruction Manual

Mini Emojis, Outer Space, and Dungeon Heroes Non-Stick Waffler Irons

INTRODUCTION

Welcome to the Waffle Wow! Waffle Maker Bundle. This manual provides essential information for the safe and efficient operation of your new waffle makers, featuring fun designs including Mini Emojis, Outer Space, and Dungeon Heroes. Please read all instructions carefully before use and retain for future reference.



Image: Waffle Wow! Waffle Maker Bundle packaging, showcasing the three distinct design themes.

IMPORTANT SAFEGUARDS

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

thoroughly.

3. **Preheating:** Plug the waffle maker into a standard electrical outlet. The indicator light will illuminate, signaling that the appliance is heating. The light will change color (e.g., from red to green) or turn off when the waffle maker has reached its optimal cooking temperature.
4. **Seasoning (Optional but Recommended):** For the first use, or if waffles begin to stick, lightly brush or spray the non-stick cooking plates with a small amount of cooking oil or butter. This helps maintain the non-stick surface.

OPERATING INSTRUCTIONS

1. **Prepare Batter:** Prepare your favorite waffle or pancake batter. For best results with detailed shapes, ensure the batter is not too thick.
2. **Fill Plates:** Once preheated, carefully pour or spoon batter into each mold on the lower cooking plate. Fill the molds adequately to cover the design, but avoid overfilling to prevent overflow. Note that gluten-free batters may not rise as much as traditional batters, so you may need to fill slightly more to achieve full shapes.
3. **Close and Cook:** Gently close the lid. Do not force it shut. Cook for approximately 3 to 5 minutes, or until the waffles are golden brown and cooked through. Cooking time may vary based on batter type and desired crispness.
4. **Remove Waffles:** Use a heat-resistant, non-metallic utensil (such as a silicone spatula or wooden tongs) to carefully remove the cooked waffles from the plates. Avoid using metal utensils, as they can damage the non-stick coating.
5. **Repeat:** Close the lid and allow the waffle maker to reheat briefly before cooking the next batch.



Video: Demonstration of preparing and filling the car-shaped waffle maker molds. The video shows the application of cooking spray and the careful pouring of batter into each mold, highlighting the importance of not overfilling.

CLEANING AND MAINTENANCE

1. **Cool Down:** Always unplug the waffle maker from the power outlet and allow it to cool completely before cleaning.
2. **Wipe Plates:** Use a soft, damp cloth or sponge to wipe down the non-stick cooking plates. For stubborn batter residue, a small amount of mild dish soap can be used. Avoid abrasive cleaners or scouring pads, as these can damage the non-stick surface.
3. **Clean Exterior:** Wipe the exterior of the appliance with a damp cloth. Do not immerse the entire unit in water or any other liquid.
4. **Storage:** Once clean and dry, store the waffle maker in an upright position to save space.

TROUBLESHOOTING

- **Waffles sticking:** Ensure cooking plates were lightly oiled or buttered before use. Allow the waffle maker to preheat fully.
- **Waffles not cooking evenly:** Ensure the waffle maker is fully preheated. Check that batter is evenly distributed in the molds.
- **Waffles overflowing:** Reduce the amount of batter used per mold.
- **Indicator light not working:** Ensure the appliance is properly plugged into a working outlet. If the

issue persists, discontinue use and contact customer support.

SPECIFICATIONS

Special Feature	Non Stick Coating
Color	Red, Blue
Material	Iron
Brand	Waffle Wow!
Included Components	Waffle Iron, Mold
Style	Nonstick
Manufacturer	Waffle Wow!
ASIN	B095XJG6TP
Date First Available	May 26, 2021

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official Waffle Wow! website. Keep your purchase receipt as proof of purchase for any warranty claims.