

UBay BN59-01006A

UBay BN59-01006A Remote Control Instruction Manual

Model: BN59-01006A

INTRODUCTION

This manual provides instructions for the UBay BN59-01006A Remote Control, a replacement remote designed for various Samsung LED LCD HD Smart TVs. This remote is engineered for immediate use without the need for complex programming or pairing procedures. Simply insert batteries, and it is ready to operate your compatible Samsung television.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two new AAA alkaline batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 1: Back of the remote control showing the battery compartment. Ensure correct battery orientation.

The remote control is now ready for use. No additional programming or pairing is required for compatible Samsung TVs.

OPERATING INSTRUCTIONS

The UBay BN59-01006A remote control provides full functionality for your Samsung TV. Below is a guide to its

primary buttons and their functions.





Figure 2: Front view of the remote control, highlighting various function buttons.

- **POWER:** Turns the TV on or off.
- **SOURCE:** Selects the input source (e.g., HDMI, AV, Component).
- **Number Buttons (0-9):** Directly enter channel numbers.
- **PRE-CH:** Switches to the previously viewed channel.
- **VOL (+/-):** Adjusts the volume level.
- **MUTE:** Mutes or unmutes the TV sound.
- **CH (+/-):** Changes the TV channel up or down.
- **MENU:** Accesses the TV's main menu.
- **INFO:** Displays information about the current program or input.
- **Directional Pad (Up, Down, Left, Right) & ENTER:** Navigates through menus and confirms selections.
- **EXIT:** Exits the current menu or function.
- **RETURN:** Returns to the previous screen or menu.
- **Color Buttons (A, B, C, D):** Used for specific functions within certain TV applications or menus, as indicated on-screen.
- **MTS:** Multi-Track Sound (for selecting audio tracks).
- **P.SIZE:** Picture Size (adjusts aspect ratio).
- **CC:** Closed Captions (turns captions on or off).

Video Demonstration

Your browser does not support the video tag.

Video 1: A demonstration of the Samsung BN59-01006A remote control's features and functionality. This video provides a visual overview of button usage and general operation.

MAINTENANCE

- **Cleaning:** To clean the remote, gently wipe it with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new alkaline batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** Store the remote in a dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Problem	Solution
Remote is not responding.	• Ensure there is a clear line of sight between the remote and the TV's infrared receiver. • Check if the batteries are inserted correctly with the correct polarity. • Replace the batteries with new alkaline batteries.
Some buttons are not working.	• Clean the remote control surface, especially around the non-responsive buttons, to remove any debris. • Replace the batteries, as low power can sometimes affect specific functions.
TV is not turning on/off with the remote.	• Verify that the remote is compatible with your specific Samsung TV model. • Perform the general troubleshooting steps for non-responsive remotes (batteries, line of sight).

SPECIFICATIONS

- **Model Number:** BN59-01006A
- **Brand:** UBay
- **Dimensions:** 8 x 2 x 0.7 inches (approximately)
- **Item Weight:** 2.89 ounces (without batteries)
- **Color:** Black
- **Power Source:** 2 x AAA Alkaline Batteries (not included)
- **Compatibility:** Designed for Samsung LED LCD HD Smart TVs
- **Special Feature:** Ergonomic design

WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your UBay BN59-01006A Remote Control, please refer to the retailer's return policy or contact UBay customer service through the platform where the product was purchased. Please retain your proof of purchase for any warranty claims.