

[Manuals.plus](#) /

› [SILKYDRY](#) /

› SILKYDRY 2-Person Outdoor Patio Swing Chair Instruction Manual

SILKYDRY OP70493

SILKYDRY 2-Person Outdoor Patio Swing Chair Instruction Manual

Model: OP70493

1. IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all instructions before assembly and use of this product. Failure to follow these instructions may result in injury or damage.

- Ensure all components are present and undamaged before assembly.
- Assemble the swing chair on a flat, stable surface.
- Tighten all bolts and nuts securely. Periodically check and re-tighten as necessary.
- Do not exceed the maximum weight capacity of 390 lbs (177 kg). This swing is designed for two persons.
- Keep children and pets away from the assembly area.
- Do not stand on the swing chair.
- Avoid using the swing in strong winds or severe weather conditions.
- Always ensure the swing is stable before use.

2. PRODUCT COMPONENTS

The SILKYDRY 2-Person Outdoor Patio Swing Chair includes a durable powder-coated steel frame, an adjustable canopy, and a padded cushion seat. Key features include rugged steel spring hooks for smooth swinging and protective foot pads for stability.



Rugged steel
spring hook



2-person seating



Protective foot pads

Image 1: Overview of the SILKYDRY 2-Person Outdoor Patio Swing Chair, highlighting its main features such as the rugged steel spring hook, 2-person seating capacity, and protective foot pads.

The construction utilizes an all-steel frame for stability and a durable polyester cloth for the canopy and cushion covers. The design is suitable for various outdoor settings.




All Steel Construction



Durable Polyester Cloth



Stylish Appearance

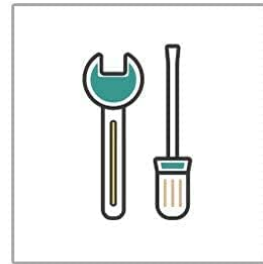

Wide Applications

Image 2: Visual representation of the swing chair's core attributes: all-steel construction, durable polyester cloth, stylish appearance, and suitability for wide applications.

3. ASSEMBLY INSTRUCTIONS

The swing chair is designed for straightforward assembly. All necessary hardware and a detailed instruction manual are included in the package. Please follow the step-by-step guide provided with your product for proper assembly.

1. Unpack all components and verify against the parts list in the included manual.
2. Assemble the main frame structure according to the diagrams.
3. Attach the swing seat to the frame using the provided springs and hardware.
4. Install the canopy frame and fabric.
5. Place the padded cushion onto the seat.
6. Ensure all connections are tight and secure before first use.

4. OPERATING INSTRUCTIONS

4.1. Canopy Adjustment

The canopy of your patio swing chair is adjustable to provide optimal sun protection. It can be adjusted

from 0 to 45 degrees to block sunlight from various angles.

- To adjust the canopy angle, locate the adjustment knobs on either side of the canopy frame.
- Loosen the screw on the knob.
- Rotate the canopy to your desired angle.
- Tighten the screw firmly to secure the canopy in position.

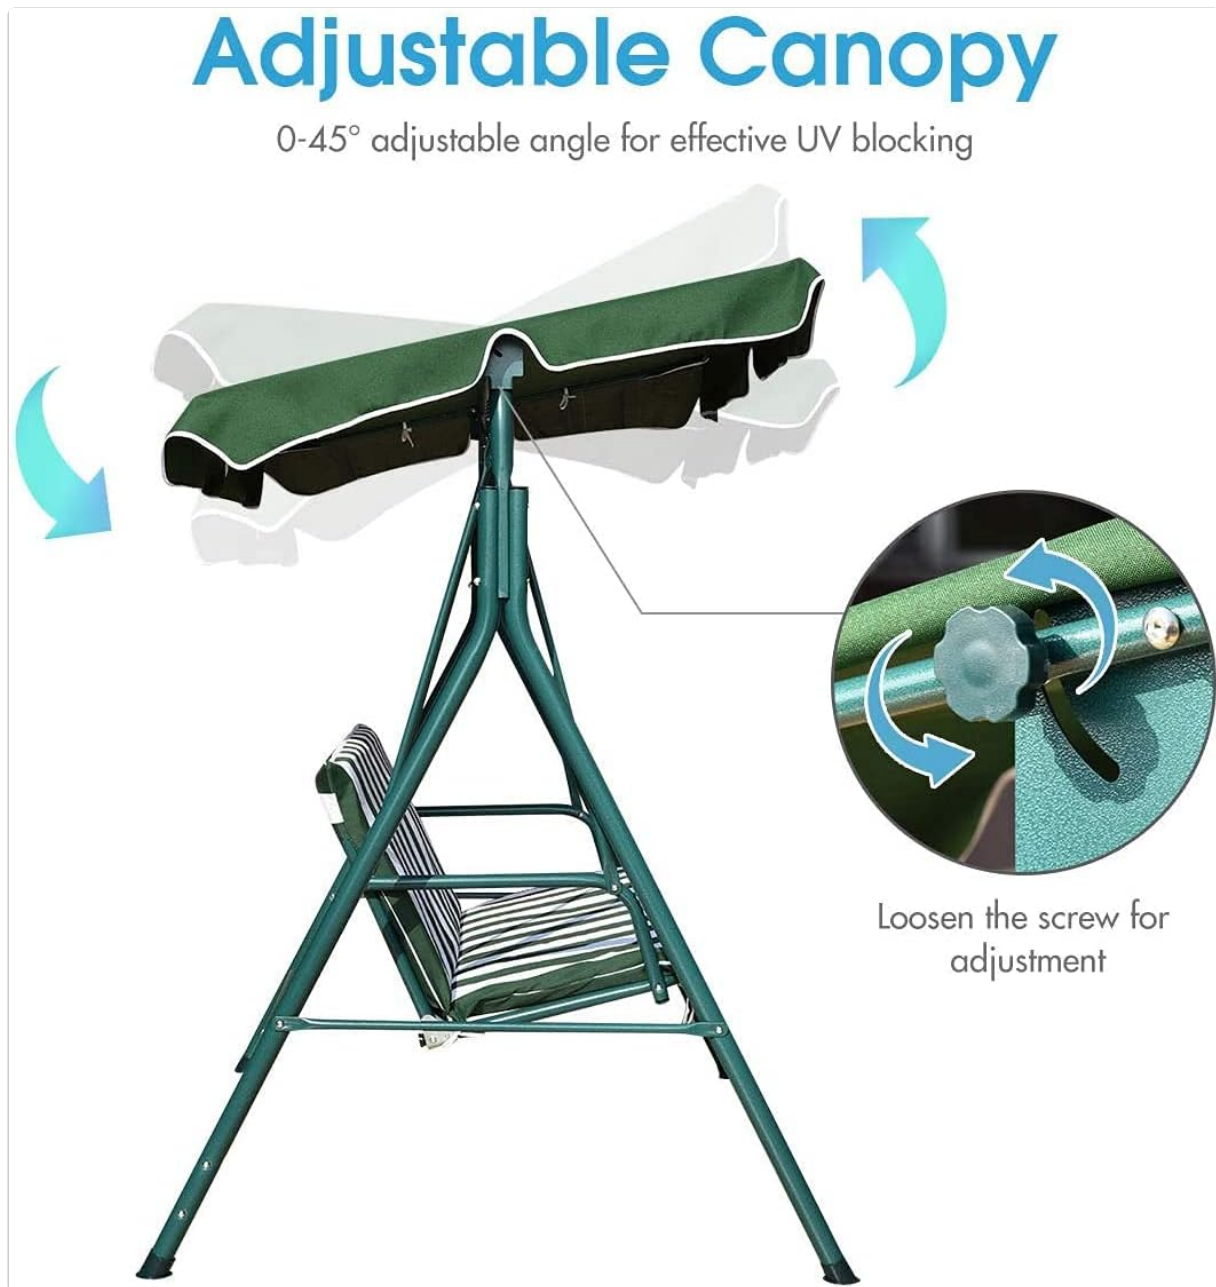


Image 3: Illustration of the adjustable canopy, demonstrating how to loosen the screw for angle adjustment between 0 and 45 degrees for effective UV blocking.

5. CARE AND MAINTENANCE

Regular care and maintenance will extend the life and appearance of your swing chair.

5.1. Cleaning

- **Frame:** The powder-coated steel frame can be wiped clean with a damp cloth and mild soap. Avoid abrasive cleaners.
- **Canopy and Cushions:** The detachable canopy and cushion covers can be removed for cleaning. Hand wash or machine wash on a gentle cycle with cold water and mild detergent. Air dry only. Do

not bleach or iron.

5.2. Weather Resistance

The swing chair features a weather-resistant design, offering sun-protective and waterproof properties for the canopy fabric.



Image 4: Depiction of the swing chair's weather resistance, highlighting its sun-protective and waterproof canopy material.

5.3. Storage

During prolonged periods of non-use or severe weather, it is recommended to store the cushions and canopy indoors to protect them from damage and prolong their lifespan.

6. TROUBLESHOOTING

If you encounter any issues with your swing chair, please refer to the following common solutions:

- **Wobbling or Instability:** Check all bolts and nuts to ensure they are securely tightened. Ensure the swing is placed on a level surface.
- **Squeaking Noise:** Apply a small amount of lubricant to the spring hooks or any moving metal parts.
- **Canopy Not Holding Position:** Ensure the adjustment knobs are fully tightened after setting the desired angle.

For issues not resolved by these steps, please contact customer support.

7. SPECIFICATIONS

Feature	Specification
Model Number	OP70493
Overall Dimensions (L x W x H)	55.5" x 46.5" x 60.5" (141 cm x 118 cm x 154 cm)
Seat Height	17.72" (45 cm)
Weight Capacity	390 lbs (177 kg)
Seating Capacity	2 Persons
Frame Material	Powder-Coated Steel
Canopy/Cushion Material	Polyester, Cotton
Adjustable Canopy Angle	0-45 degrees
Product Weight	32 lbs (14.5 kg)
UPC	685764491488



Image 5: Detailed dimensional diagram of the swing chair, including overall length, width, height, and specific seat measurements.

8. WARRANTY INFORMATION

This product comes with a limited manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. Keep your proof of purchase for any warranty claims.

9. CUSTOMER SUPPORT

For further assistance, missing parts, or questions regarding your SILKYDRY 2-Person Outdoor Patio Swing Chair, please contact the retailer or manufacturer's customer service department. Have your model number (OP70493) and proof of purchase ready when contacting support.

