



[Manuals.plus](#) /

› [Music Sound](#) /

› Music Sound SHINY Wireless Over-Ear Headphones User Manual

## Music Sound BTHEADBMSBASICFANB

# Music Sound SHINY Wireless Over-Ear Headphones User Manual

Model: BTHEADBMSBASICFANB

## 1. INTRODUCTION

---

Welcome to your Music Sound SHINY Wireless Over-Ear Headphones. These headphones are designed to provide an immersive audio experience with wireless convenience and comfortable wear. This manual will guide you through the setup, operation, and maintenance of your new headphones.



Image: Front view of the Music Sound SHINY Wireless Over-Ear Headphones in blue.

## 2. WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- Music Sound SHINY Wireless Over-Ear Headphones
- Charging Cable (USB)
- 3.5mm Audio Cable

- User Manual (this document)

### 3. PRODUCT OVERVIEW AND CONTROLS

---

Familiarize yourself with the various parts and controls of your headphones.





Image: Side view of the Music Sound SHINY Wireless Over-Ear Headphones, highlighting the earcups and headband. The headphones feature an adjustable headband and padded earcups for comfort. All primary controls are located directly on the earcup for easy access.

## KEYPAD CONTROL

directly on your headphone



Image: Close-up view of the earcup showing the integrated control buttons for managing music and calls.

## Control Functions:

- **Power Button:** Press and hold to turn the headphones on or off.
- **Volume Up/Next Track:** Short press for volume up, long press for next track.
- **Volume Down/Previous Track:** Short press for volume down, long press for previous track.
- **Multi-function Button (Play/Pause/Call):** Single press to play/pause music or answer/end calls. Long press to reject a call.
- **Microphone:** Integrated for hands-free calls.
- **3.5mm Audio Jack:** For wired connection.
- **Charging Port:** For connecting the charging cable.

## 4. SETUP

---

### 4.1. Charging the Headphones

1. Connect the charging cable to the charging port on the headphones.
2. Connect the other end of the charging cable to a USB power source (e.g., computer USB port, USB wall adapter).
3. The LED indicator will illuminate during charging and change color or turn off when fully charged.
4. A full charge provides up to 14 hours of playtime.

### 4.2. Powering On/Off

- **To Power On:** Press and hold the Power button until the LED indicator flashes.
- **To Power Off:** Press and hold the Power button until the LED indicator turns off.

### 4.3. Bluetooth Pairing

1. Ensure the headphones are fully charged and powered off.
2. Press and hold the Power button for approximately 5-7 seconds until the LED indicator flashes rapidly (usually blue and red alternately), indicating pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "Music Sound SHINY" from the list of found devices.
5. Once paired, the LED indicator will flash slowly or turn solid blue, and you may hear an audible confirmation.
6. The headphones will automatically attempt to reconnect to the last paired device when powered on.

## 5. OPERATING THE HEADPHONES

---

### 5.1. Music Playback

- **Play/Pause:** Press the Multi-function button once.
- **Next Track:** Long press the Volume Up button.
- **Previous Track:** Long press the Volume Down button.
- **Volume Up:** Short press the Volume Up button.
- **Volume Down:** Short press the Volume Down button.

### 5.2. Call Management

- **Answer/End Call:** Press the Multi-function button once.

- **Reject Call:** Long press the Multi-function button.

### 5.3. Wired Mode

To use the headphones in wired mode:

1. Ensure the headphones are powered off.
2. Connect one end of the 3.5mm audio cable to the headphone's 3.5mm jack.
3. Connect the other end to your audio source's 3.5mm audio output.
4. In wired mode, the headphone's battery is not used, and controls on the headphones may be limited depending on the audio source.

### 5.4. Adjusting Fit

The headband is adjustable. Extend or retract the earcups to achieve a comfortable and secure fit over your ears. The around-ear design and padded material ensure comfort even during long listening sessions.

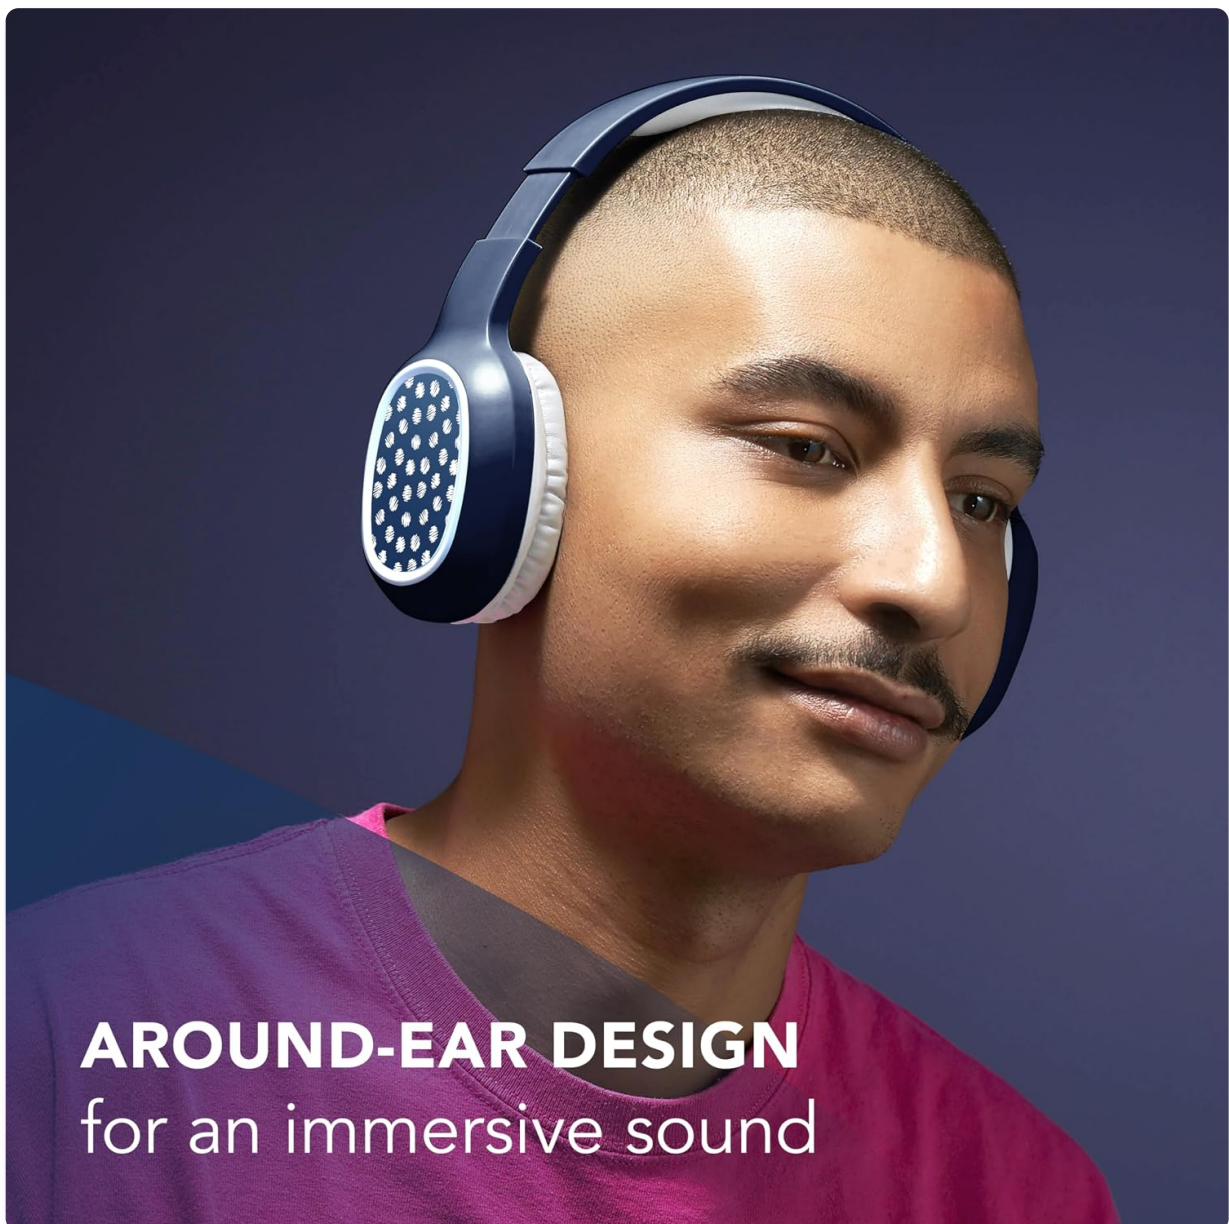


Image: A person wearing the Music Sound SHINY headphones, illustrating the comfortable around-ear design.

## 6. MAINTENANCE

---

## 6.1. Cleaning

- Wipe the headphones with a soft, dry cloth.
- Do not use abrasive cleaners, alcohol, or chemical solvents.
- Avoid getting moisture into any openings.

## 6.2. Storage

- Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid placing heavy objects on the headphones.

## 6.3. Battery Care

- To prolong battery life, charge the headphones regularly, even if not used frequently.
- Avoid fully discharging the battery for extended periods.

## 7. TROUBLESHOOTING

If you encounter any issues with your headphones, please refer to the following common problems and solutions:

Problem	Possible Solution
Headphones do not power on.	Ensure the headphones are charged. Connect them to a power source and try again.
Cannot pair with a device.	Make sure the headphones are in pairing mode (LED flashing rapidly). Turn off Bluetooth on other nearby devices. Restart your device's Bluetooth.
No sound or low volume.	Check the volume levels on both the headphones and your connected device. Ensure the headphones are properly paired. If using wired mode, check cable connection.
Poor sound quality.	Move closer to your connected device to avoid interference. Ensure there are no obstacles between the headphones and the device. Try disconnecting and re-pairing.
Microphone not working.	Ensure the headphones are properly connected and selected as the audio input device on your phone/computer.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Music Sound
Model Name	BTHEADBMSBASICFANB
Color	Blue
Connectivity Technology	Wireless (Bluetooth)
Ear Placement	Over-ear, Around-ear
Headphone Jack	3.5 mm

Feature	Detail
Playtime	Up to 14 hours
Frequency Range	20 Hz - 20,000 Hz
Control Type	Volume control, Touch
Components Included	Headphones, Charging Cable, 3.5mm Audio Cable, User Manual
Material	Padded material
Compatible Devices	Mobile phones

## 9. WARRANTY INFORMATION

---

Your Music Sound SHINY Wireless Over-Ear Headphones come with a **2-year manufacturer's warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

Please retain your proof of purchase for warranty claims.

## 10. SUPPORT

---

If you require further assistance or have questions not covered in this manual, please contact Music Sound customer support or the retailer where you purchased the product.

For more information, you may visit the official Music Sound website or refer to the contact details provided with your product packaging.