

[Manuals.plus](#) /

› [Ardes](#) /

› ARDES AR4P16 TATANKA 2000W Ceramic Oscillating Fan Heater User Manual

Ardes AR4P16

ARDES AR4P16 TATANKA 2000W Ceramic Oscillating Fan Heater User Manual

1. INTRODUCTION


Thank you for choosing the ARDES AR4P16 TATANKA Ceramic Oscillating Fan Heater. This manual provides essential information for the safe and efficient use of your new appliance. Please read these instructions carefully before use and retain them for future reference.

Important Safety Instructions

- Always place the heater on a firm, level surface.
- Do not cover the heater or block air inlets/outlets.
- Keep flammable materials at least 1 meter away from the heater.
- Do not use in bathrooms, laundry areas, or similar wet locations.
- Unplug the heater when not in use or before cleaning.
- Do not operate with a damaged cord or plug.
- Supervise children and pets near the appliance.

2. PRODUCT OVERVIEW

The ARDES AR4P16 TATANKA is a 2000W ceramic tower fan heater designed for efficient and comfortable heating. It features automatic oscillation, touch controls, an LCD display, and built-in safety mechanisms.

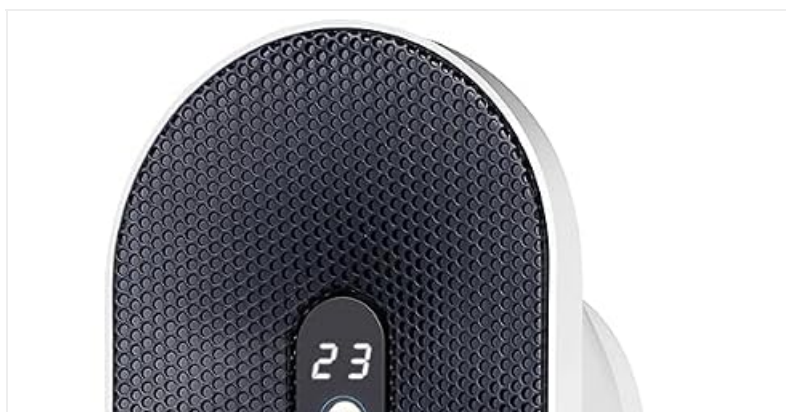

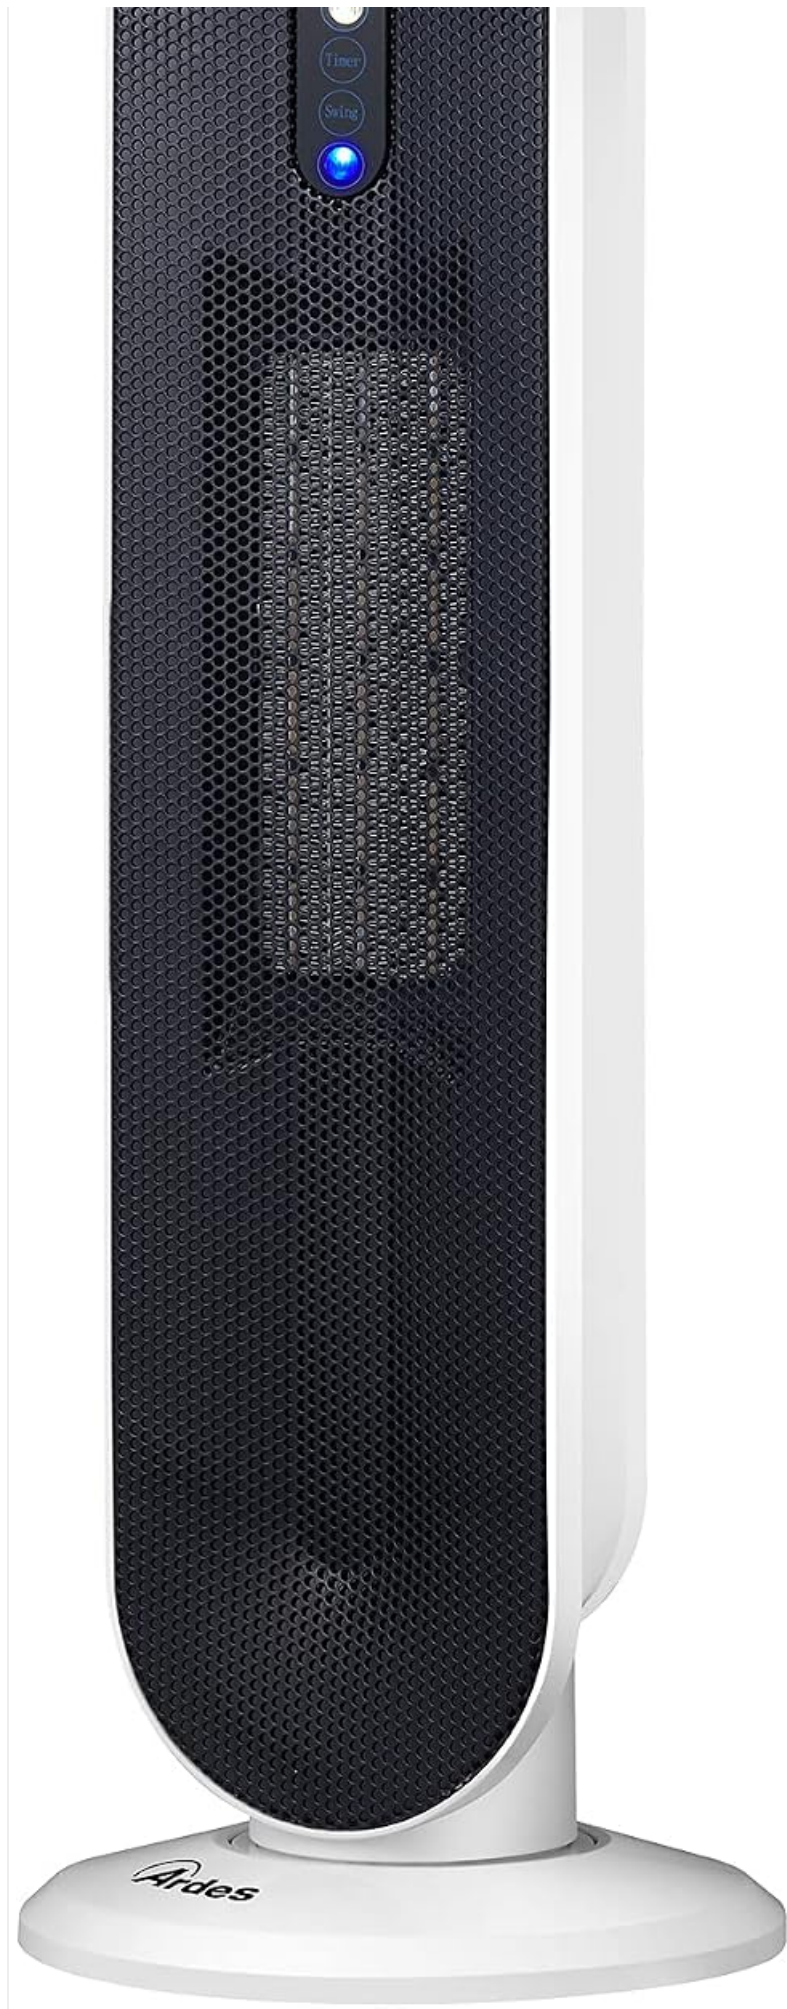


Figure 1: ARDES AR4P16 TATANKA Ceramic Oscillating Fan Heater, front view. This image shows the sleek, tall design of the

heater with its black grille and white base.



Figure 2: Dimensions of the ARDES AR4P16 TATANKA Ceramic Oscillating Fan Heater. The image illustrates the heater's height of 63.5 cm and a base measuring 21 cm by 21 cm.

Key Features:

- **Ceramic Heating Technology:** Provides faster and more uniform heating.

- **Oscillation Function:** Distributes warm air widely across the room (up to 60 m³).
- **Adjustable Power Levels:** Eco and Comfort modes for varied heating needs.
- **12-Hour Timer:** With automatic shut-off for convenience and energy saving.
- **Touch Controls & LCD Display:** For easy temperature and setting management.
- **Remote Control:** For convenient operation from a distance.
- **Safety Features:** Overheat protection and anti-tip system.
- **Portable Design:** Integrated handle for easy relocation.

3. CONTROLS AND DISPLAY

The heater features an intuitive control panel and comes with a remote control for ease of use.



Figure 3: Control panel and LCD display. This close-up shows the LCD display indicating '21' (likely the set temperature) and touch buttons for 'Temp' and 'Timer'.



Figure 4: Remote control for the ARDES AR4P16 TATANKA heater. The remote includes buttons for power, oscillation (swing), heat settings, temperature adjustment, timer, and a child lock function.

4. SETUP

Unpacking

- Carefully remove the heater from its packaging.
- Remove all packaging materials, including any protective films or stickers.
- Inspect the heater for any signs of damage. If damaged, do not use and contact customer support.

Placement

- Place the heater on a stable, flat, and heat-resistant surface.
- Ensure there is at least 1 meter of clear space around the heater from walls, furniture, curtains, and other flammable objects.
- Do not place the heater directly below a power outlet.

- Avoid placing the heater in areas with high humidity or direct water exposure.

Power Connection

- Ensure the heater is switched off before plugging it into a power outlet.
- Plug the power cord into a grounded electrical outlet with the correct voltage (220-240V, 50Hz).
- Do not use extension cords unless absolutely necessary, and ensure they are rated for the heater's power consumption (2000W).

5. OPERATION

Power On/Off

- Press the Power button on the control panel or remote control to turn the heater on or off.

Temperature Adjustment (Thermostat Function)

- Use the 'Temp' button on the control panel or remote to set your desired room temperature. The LCD display will show the set temperature.
- The heater will automatically turn on or off to maintain the set temperature.

Power Levels

- Select between 'Eco' and 'Comfort' power levels using the appropriate button on the control panel or remote control.
- **Eco Mode:** Provides lower heat output for energy saving.
- **Comfort Mode:** Provides maximum heat output (up to 2000W) for rapid heating.

Oscillation Function

- Press the 'Swing' or oscillation button on the control panel or remote control to activate the oscillation feature.
- The heater will rotate from side to side, distributing warm air evenly across a wider area.



Figure 5: Oscillation function for uniform heat distribution. This diagram illustrates the wide oscillation range of the heater, showing how it effectively spreads warmth throughout a room.

Timer Function

- Press the 'Timer' button on the control panel or remote control to set the desired operating time (up to 12 hours).
- The heater will automatically shut off once the set time has elapsed.

6. SAFETY FEATURES

The ARDES AR4P16 TATANKA heater is equipped with advanced safety features for your protection.

Anti-Tip Protection

- The heater will automatically shut off if it is accidentally knocked over or tilted.
- To resume operation, place the heater upright on a stable surface and turn it back on.

SICURO SISTEMA CONTRO IL RIBALTAMENTO E IL SURRISCALDAMENTO

ON



OFF

Figure 6: Anti-tip safety system. This visual demonstrates how the heater automatically powers off when it is tilted or falls over, enhancing user safety.

Overheat Protection

- If the heater's internal components reach an unsafe temperature, the overheat protection system will automatically shut off the unit.
- If this occurs, unplug the heater, allow it to cool down for at least 30 minutes, and check for any obstructions to the air inlets or outlets.
- If the problem persists after clearing obstructions and cooling, contact customer support.

7. MAINTENANCE

Cleaning

- Always unplug the heater and allow it to cool completely before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

- Use a vacuum cleaner with a brush attachment to gently remove dust from the air inlets and outlets.
- Never immerse the heater in water or any other liquid.

Storage

- If storing the heater for an extended period, clean it thoroughly and place it back in its original packaging or a protective cover.
- Store in a cool, dry place, away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

If you encounter any issues with your heater, please refer to the following common problems and solutions:

- **Heater does not turn on:**
 - Ensure the power cord is securely plugged into a working outlet.
 - Check if the main power switch (if present) is in the 'ON' position.
 - Verify that the anti-tip switch is engaged (heater is upright on a flat surface).
 - Check for tripped circuit breakers or blown fuses in your electrical panel.
- **Heater stops working unexpectedly:**
 - The overheat protection may have activated. Unplug, allow to cool, and check for obstructions.
 - The anti-tip switch may have been triggered. Ensure the heater is upright.
 - The timer may have reached its set duration.
- **Insufficient heat output:**
 - Ensure the heater is set to 'Comfort' mode for maximum power.
 - Check if the set temperature is higher than the ambient room temperature.
 - Ensure air inlets and outlets are not blocked.

If these steps do not resolve the issue, please contact customer support.

9. SPECIFICATIONS

Feature	Specification
Brand	Ardes
Model Number	AR4P16
Color	Black/White
Product Dimensions (L x W x H)	21 x 21 x 63.5 cm
Item Weight	2.72 Kilograms
Power Output	2000W (Max)
Number of Speeds	2 (Eco, Comfort)
Features	Oscillating, Portable, Silent, Thermostat, Timer, Remote Control
ASIN	B095YQTN3T

Feature	Specification
Manufacturer	Ardes
Country of Origin	China

10. WARRANTY AND SUPPORT

ARDES products are manufactured and selected in strict compliance with current standards and quality parameters. For information regarding warranty, please refer to the warranty card included with your purchase or contact your retailer.

Customer Support

For any questions, technical assistance, or service requests, please contact ARDES customer support through their official website or the contact information provided with your product documentation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B095YQTN3T>

More documents and user manuals: <https://manuals.plus/>