



Manuals.plus /

› **GoodHome /**

› GoodHome Oberon 3370 Water-Resistant Metal Garden Chair User Manual

GoodHome Oberon

GoodHome Oberon 3370 Water-Resistant Metal Garden Chair User Manual

Model: Oberon | Brand: GoodHome

INTRODUCTION

This manual provides essential information for the safe and effective use of your GoodHome Oberon 3370 Water-Resistant Metal Garden Chair. Please read these instructions carefully before using the product and retain them for future reference.

The Oberon metal chair is designed for outdoor dining and is compatible with the Oberon range. It features a woven cord for comfort and an appealing look, and is stackable for easy storage.

PRODUCT OVERVIEW



Figure 1: The GoodHome Oberon 3370 Garden Chair, showcasing its design and suitability for outdoor environments.



Figure 2: A detailed view of the chair's woven seat texture, highlighting the material and construction.

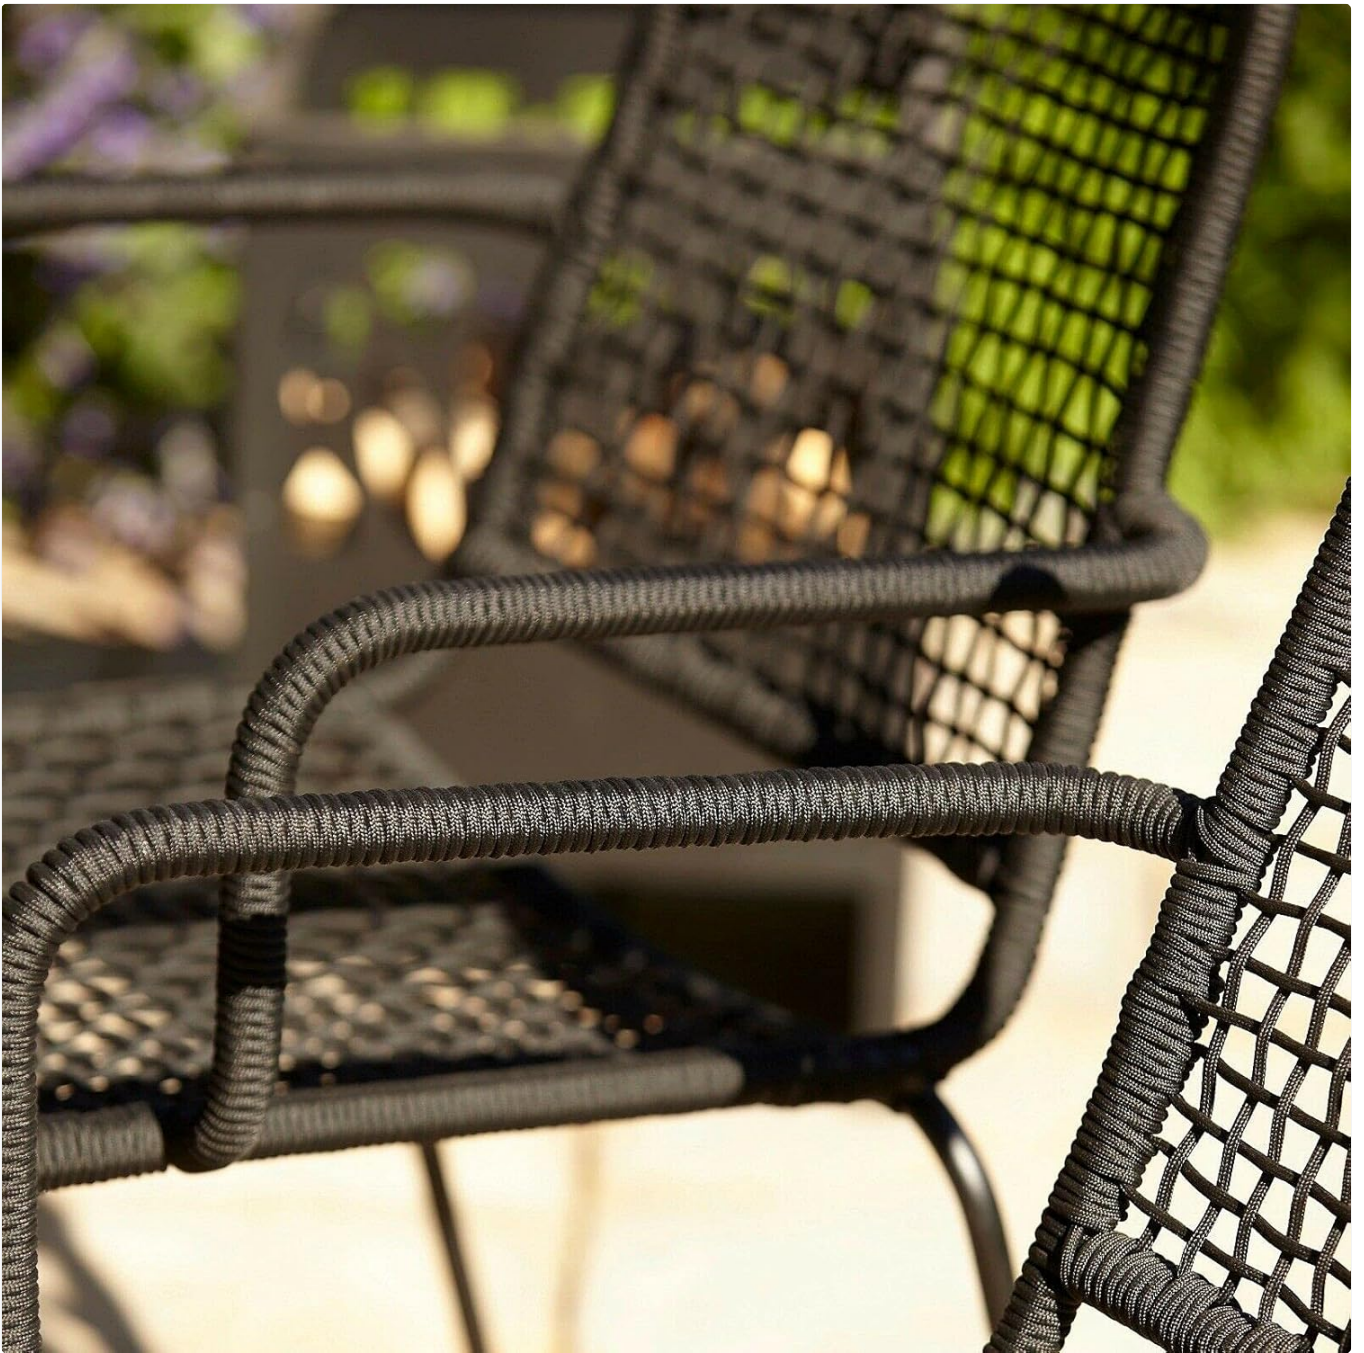


Figure 3: Close-up of the chair's armrest, showing the integrated woven design for comfort.



Figure 4: Multiple GoodHome Oberon 3370 Garden Chairs demonstrating their stackable design for convenient storage.

SETUP

The GoodHome Oberon 3370 Garden Chair requires no assembly. It is ready for use directly out of the packaging.

1. **Unpacking:** Carefully remove the chair from its packaging. Ensure all packing materials are removed.
2. **Placement:** Place the chair on a stable, level surface in your desired outdoor location.

OPERATING INSTRUCTIONS

The Oberon garden chair is designed for comfortable seating in outdoor environments.

- **Seating:** Use the chair for dining or relaxation in your garden or patio area.
- **Stacking for Storage:** For convenient storage, multiple Oberon chairs can be stacked on top of each other. Carefully lift each chair and place it securely on top of another, ensuring stability.

MAINTENANCE

Proper maintenance will extend the life and appearance of your garden chair.

- **Cleaning:**

- Clean the chair with mild soap and water.
- Wipe the chair with a damp cloth to remove dirt and debris.
- *Do not use bleach, acidic cleaners, or abrasive cleaners.* These can damage the chair's finish and material.
- *Do not use a high-pressure cleaner* to clean this product, as it may cause damage.

- **Storage:** When not in use for extended periods, especially during harsh weather conditions, store the chair in a dry, protected area. Its stackable design facilitates easy storage.

TROUBLESHOOTING

This section addresses common issues you might encounter with your garden chair.

- **Instability:** Ensure the chair is placed on a flat, stable surface. Uneven ground can cause wobbling.
- **Discoloration/Wear:** While water-resistant, prolonged exposure to extreme weather conditions can affect the material. Follow maintenance guidelines to minimize wear.

SPECIFICATIONS

| Feature | Detail |
|--------------------------------|--|
| Brand | GoodHome |
| Model Number | Oberon |
| Color | Black |
| Product Dimensions (L x W x H) | 40.8 x 58 x 83 cm |
| Item Weight | 5.5 Kilograms |
| Special Feature | Water-Resistant |
| Care Instructions | Clean with mild soap and water |
| Material | Aluminum (Frame), Woven Cord (Seat/Back) |
| Assembly Required | No |
| Manufactured In | Vietnam |

WARRANTY AND SUPPORT

Information regarding specific warranty terms for the GoodHome Oberon 3370 Garden Chair is not provided in the product details. Please refer to your purchase receipt or contact the retailer for warranty details.

For product support or inquiries, please contact GoodHome customer service through their official website or the retailer from whom you purchased the product.

