#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- AireMax /
- > AireMax Portable Air Conditioner and Heater User Manual

#### AireMax APE514H

# AireMax Portable Air Conditioner and Heater User Manual

Model: APE514H

## **PRODUCT OVERVIEW**

The AireMax APE514H is a versatile portable air conditioner and heater designed to provide optimal climate control for rooms up to 500 square feet. This unit offers four operating modes: Cool, Fan, Heat, and Dry, ensuring comfort in various conditions. It features three fan speeds, auto-swing top louvers for even air distribution, and a dehumidification capacity of up to 78 pints per day.

Equipped with convenient rolling casters and integrated side handles, the APE514H is easy to move between rooms. The unit includes an adjustable mobile window installation kit suitable for both vertical and horizontal windows, simplifying setup without the need for professional installation.



# **KEY FEATURES**

- 4 Operating Modes: Cool, Fan, Heat, and Dry for comprehensive climate control.
- Efficient Dehumidification: Removes up to 78 pints of moisture per day.
- Portability: Features four rolling casters and side handles for easy movement.
- Easy Installation: Includes an adjustable window installation kit for quick setup.
- **Dual Filtration System:** Two washable filters capture pet hair, dust, and other particles, ensuring efficient operation and cleaner air.
- **User-Friendly Controls:** Soft-white LED display, top-mounted electronic controls, and a multifunction remote control for convenient operation.

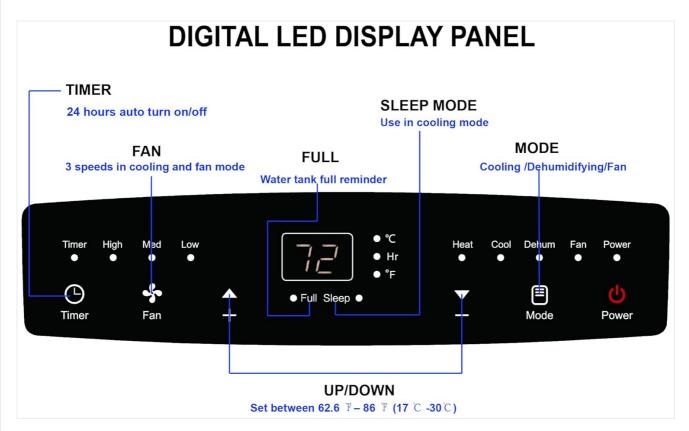


Figure 2: Digital LED Display Panel with controls for Timer, Fan, Full indicator, Temperature Up/Down, Mode, and Power.

### SETUP AND INSTALLATION

### **Unpacking**

Carefully remove the unit from its packaging. Ensure all components are present:

- Portable Air Conditioner Unit
- Exhaust Window Installation Kit
- Remote Control (with batteries)
- User Manual (this document)

#### **Placement**

Place the unit on a flat, stable surface near a window. Ensure there is at least 20 inches of space around the unit for proper airflow.

## **Window Kit Installation**

- 1. Attach the exhaust hose to the unit's exhaust connector.
- 2. Assemble the adjustable window panel. The kit is designed for both vertical and horizontal windows.
- 3. Insert the window panel into the window opening and extend it to fit snugly.
- 4. Connect the other end of the exhaust hose to the window panel. Ensure a tight seal to prevent air leakage.



Figure 3: Rear view of the unit showing the exhaust hose connection.



Figure 4: Side view illustrating the exhaust hose extended towards a window.

# **OPERATING INSTRUCTIONS**

# **Control Panel and Remote Control**

The unit can be operated using the top-mounted electronic control panel or the included remote control. The soft-white LED display shows the current settings.





Figure 5: Remote control for convenient operation.

# **Operating Modes**

• Cool Mode: For cooling the room. Adjust temperature using the Up/Down buttons.

- Fan Mode: Circulates air without cooling. Select from 3 fan speeds (Low, Med, High).
- **Heat Mode:** For heating the room. Adjust temperature using the Up/Down buttons.
- Dry Mode (Dehumidify): Removes moisture from the air.

### **Timer Function**

Set the 24-hour auto turn on/off timer to program the unit's operation according to your schedule.

## **Temperature Setting**

The temperature can be set between 62.6°F (17°C) and 86°F (30°C).

## **M**AINTENANCE

# **Filter Cleaning**

The unit is equipped with dual filters to prevent clogging and maintain efficiency. It is recommended to wash and dry the filters periodically.

- 1. Turn off and unplug the unit before cleaning.
- 2. Locate and remove the dual filter frames from the back of the unit.
- 3. Wash the filters with warm, soapy water. Rinse thoroughly.
- 4. Allow the filters to air dry completely before reinserting them into the unit.

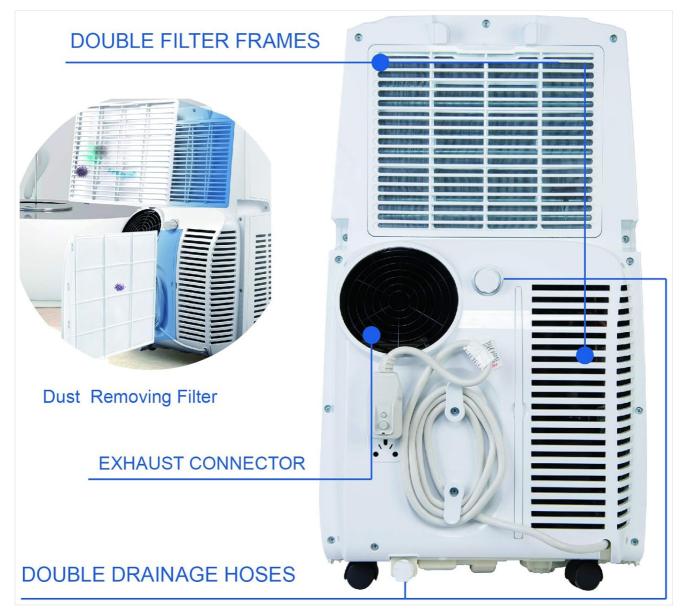


Figure 6: Rear view highlighting the dual filter frames and exhaust connector.

# **Water Drainage**

The unit features auto-evaporation for most conditions. However, in high humidity environments, the internal water tank may fill up, indicated by a "FULL" reminder on the LED display. When this occurs, the unit will stop operating until drained.

- Place a shallow pan or bucket under the drainage outlet at the bottom rear of the unit.
- Remove the drain plug to allow water to flow out.
- Replace the drain plug once the tank is empty.





Figure 7: Rear view showing the location of the drainage hoses.

# **TROUBLESHOOTING**

If you encounter issues with your AireMax APE514H, please refer to the common problems and solutions below before contacting customer support.

Problem	Possible Cause	Solution
Unit does not turn on.	No power, power cord unplugged, circuit breaker tripped.	Ensure unit is plugged into a working outlet. Check circuit breaker.
Unit not cooling/heating effectively.	Dirty air filters, blocked air intake/exhaust, room size too large, windows/doors open.	Clean air filters. Ensure no obstructions. Close windows/doors. Verify unit capacity for room size.
"FULL" indicator is on.	Water tank is full.	Drain the water tank as per maintenance instructions.
Unit is noisy.	Unit not on a level surface, internal components vibrating.	Place unit on a flat, level surface. Check for loose parts. (Note: 60 dB is normal operating noise).

# **S**PECIFICATIONS

Feature	Detail
Model Number	APE514H
Product Dimensions (D x W x H)	15.1" x 16.9" x 29.2"
Item Weight	70 lbs
Cooling Capacity	14,000 BTU
Cover Area	Up to 500 sq. ft.
Hose Size	11" - 59" (adjustable)
Temperature Range	62.6°F - 86°F (17°C - 30°C)
Voltage	115V/60Hz
Noise Level	60 dB
Dehumidifying Capacity	78 pints/day
Drainage	Auto-evaporation or manual
Filter Type	Mesh (Dual)
Controls	Electronic with LED display, Remote Control



Figure 8: Product dimensions (Depth, Width, Height).

# DETAILED PARAMETERS Model:APE514H 75 Cooling capacity...... 14000 BTU Estimated cooling area..... 500 sq.ft max Power supply...... 115V/60Hz Rated power consumption.....1350W/11.9A Dehumidifying capacity...... 78pints/day **Drainage**...... Auto-evaporation or manual 29.2" Air louvers..... Auto 1-way directional Noise level (dBA).....≤60dBA Unit Weight...... 70 lb Warranty...... 1 year \_\_15.1"\_\_ —16.9°,\_

Figure 9: Detailed technical parameters of the unit.

# Find the correct cooling capacity for your room

Find the corresponding cooling capacity that matches your desired area (square footage). Cooling capacity shown in British thermal units (BTU) per hour.

Area to be cooled (SQ. FT.)	Capacity Needed (BTU)
150 SQ. FT.	5,000
UP TO 250 SQ. FT.	6,000
UP TO 300 SQ. FT.	7,000
UP TO 350 SQ. FT.	8,000
UP TO 400 SQ. FT.	9,000
UP TO 450 SQ. FT.	10,000
UP TO 550 SQ. FT.	12,000
UP TO 700 SQ. FT.	14,000
UP TO 1000 SQ. FT.	18,000
UP TO 1200 SQ. FT.	21,000
UP TO 1400 SQ. FT.	23,000
UP TO 1500 SQ. FT.	24,000

# Adjustment as necessary

# Make any adjustments for the following circumstance:

- If the room is heavily shaded, reduce capacity by 10 percent.
- ii. If the room is very sunny, increase capacity by 10 percent.
- iii. If more than two people regularly occupy the room, add 600 BTUs for each additional person.
- iv. If the unit is used in a kitchen, increase capacity by 4,000 BTUs.

Figure 10: Guide to finding the correct cooling capacity for your room, including adjustments for specific conditions.

## WARRANTY AND SUPPORT

The AireMax APE514H Portable Air Conditioner and Heater comes with a **1-year warranty** covering parts and labor from the date of purchase.

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact AireMax customer support. Refer to the product packaging or the official AireMax website for the most current contact information.

Please have your model number (APE514H) and proof of purchase ready when contacting support.

© 2024 AireMax. All rights reserved.

#### Related Documents - APE514H





Thank you vary much for selecting this new modes of Proteins Air Conditioner, please need this like and Care Named wards of referent resisting and along the againsts. Please have the Use and Care Manual prepariy for

## AIREMAX APE514H Portable Air Conditioner Use and Care Manual

Comprehensive use and care manual for the AIREMAX APE514H portable air conditioner, covering safety instructions, operation, maintenance, troubleshooting, and warranty information.



#### AIREMAX Warranty Terms & Conditions - Official Product Information

Detailed warranty terms and conditions for AIREMAX products, including how to make a claim, warranty exclusions, and important safety warnings. Visit airemaxusa.com for support.



#### AIREMAX APA112C Portable Air-conditioner: Use and Care Manual

Comprehensive use and care manual for the AIREMAX APA112C portable air conditioner, covering setup, operation, maintenance, troubleshooting, and warranty information.



#### Airemax APL06CE Portable Air Conditioner User Manual

Comprehensive user manual for the Airemax APL06CE portable air conditioner, covering safety instructions, installation, operation, maintenance, troubleshooting, and warranty.



#### Airemax APA112C Portable Air Conditioner Use and Care Manual

Comprehensive guide for the Airemax APA112C portable air conditioner. Learn about features, operation, installation, maintenance, troubleshooting, and warranty information for optimal performance.



# AIREMAX APO108C Portable Air Conditioner Use and Care Manual

This manual provides comprehensive instructions for the AIREMAX APO108C portable air conditioner, covering safety guidelines, operation modes, installation, maintenance, troubleshooting, and warranty information.