Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- ZOKOP /
- > ZOKOP HD-1857-A Electric Glass Kettle User Manual

ZOKOP HD-1857-A

ZOKOP HD-1857-A Electric Glass Kettle User Manual

Model: HD-1857-A

INTRODUCTION

Thank you for purchasing the ZOKOP HD-1857-A Electric Glass Kettle. This manual provides important information regarding the safe operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- · Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or the kettle base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Extreme caution must be used when moving an appliance containing hot water.

- The kettle is only to be used with the stand provided.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

PRODUCT OVERVIEW

The ZOKOP HD-1857-A is a 1.8-liter electric glass kettle designed for efficient water boiling. It features a durable glass body, a comfortable handle, and a power base.



Figure 1: ZOKOP HD-1857-A Electric Glass Kettle. This image shows the kettle filled with water, illustrating the water level markings and the overall design including the handle, lid, and power base.

Components:

- Glass Kettle Body: Transparent body with water level indicators (MIN 0.5L to MAX 1.8L).
- Lid: Hinged lid for easy filling and cleaning.
- Handle: Ergonomically designed for comfortable pouring.
- On/Off Switch: Located on the handle for easy operation.
- Power Base: 360-degree rotational base with cord storage.
- Heating Element: Concealed stainless steel heating element.

SETUP AND FIRST USE

- 1. **Unpacking:** Carefully remove the kettle and all accessories from the packaging. Retain packaging for future transport or storage.
- 2. **Placement:** Place the power base on a dry, flat, stable, and heat-resistant surface, away from the edge of the countertop.
- 3. **Initial Cleaning:** Before first use, fill the kettle with clean water to the MAX level. Boil the water, then discard it. Repeat this process two to three times to remove any manufacturing residues.
- 4. **Power Connection:** Ensure the kettle is correctly seated on its power base. Plug the power cord into a suitable 220V UK wall outlet.

OPERATING INSTRUCTIONS

- 1. **Filling the Kettle:** Open the lid and fill the kettle with the desired amount of fresh water. Do not fill below the MIN (0.5L) mark or above the MAX (1.8L) mark. Overfilling may cause boiling water to spill out. Close the lid securely.
- 2. Placing on Base: Place the kettle firmly onto its power base.
- 3. **Switching On:** Press the On/Off switch downwards. The indicator light will illuminate, indicating that the kettle is heating.
- 4. **Boiling:** The kettle will automatically switch off once the water has boiled. The indicator light will turn off.
- 5. **Pouring:** Carefully lift the kettle from the power base and pour the hot water. Exercise caution as the kettle body and steam will be hot.
- 6. **Re-boiling:** If the kettle needs to be re-boiled immediately, wait for 10-20 seconds to allow the internal thermostat to reset.



Figure 2: Kettle in operation. This image shows the ZOKOP kettle with water actively boiling, highlighted by the blue LED illumination, indicating the heating process.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your kettle.

- 1. **Before Cleaning:** Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
- 2. **Exterior Cleaning:** Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- 3. **Interior Cleaning (Hand Wash):** The interior of the kettle can be cleaned by hand. Open the lid and gently wipe the inside with a soft sponge and mild detergent. Rinse thoroughly with clean water.
- 4. **Descaling:** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas.
 - $\circ\;$ Fill the kettle with a mixture of one part white vinegar and two parts water.

- Boil the mixture and let it stand for at least 30 minutes, or longer for heavy scale.
- Discard the mixture and rinse the kettle thoroughly several times with fresh water.
- Alternatively, use a commercial descaling solution and follow its instructions.
- 5. **Storage:** When not in use, store the kettle in a dry place. The power cord can be wrapped around the base for neat storage.



Figure 3: Cleaning the kettle interior. This image demonstrates a hand wiping the inside of the glass kettle, emphasizing the ease of access for manual cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not switch on.	No power supply. Kettle not properly seated on base. On/Off switch not pressed.	Check power outlet. Ensure kettle is correctly placed on the power base. Press the On/Off switch firmly.

Problem	Possible Cause	Solution
Kettle switches off before boiling.	Limescale buildup. Kettle overfilled.	Descale the kettle (refer to Maintenance section). Do not fill above the MAX mark.
Water tastes unusual.	New kettle residue. Limescale buildup.	Perform initial cleaning (boil and discard water several times). Descale the kettle.
Steam escaping from lid.	Lid not closed properly.	Ensure the lid is securely closed before boiling.

SPECIFICATIONS

Model: HD-1857-A
Brand: ZOKOP
Capacity: 1.8 Litres
Voltage: 220V
Power: 2200W

• Material: Glass, Stainless Steel, Plastic

Special Feature: PortablePlug Type: UK Plug

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer where the product was purchased or contact ZOKOP customer service. Please have your model number (HD-1857-A) and purchase date available when contacting support.

Note: The warranty does not cover damage caused by misuse, neglect, or failure to follow the instructions in this manual.

© 2023 ZOKOP. All rights reserved.

Related Documents - HD-1857-A



Orava VK-4018 Glass Electric Kettle User Manual and Warranty

Comprehensive user manual and warranty information for the Orava VK-4018 glass electric kettle, covering safety instructions, operation, maintenance, and technical specifications.



Xiaomi Smart Kettle 2 Pro User Manual

User manual for the Xiaomi Smart Kettle 2 Pro, detailing its features, operation, safety precautions, troubleshooting, and warranty information.

Xiaomi Smart Kettle 2 Pro User Manual - Features, Operation, and Specifications

Comprehensive user manual for the Xiaomi Smart Kettle 2 Pro, covering safety precautions, product overview, operating instructions, app connectivity, cleaning, troubleshooting, specifications, and warranty information. This guide helps users understand and safely operate their smart kettle.

INDOME DESCRIPT CARRE DE UNE MEMORAL 1 - 1 TOMONISTICATION CONTROLLE DE UN TOMONISTICATION CONTROLLE TOMONISTICATION CONTROLLE TOMONISTICATION CONTROLLE TOMONISTICATION CONTROLLE TOMONISTICATION CONTROLLE TOMONISTICATION TOMONISTICATION

Xiaomi Electric Kettle 2 Lite User Manual

User manual for the Xiaomi Electric Kettle 2 Lite, providing instructions on usage, cleaning, maintenance, troubleshooting, and specifications. Learn how to safely operate and care for your Xiaomi electric kettle.

XIBOMI Benth tellar 2.10s (see Anius 1 - 1)

**Previolation inchassivas invertigouluses 25mm (Section Holde 2.10s - 3

**Line - 3

**Line

Xiaomi Electric Kettle 2 Lite User Manual

User manual for the Xiaomi Electric Kettle 2 Lite, providing instructions on usage, cleaning, maintenance, troubleshooting, and specifications. Learn how to safely operate and care for your Xiaomi electric kettle.

XIBOMI Xiaomi Gechic Kettle S1 Uthrafelská příručk

Xiaomi Electric Kettle S1 User Manual

User manual for the Xiaomi Electric Kettle S1, providing safety precautions, product overview, usage instructions, cleaning and maintenance guidelines, troubleshooting, and specifications.