

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [AIKE](#) /

› [AIKE 9.5 oz. Rechargeable Automatic Sensor Liquid Soap Dispenser Pump User Manual](#)

AIKE AK1333

AIKE 9.5 oz. Rechargeable Automatic Sensor Liquid Soap Dispenser Pump

Model: AK1333 Brushed Nickel

INTRODUCTION

Thank you for choosing the AIKE AK1333 Automatic Sensor Liquid Soap Dispenser. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new dispenser. Designed for convenience and hygiene, this touch-free dispenser offers precise soap dispensing with adjustable levels.

SAFETY INFORMATION

- Do not immerse the dispenser in water or other liquids.
- Do not use abrasive cleaners or solvents on the dispenser.
- Keep out of reach of children.
- Use only liquid soap. Foaming soap is not recommended as this model is designed for liquid soap.
- Ensure the charging port is dry before connecting the charging cable.
- Do not attempt to disassemble or repair the unit yourself. Contact AIKE support for assistance.

PACKAGE CONTENTS

Verify that all items are present in your package:

- AIKE AK1333 Automatic Sensor Liquid Soap Dispenser (Brushed Stainless Steel)
- Type-C USB Charging Cable
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the components of your AIKE soap dispenser.





Image: Front view of the AIKE AK1333 Automatic Sensor Liquid Soap Dispenser in brushed stainless steel.

Lithium-ion Battery



Image: Close-up view showing the Type-C charging port located on the side of the dispenser, indicating its rechargeable nature.



Image: Diagram illustrating the dimensions of the AIKE AK1333 dispenser: 4.7 inches (L), 3.15 inches (W), and 7.28 inches (H).

SETUP

- Initial Charge:** Before first use, fully charge the dispenser. Connect the provided Type-C charging cable to the port on the back of the dispenser and plug the other end into a USB power source. A full charge typically takes about 7 hours.

Your browser does not support the video tag.

Video: Official AIKE video demonstrating the features of the Stainless Steel Sensor Soap Pump, including charging and refilling.

- Fill with Liquid Soap:** Remove the top cap of the dispenser. Pour liquid soap into the reservoir. This dispenser is designed for liquid soap and will not foam. Do not overfill.

Easy Refilling



Image: Top-down view showing liquid soap being poured into the wide opening of the dispenser for easy refilling.

3. **Replace Cap:** Securely place the top cap back onto the dispenser.
4. **Placement:** Place the dispenser on a flat, stable surface near a sink or desired location.

OPERATING INSTRUCTIONS

1. **Power On/Off:** Press and hold the power button (usually located near the charging port) to turn the dispenser on or off.
2. **Dispense Soap:** Place your hand under the sensor spout. The dispenser will automatically dispense a preset amount of liquid soap. The response time is approximately 0.2 seconds.



Image: A hand positioned under the dispenser spout, receiving a controlled amount of liquid soap, highlighting the 5 adjustable dispense levels.

3. **Adjust Dispense Levels:** The dispenser features 5 adjustable dispense levels. To change the level, short press the power button. The indicator light (white LED on the spout) will flash to indicate the current level:

- 1 flash: Level 1 (least amount)
- 2 flashes: Level 2
- 3 flashes: Level 3
- 4 flashes: Level 4
- 5 flashes: Level 5 (most amount)

After Level 5, pressing the button again will cycle back to Level 1.

MAINTENANCE

- **Cleaning:** Wipe the exterior of the dispenser with a soft, damp cloth. Do not use harsh chemicals or abrasive materials. The stainless steel finish is designed to resist fingerprints and water spots.
- **Refilling:** Refill the dispenser when the soap level is low. Refer to the "Setup" section for refilling instructions.

- Battery Care:** Recharge the dispenser when the battery indicator suggests low power. A single charge can last up to 3 months depending on usage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Dispenser not dispensing soap.	Low battery; empty soap reservoir; sensor obstructed; soap too thick.	Charge the dispenser; refill with liquid soap; clean the sensor area; dilute soap with a small amount of water if too thick.
Soap leaking from the bottom.	Unit may be damaged or improperly sealed.	Ensure the top cap is securely in place. If leaking persists, contact AIKE support.
Dispenser not charging.	Cable not connected properly; faulty cable/adapter; charging port wet.	Ensure cable is fully inserted and dry; try a different USB-A to Type-C cable and adapter; ensure charging port is dry.
Dispensing too much/too little soap.	Dispense level setting is incorrect.	Short press the power button to cycle through the 5 dispense levels until the desired amount is achieved.

SPECIFICATIONS

Feature	Detail
Model	AK1333
Material	Stainless Steel
Color	Brushed Nickel
Capacity	9.5 oz (280 Milliliters)
Dimensions (L x W x H)	4.72" x 3.15" x 7.28"
Weight	1.12 pounds
Battery	1 Lithium Metal battery (included)
Charging Port	Type-C
Dispense Levels	5 adjustable levels
Sensor Response Time	0.2 seconds

WARRANTY AND SUPPORT

AIKE is committed to the quality of its products. For any questions, concerns, or support needs regarding your AK1333 Automatic Sensor Liquid Soap Dispenser, please contact AIKE Support. Refer to the product packaging or the official AIKE website for the most current contact information.

For general inquiries or to explore other AIKE products, visit the [AIKE Store on Amazon](#).

