

Manuals.plus /

› Easytry123 /

› Easytry123 Replacement Remote Control User Manual for Pioneer Car Audio Receivers

## Easytry123 Replacement Remote Control for Pioneer Car Audio Receivers (Various Models)

# Easytry123 Replacement Remote Control User Manual

For Pioneer Car DSP MD CD Receiver Players

Compatible Models: FH-P8900MD/ES, KEH-P7950, KEH-P8850/ES, MEH-P5000, MEH-P5050/ES, MEH-P7150, DEH-P840MP, DEH-P8450MP, DEH-P850MP, DEH-P9400

## INTRODUCTION

---

This manual provides instructions for the Easytry123 replacement infrared remote control designed for various Pioneer Car DSP MD CD Receiver Player models. This remote functions as a direct replacement for your original unit, offering essential control over your car audio system.

## SETUP

---

### 1. Battery Installation

The remote control requires two (2) AAA batteries for operation. Batteries are not included with the remote.

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



*Image Description: The back of the Easytry123 replacement remote control with the battery cover removed, showing the empty battery compartment and the spring contacts for AAA batteries.*

## **2. Compatibility Check**

This replacement remote is designed to function with specific Pioneer Car DSP MD CD Receiver Player models. To ensure proper operation, verify that your original remote control or car audio unit model number is listed in the compatible models section of this manual. The physical appearance and button layout of this replacement remote should closely match your original unit for full functionality.

## **OPERATING INSTRUCTIONS**

### **Basic Functions**

The Easytry123 replacement remote control utilizes infrared (IR) technology to communicate with your Pioneer car audio receiver. Ensure a clear line of sight between the remote's IR emitter and the receiver's IR sensor for optimal performance.



*Image Description: The front view of the Easytry123 replacement remote control, displaying its various buttons and their labels, including Volume, ATT, PGM, Band/ESC, Audio, Source, and directional controls.*

- **POWER:** Turns the car audio receiver on or off.
- **VOLUME (+/-):** Adjusts the audio output level.
- **ATT (Attenuate):** Mutes or significantly reduces the audio volume.
- **SOURCE:** Cycles through available audio sources (e.g., CD, MD, Radio, AUX).
- **BAND/ESC:** Changes radio bands (FM1, FM2, AM) or acts as an escape/back function in menus.
- **AUDIO:** Accesses audio settings or sound adjustments.
- **PGM (Program):** Used for programming radio stations or other functions.
- **Directional Buttons (Up/Down/Left/Right):** Navigates menus, tunes radio frequencies, or skips tracks.

*Note: Specific button functions may vary slightly depending on your Pioneer receiver model. Refer to your car audio receiver's original manual for detailed operation of each function.*

## MAINTENANCE

---

### Battery Replacement

Replace batteries when the remote control's range decreases or it stops responding. Always replace both AAA batteries simultaneously with new ones. Do not mix old and new batteries, or different types of batteries.

### Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. Avoid using abrasive cleaners, solvents, or harsh chemicals, as these can damage the remote's finish or internal components.

### Storage

Store the remote control in a dry place, away from direct sunlight, extreme temperatures, and high

humidity. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

## TROUBLESHOOTING

---

### Common Issues and Solutions

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly installed batteries	Check battery orientation. Replace with fresh AAA batteries.
Remote has limited range	Weak batteries or obstruction	Replace batteries. Ensure clear line of sight to the receiver's IR sensor.
Some functions do not work	Incompatibility or specific receiver function	Verify your receiver model is listed as compatible. Some advanced functions may not be supported by a replacement remote. Refer to your receiver's original manual.
Remote's IR emitter is blocked	Obstruction	Ensure nothing is covering the front of the remote control.

## SPECIFICATIONS

---

### Product Specifications

- **Brand:** Easytry123
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)
- **Compatible Devices:** Pioneer Car DSP MD CD Receiver Players (FH-P8900MD/ES, KEH-P7950, KEH-P8850/ES, MEH-P5000, MEH-P5050/ES, MEH-P7150, DEH-P840MP, DEH-P8450MP, DEH-P850MP, DEH-P9400)
- **Max Number of Supported Devices:** 1
- **Special Feature:** Ergonomic, Replacement
- **ASIN:** B0963NMCB8
- **Date First Available:** May 28, 2021

## WARRANTY AND SUPPORT

---

### Warranty Information

This product is a replacement remote control. For specific warranty details, please refer to the seller's policy at the point of purchase.

### Customer Support

If you encounter issues not covered in this manual or require further assistance, please contact the seller directly through the platform where the purchase was made.