



Manuals.plus /

› Easytry123 /

› Easytry123 Replacement Remote Control for Carrier Air Conditioners

Easytry123 Replacement Remote for Carrier AC

Easytry123 Replacement Remote Control for Carrier Air Conditioners

Instruction Manual

INTRODUCTION

This manual provides instructions for the Easytry123 Replacement Remote Control, designed for various Carrier Split System Room Air Conditioner models. This remote functions as a direct replacement for your original unit, offering essential control over your air conditioning system. Please review this manual thoroughly before use to ensure proper operation.

COMPATIBILITY

This replacement remote control is compatible with the following Carrier Air Conditioner models. It is crucial to verify that your original remote or air conditioner model number matches one of the listed models for guaranteed functionality.

- Carrier 42P225H
- Carrier 53P225H
- Carrier 42NG100H
- Carrier 42NG250H
- Carrier 42G100HF
- Carrier 53G300H
- Carrier 38HDL048
- Carrier 38HDL018
- Carrier 38HDL024
- Carrier 38HDC030

Note: If your specific model is not listed, functionality cannot be guaranteed. Please compare the appearance of this remote with your original remote for visual confirmation of compatibility.

SETUP

1. Battery Installation

The remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Back of the remote control with the battery compartment open, illustrating the correct placement for two AAA batteries.

Important: Remove batteries if the remote control will not be used for an extended period to prevent leakage and damage.

OPERATING INSTRUCTIONS

This remote control provides standard functions for your Carrier air conditioner. Point the remote control directly at the air conditioner's receiver when operating.



Image: Front view of the remote control, displaying the LCD screen and various control buttons.

Button Functions:

- **ON/OFF:** Powers the air conditioner on or off.

- **TEMP.** ▲ / ▼ : Adjusts the temperature setting upwards or downwards.
- **MODE:** Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
- **FAN:** Adjusts fan speed (e.g., Low, Medium, High, Auto).
- **FLAP:** Controls the louver/flap direction or swing function.
- **SLEEP:** Activates or deactivates the sleep mode for energy-efficient operation during sleep.
- **CLOCK:** Sets the current time.
- **EVERYDAY:** Likely for daily timer settings.
- **HOUR / MINUTE:** Used for setting time-related functions (e.g., timers).
- **TIMER ON / OFF:** Sets the air conditioner to turn on or off automatically at a specified time.
- **RESERV:** Likely a reservation or preset function.
- **CANCEL:** Cancels active timer or reservation settings.
- **RST (Reset):** Resets the remote control settings.
- **TA:** Function not explicitly defined, may be a specific timer or auxiliary function depending on the AC model.

Note: Specific functions and their exact behavior may vary slightly depending on your Carrier air conditioner model. Refer to your air conditioner's original manual for detailed explanations of each function.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote control's range decreases or it stops responding. Always replace both batteries simultaneously with new ones of the same type.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control not responding.	Dead or incorrectly installed batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Remote control range is poor.	Weak batteries. Obstruction between remote and AC unit.	Replace batteries. Ensure a clear line of sight to the AC unit's receiver.
Certain functions do not work.	Incompatibility with specific AC model features.	This is a replacement remote; some advanced or unique functions of your original remote may not be supported. Refer to your AC unit's original manual.
AC unit does not respond at all.	Remote control is not compatible with the AC unit.	Verify your AC model number against the compatibility list. Ensure the remote visually matches your original remote.

SPECIFICATIONS

- **Brand:** Easytry123
- **Model:** Replacement Remote Control for Carrier AC
- **Controller Type:** Button Control
- **Power Source:** 2 x AAA Batteries (not included)

- **Special Features:** Ergonomic design, Infrared (IR) replacement
- **Compatible AC Models:** Carrier 42P225H, 53P225H, 42NG100H, 42NG250H, 42G100HF, 53G300H, 38HDL048, 38HDL018, 38HDL024, 38HDC030

SUPPORT

For further assistance or inquiries regarding this replacement remote control, please contact the seller directly through the platform where the purchase was made. Provide your order details and a clear description of the issue for prompt support.

Note: This product is a replacement remote and may not have an independent manufacturer warranty beyond standard consumer protection laws.

