

[Manuals.plus](#) /

› [OUKANING](#) /

› OUKANING Outdoor Hanging Lantern Instruction Manual (Model YT-HG-ZJGJ-4420-0528)

OUKANING YT-HG-ZJGJ-4420-0528

OUKANING Outdoor Hanging Lantern Instruction Manual

Model: YT-HG-ZJGJ-4420-0528

INTRODUCTION

This manual provides detailed instructions for the safe and efficient installation, operation, and maintenance of your OUKANING Outdoor Hanging Lantern. This rustic pendant light fixture is designed for outdoor use in areas such as courtyards, balconies, villas, porches, and gardens. Please read this manual thoroughly before use and retain it for future reference.

The OUKANING Outdoor Hanging Lantern features a classic cage design with a bronze finish, made from high-quality aluminum and a windproof glass lampshade. It is waterproof and rainproof, ensuring durability in outdoor environments.

SETUP AND INSTALLATION

Careful assembly is required for this product. Ensure all components are present and undamaged before beginning installation. It is recommended to have a qualified electrician perform the wiring to ensure safety and compliance with local electrical codes.

1. Unpacking and Component Identification

Carefully remove all parts from the packaging. Lay them out on a clean, flat surface. Verify that all components listed in the diagram below are present.



Image: Exploded view showing all components of the OUKANING Outdoor Hanging Lantern, including the main lantern body, chain, ceiling plate, wiring, and mounting hardware.

2. Assembly Steps

1. **Attach the Hanging Chain:** Securely connect the hanging chain to the top of the lantern body and the ceiling plate.
2. **Wiring:** Carefully thread the electrical wires through the chain and the ceiling plate. Connect the wires according to standard electrical practices (live, neutral, ground). Ensure all connections are secure.
3. **Mounting:** Secure the ceiling plate to your desired outdoor location using appropriate mounting hardware. Ensure the mounting surface can support the weight of the fixture.
4. **Install Bulb:** Insert one E27 base bulb (not included) into the lamp holder. Do not exceed the maximum wattage of 30W.
5. **Secure Glass Panels:** Ensure all glass panels are properly seated and secured within the lantern frame to maintain its waterproof integrity.

For a visual guide on the assembly process, please refer to the video below:

Your browser does not support the video tag.

Video: Official assembly guide demonstrating the steps to assemble and wire the OUKANING Outdoor Hanging Lantern. This

video shows the process of connecting the chain, threading wires, and securing components.

OPERATING INSTRUCTIONS

The OUKANING Outdoor Hanging Lantern operates with a standard E27 bulb (not included) and is controlled via a push-button switch, typically a wall switch connected to the fixture's power supply.

1. **Power On:** Ensure the light fixture is correctly installed and wired to a power source. Flip the connected wall switch to the 'ON' position to illuminate the lantern.
2. **Power Off:** Flip the connected wall switch to the 'OFF' position to turn off the lantern.



Image: A side-by-side comparison showing the OUKANING Outdoor Hanging Lantern with the light off and with the light on, demonstrating its illuminated appearance.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your OUKANING Outdoor Hanging Lantern.

- **Cleaning:** The aluminum frame and glass lampshade are designed for easy cleaning. Use a soft, damp cloth to wipe down the exterior surfaces. Avoid abrasive cleaners or solvents that could damage the finish or glass. Ensure the power is off before cleaning.
- **Bulb Replacement:** Before replacing the bulb, ensure the power supply to the fixture is turned off at the circuit breaker. Allow the old bulb to cool completely. Unscrew the old E27 bulb and screw in a new E27 bulb, ensuring it does not exceed 30W.
- **Inspection:** Periodically inspect the hanging chain, wiring, and mounting points for any signs of wear, corrosion, or damage. Address any issues promptly to prevent hazards.

TROUBLESHOOTING

If you encounter issues with your OUKANING Outdoor Hanging Lantern, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Light does not turn on.	<ul style="list-style-type: none">• No power to the fixture.• Bulb is faulty or not installed correctly.• Loose wiring connection.	<ul style="list-style-type: none">• Check the circuit breaker and wall switch.• Replace the bulb with a new E27 bulb (max 30W). Ensure it is screwed in tightly.• Turn off power at the circuit breaker and check all wire connections. Consult a qualified electrician if unsure.
Light flickers.	<ul style="list-style-type: none">• Loose bulb.• Incompatible or faulty bulb.• Loose wiring.	<ul style="list-style-type: none">• Tighten the bulb.• Try a different E27 bulb.• Check wiring connections (with power off).
Water inside the fixture.	<ul style="list-style-type: none">• Improperly sealed glass panels.• Damage to the fixture.	<ul style="list-style-type: none">• Turn off power. Inspect and reseal glass panels if necessary.• Contact customer support if the fixture is damaged.

PRODUCT SPECIFICATIONS

Brand	OUKANING
Model Number	YT-HG-ZJGJ-4420-0528
Color	Bronze
Material	Glass Lampshade, Aluminium

Style	Classic
Light Fixture Form	Chandelier, Pendant Light
Room Type	Patio, Balcony, Garden
Indoor/Outdoor Usage	Outdoor
Power Source	AC
Light Source	LED (Bulb not included)
Number of Light Sources	1
Voltage	220 Volts (AC90-260V)
Wattage	30 Watt-hours (Maximum)
Bulb Base	E27
Control Method	Push Button (via external switch)
Mounting Type	Hanging, Pendant Light, Semi Flush Mount
Required Assembly	Yes
Item Dimensions (L x W x H)	6.3"L x 6.3"W x 31.89"H (16cm x 16cm x 81cm)





Image: Diagram illustrating the dimensions of the OUKANING Outdoor Hanging Lantern, showing a height of 31.89 inches (81cm) and a width of 6.3 inches (16cm).

WARRANTY INFORMATION

The manufacturer provides a limited warranty. For specific details regarding warranty coverage, including terms and conditions, please refer to the documentation included with your purchase or contact OUKANING customer support directly. In case of damaged, incorrect, or quality issues with the goods, the seller has indicated a willingness to provide compensation or reissue a new product.

CUSTOMER SUPPORT

For any questions, concerns, or assistance with your OUKANING Outdoor Hanging Lantern, please contact the seller or manufacturer directly. When contacting support, please provide your model number (YT-HG-ZJGJ-4420-0528) and purchase details for faster service.

The seller, OUKAISI, typically responds to messages between 9 PM and 6 AM (time zone not specified, assume seller's local time). They are committed to providing solutions for any problems encountered.

© 2023 OUKANING. All rights reserved.