

kimiso KMS-206

Kimiso-E92 (KMS-206) Portable Bluetooth Speaker User Manual

Model: KMS-206

1. INTRODUCTION

Thank you for purchasing the Kimiso-E92 (KMS-206) Portable Bluetooth Speaker. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

The Kimiso-E92 (KMS-206) is a portable speaker designed for convenience and quality audio. It features wireless Bluetooth connectivity, support for USB and SD card playback, and an FM radio function. Its compact design includes a carrying strap for easy transport.

2. SAFETY INFORMATION

- Do not expose the speaker to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not attempt to disassemble or repair the speaker yourself. Contact qualified service personnel.
- Keep the speaker away from heat sources and direct sunlight.
- Use only the provided charging cable or a certified 5V USB charger.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners.

3. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x Kimiso-E92 (KMS-206) Portable Bluetooth Speaker
- 1 x Carrying Strap
- 1 x USB Charging Cable

4. PRODUCT OVERVIEW

Familiarize yourself with the speaker's components and controls.



Figure 1: Kimiso-E92 (KMS-206) Portable Bluetooth Speaker (Red)

This image displays the red version of the Kimiso-E92 (KMS-206) portable speaker. It features a cylindrical shape with a mesh grille covering the front speaker, control buttons located on the top panel, and a black carrying strap attached to one end.



Figure 2: Kimiso-E92 (KMS-206) Portable Bluetooth Speaker (Black, Front View)

This image shows a direct front view of the Kimiso-E92 (KMS-206) portable speaker in black. The prominent feature is the speaker grille with the 'KIMISO' brand logo centrally placed. The textured surface of the speaker is also visible.

5. SETUP

5.1. Charging the Speaker

1. Connect the small end of the provided USB charging cable to the charging port on the speaker.
2. Connect the larger end of the USB cable to a 5V USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate, typically red, during charging.
4. Once fully charged (approximately 2 hours), the indicator light may change color or turn off.
5. Disconnect the charging cable.

5.2. Power On/Off

- To power on, press and hold the Power button for a few seconds until you hear an audible prompt or see an indicator light.

- To power off, press and hold the Power button again until the speaker shuts down.

6. OPERATING INSTRUCTIONS

6.1. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (it usually defaults to Bluetooth mode upon power-on). An indicator light will typically flash, indicating it's ready for pairing.
2. On your mobile device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "KMS-206" or a similar name from the list of found devices.
4. Once paired, the speaker will emit an audible confirmation, and the indicator light will typically stop flashing and remain solid.
5. You can now play audio from your device through the speaker. The effective range for Bluetooth connection is approximately 10 meters.

6.2. USB Playback

1. Insert a USB flash drive containing MP3 audio files into the USB port on the speaker.
2. The speaker should automatically switch to USB mode and begin playing the audio files.
3. Use the speaker's control buttons to navigate tracks (next/previous) and adjust volume.

6.3. SD Card Playback

1. Insert a Secure Digital (SD) card containing MP3 audio files into the SD card slot on the speaker.
2. The speaker should automatically switch to SD card mode and begin playing the audio files.
3. Use the speaker's control buttons to navigate tracks (next/previous) and adjust volume.

6.4. FM Radio

1. Press the Mode button (if available) to switch to FM radio mode.
2. In FM mode, press the Play/Pause button to automatically scan and save available radio stations.
3. Use the Next/Previous track buttons to switch between saved stations.

6.5. Controls

The speaker features intuitive button controls for various functions:

- **Power Button:** Press and hold to turn on/off.
- **Mode Button:** Short press to switch between Bluetooth, USB, SD Card, and FM Radio modes.
- **Play/Pause Button:** Short press to play or pause audio. In FM mode, press to auto-scan stations.
- **Volume Down / Previous Track Button:** Short press for previous track/station. Long press to decrease volume.
- **Volume Up / Next Track Button:** Short press for next track/station. Long press to increase volume.

7. MAINTENANCE

- Keep the speaker clean by wiping it with a soft, dry cloth.
- Avoid using liquid cleaners or solvents.
- Store the speaker in a cool, dry place when not in use for extended periods.

- Charge the battery regularly, even if not in frequent use, to maintain battery health.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is depleted.	Charge the speaker for at least 2 hours.
No sound from speaker.	Volume is too low; device not paired; incorrect mode.	Increase volume; re-pair Bluetooth; switch to correct mode (BT, USB, SD).
Bluetooth device cannot find speaker.	Speaker not in pairing mode; device too far.	Ensure speaker is on and in Bluetooth mode; move device closer (within 10m).
USB/SD card not playing.	Incorrect file format; card/drive not inserted correctly; corrupted files.	Ensure files are MP3; re-insert card/drive; try another card/drive.
Poor FM radio reception.	Weak signal.	Move speaker to a different location; re-scan stations.

9. SPECIFICATIONS

Model:	KMS-206
Bluetooth Version:	5.1 + EDR (A2DP)
Wireless Connection Distance:	Up to 10 meters
Audio Channel:	Stereo 2.0
Output Power:	10W
Frequency Response:	20Hz - 20KHz
Battery Capacity:	1500 mAh
Input Voltage:	5V USB
Operating Time:	4-6 hours
Charging Time:	Approximately 2 hours
Supported Modes:	USB, TF (SD Card), Bluetooth, FM Radio
Control Method:	Button
Compatible Devices:	Notebook, Smartphone, Tablet
Speaker Type:	Subwoofer





Subwoofer Diameter:	5.25 Inches
Wattage (Peak):	20 Watts

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the point of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

© 2023 Kimiso. All rights reserved.

Related Documents - KMS-206

	<p>Monoflex Tow Bar Installation Guide for Peugeot 206</p> <p>Comprehensive installation manual for the Monoflex tow bar (Art no. 03.0026) for Peugeot 206 models (Hatchback, XR, XT, XS, GTI, CC, RC, 206+). Includes parts list, technical specifications, and step-by-step fitting instructions with bumper cutting templates.</p>
	<p>Professional Karaoke Wireless Microphone Equipment User Manual - KMS-90P</p> <p>User manual for the Professional Karaoke Wireless Microphone Equipment, model KMS-90P. Provides detailed instructions on setup, connection diagrams for TV, computer, cell phone, set-top box, and power amplifier, features, technical specifications, safety guidelines, and warranty information.</p>
	<p>Gallien-Krueger Backline 115 Preamp: Schematics, Bill of Materials, and Engineering Changes</p> <p>Technical documentation for the Gallien-Krueger Backline 115 bass amplifier preamp, including schematics, detailed bill of materials (BOM), and engineering change orders (ECOs) for various revisions.</p>
	<p>Peugeot 206 CC Owner's Manual (2005)</p> <p>Official owner's manual for the Peugeot 206 CC (2005 model). Covers vehicle operation, controls, safety, maintenance, and technical specifications for optimal use and safety.</p>
	<p>Denver KMS-20 MK2 Karaoke Microphone User Manual and Specifications</p> <p>Detailed user manual for the Denver KMS-20 MK2 Bluetooth Karaoke Microphone, including safety instructions, operating guide, features, and technical specifications. Learn how to connect, use, and care for your karaoke microphone.</p>



206-6-105	108 1/2" H x 24" W
206-6-106	108 1/2" H x 30" W
206-6-107	108 1/2" H x 36" W

Assembled
and
ready to
install

[Lyfco Side Cabinet Installation Manual](#)

Step-by-step installation guide for Lyfco side cabinets, including required tools and assembly diagrams. Covers models 206-6-105, 206-6-106, and 206-6-107.