

[Manuals.plus](#) /

› [Power Your Fun](#) /

› Power Your Fun Robo Pets T-Rex Dinosaur Toy Instruction Manual

Power Your Fun 8322A

Power Your Fun Robo Pets T-Rex Dinosaur Toy Instruction Manual

Model: 8322A

INTRODUCTION

Welcome to the world of interactive play with your new Power Your Fun Robo Pets T-Rex Dinosaur Toy. This remote-controlled robot dinosaur is designed to provide engaging entertainment with various modes, movements, and interactive features. Please read this manual carefully to ensure proper setup, operation, and maintenance of your toy.



Image: The Robo Pets T-Rex dinosaur toy in green, accompanied by its remote control and food cards.

WHAT'S IN THE BOX

Verify that all components are present in your package:

- Robo Pet T-Rex
- Rechargeable Battery for the Robot (1 Lithium Ion battery required)
- USB Charging Cable
- Remote Control (requires 2 AAA batteries - not included)
- 4 Food Cards
- Screwdriver (for battery compartment)

SETUP

Battery Installation (Remote Control)

1. Locate the battery compartment on the back of the remote control.
2. Use a screwdriver to open the battery compartment.
3. Insert 2 AAA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment and secure it with the screw.

Charging the T-Rex

1. Locate the charging port on the T-Rex. This is typically found in the mouth area.
2. Connect the USB charging cable to the T-Rex's charging port.
3. Connect the other end of the USB cable to a compatible USB power source (e.g., computer, USB wall adapter).
4. Allow approximately 1 hour for a full charge, which provides about 30 minutes of play time.

Important: Ensure the T-Rex is turned off during charging.

OPERATING MODES

The Robo Pets T-Rex features multiple interactive modes. To switch between modes, press the spike on top of the dinosaur's head.

- **Gesture Mode:** Control the T-Rex with simple hand motions. Place your hand in front of its head to guide its movements.
- **Feed Mode:** Use the included food cards to "feed" your robot dinosaur. Each card may trigger a specific reaction or movement.
- **Interactive Mode:** Engage in a chomping game with a friend. One player places a hand inside the T-Rex's mouth while another player moves their hand behind its head. The goal is to avoid being "chomped."



Image: A child demonstrating the Gesture Mode and Interactive Mode with the T-Rex toy.

REMOTE CONTROL FUNCTIONS

The remote control allows for direct command of the T-Rex's movements and actions.

- **Movement:** Use the directional buttons to make the T-Rex roll forward, backward, turn left, and turn right.
- **Special Actions:** The remote can trigger actions like shaking, dancing, and chomping.
- **On/Off/Play Modes Button:** Press the spike on top of the dinosaur's head to turn it on/off or cycle through play modes.

This Robo T-Rex has all the right moves!



Image: The T-Rex toy performing actions such as rolling, shaking, turning, and dancing, controlled by the remote.

Robo Pets T-Rex

On/Off/Play
Modes Button



Kid-Safe
Dino Teeth



Roller
Wheels



Robot Dinosaur Feature

Image: Detailed view of the T-Rex's features, including the on/off/mode button on its head, kid-safe teeth, and roller wheels.

FEEDING AND PROGRAMMING

The Robo Pets T-Rex can be "fed" with the included food cards. Each card represents a different command or action.

1. Ensure the T-Rex is in Feed Mode (indicated by a specific eye color or sound).
2. Insert a food card into the T-Rex's mouth. The toy will react to the card.
3. You can program a sequence of actions by feeding multiple cards in a desired order.

Smart Robo Pet Dino

Exciting Dinosaur Toy for Kids



Image: The T-Rex toy with icons illustrating its features: Remote Control, Tricks, Gesture, Lights, AI (Intelligent), and Music.

MAINTENANCE

- Keep the toy clean by wiping it with a dry, soft cloth.
- Avoid exposing the toy to water or excessive moisture.
- Store the toy in a cool, dry place when not in use.
- Ensure the toy is turned off when not in use to conserve battery life.

TROUBLESHOOTING

Problem	Possible Cause	Solution
T-Rex does not turn on.	Low battery or power button not pressed correctly.	Charge the T-Rex battery. Press and hold the spike on its head for 3 seconds.

Problem	Possible Cause	Solution
Remote control not working.	Remote batteries are low or incorrectly installed.	Replace AAA batteries in the remote, ensuring correct polarity.
T-Rex not responding to commands.	Interference or out of range.	Move closer to the T-Rex and ensure no obstructions. Avoid operating near other electronic devices.
T-Rex moves erratically on carpet.	Wheels may get tangled with carpet fibers.	Operate the T-Rex on hard, flat surfaces for optimal movement. Regularly check wheels for obstructions.

SPECIFICATIONS

- **Product Dimensions:** 9.06 x 7.87 x 5.12 inches
- **Item Weight:** 1.43 pounds
- **Model Number:** 8322A
- **Manufacturer Recommended Age:** 3 years and up
- **T-Rex Battery:** 1 Lithium Ion battery (rechargeable)
- **Remote Control Batteries:** 2 AAA batteries (not included)
- **Play Time:** Approximately 30 minutes per 1-hour charge



Image: The T-Rex toy with its approximate dimensions (length, width, height) labeled.

SAFETY INFORMATION

Please observe the following safety guidelines:

- Toys should always be used under adult supervision.
- Do not pick up the moving Robo Pet.
- Keep hands, hair, and loose clothing away from the legs and wheels of the toy.
- Ensure the Robo Pet is turned off when not in use.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Exhausted batteries are to be removed from the toy.

- The supply terminals are not to be short-circuited.
- Batteries are to be inserted with correct polarity.
- The crossed-out trash can symbol indicates that batteries, button cells, battery packs, etc., must not be disposed of in household waste. Please help to protect the environment by taking children to dispose of batteries properly by taking them to local collection points. This way, batteries are recycled.

OFFICIAL PRODUCT VIDEO

Watch the official product video to see the Robo Pets T-Rex in action:

Your browser does not support the video tag.

Video: An official demonstration of the Robo Pets T-Rex Remote Control Dinosaur Robot Toy for Kids, showcasing its various features and interactive play.

WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your Power Your Fun Robo Pets T-Rex Dinosaur Toy, please refer to the contact information provided on the product packaging or visit the official Power Your Fun website.

Visit the [Power Your Fun Store](#) for more products and information.

© 2023 Power Your Fun. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question