

[Manuals.plus](#) /

› [UBay](#) /

› Universal Remote Control Fit for All LG Brand TV, Smart TV - Instruction Manual

UBay UBay-LG- Universal

Universal Remote Control for LG TVs

INSTRUCTION MANUAL

1. Product Overview

The UBay Universal Remote Control is a replacement remote designed to work seamlessly with most LG LED, LCD, and Smart TVs. It offers a straightforward, out-of-the-box experience without the need for complex programming or setup.

Key Features:

- Direct replacement for original LG TV remotes.
- No setup or programming required; ready to use with batteries inserted.
- Compatible with a wide range of LG TV models, including older and newer Smart TVs.
- Full functionality mirroring original LG remote controls.



Figure 1: Front view of the UBay Universal Remote Control, showing all buttons and layout.

2. Setup and Battery Installation

This remote control is designed for immediate use with LG TVs. No pairing or programming steps are required.

Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or in the direction indicated by an arrow to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into place until it clicks securely.

The remote is now ready for use.



**Universal Remote Control
for All LG TVs**

**No Setup Needed
Work Out of Box**

**100% Same Function as
the Original Remote**

3. Operating Instructions

Once batteries are installed, point the remote control towards your LG TV and begin using it as you would your original remote. All standard functions are supported.

Common Functions:

- **Power Button:** Turns the TV on or off.
- **Number Buttons (0-9):** For direct channel input.
- **Volume Up/Down (VOL +/-):** Adjusts the sound level.
- **Channel Up/Down (CH PAGE +/-):** Changes TV channels.
- **Mute:** Silences the TV audio.
- **Input/Source:** Selects input sources (HDMI, AV, etc.).
- **Navigation Pad (Up/Down/Left/Right/OK):** For menu navigation and selection.
- **Smart/Home Button:** Accesses the Smart TV home screen or main menu.
- **Back/Exit:** Returns to the previous screen or exits a menu.
- **Playback Controls:** Play, Pause, Stop, Fast Forward, Rewind for media playback.

This remote is compatible with various LG TV models, including those originally shipped with remotes such as AKB72914207, AKB72914003, AKB72914240, AKB73715607, AKB73715690, AKB74475471, AGF76692601, AKB75095307, AKB75375604, AKB74915305, AKB74475401, AKB74475433, AKB73975702, AKB75055701, AKB73975711, AKB73715608, AKB74475401, AKB75375604, AGF76631064, AKB74915324, and many others.

4. Maintenance

Proper maintenance ensures the longevity and optimal performance of your remote control.

- **Cleaning:** Use a soft, dry cloth to wipe the remote control. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or immerse the remote in liquid.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If not in use for an extended period, remove the batteries to prevent leakage.

5. Troubleshooting

If you encounter issues with your remote control, try the following troubleshooting steps:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA batteries.
 - Ensure there are no obstructions between the remote control and the TV's infrared receiver.
 - Point the remote directly at the TV.
- **Limited Range:**
 - Replace batteries. Weak batteries can reduce the remote's effective range.
 - Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the TV's IR receiver.

- **Specific Buttons Not Working:**

- This is often an indication of low batteries. Replace them.
- Ensure the buttons are not stuck or obstructed by debris.

If the issue persists after trying these steps, the remote control may require replacement.

6. Specifications

Feature	Detail
Model Number	UBay-LG- Universal
Compatible Devices	LG LED, LCD, and Smart TVs
Power Supply	2 x AAA Batteries (not included)
Product Dimensions	6.5 x 1.8 x 0.6 inches
Item Weight	2.39 ounces
Color	Black
Special Feature	Universal compatibility for LG TVs

7. Warranty and Support

For information regarding warranty coverage or customer support, please refer to the product packaging or contact the retailer from whom the product was purchased. Specific warranty terms and support contact details are typically provided at the point of sale or on the manufacturer's official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0964K6RT6>

More documents and user manuals: <https://manuals.plus/>