

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Polaroid](#) /

› [Polaroid Go Instant Mini Camera \(Model 9035\) Instruction Manual](#)

Polaroid 9035

Polaroid Go Instant Mini Camera (Model 9035) Instruction Manual

Brand: Polaroid | Model: 9035

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

INTRODUCTION

Welcome to the world of instant photography with your new Polaroid Go Instant Mini Camera. This compact camera is designed for capturing spontaneous moments and creating tangible memories. This manual will guide you through the setup, operation, and maintenance of your device.



Front view of the Polaroid Go Instant Mini Camera in white, showing the lens, flash, and film ejection slot.

WHAT'S IN THE BOX

Your Polaroid Go Instant Mini Camera package includes the following items:

- Camera Body Only
- USB charging cable
- Wrist strap
- Quick Start Guide
- Safety & Compliance Booklet

SETUP

1. Charging the Camera

Before first use, ensure your Polaroid Go camera is fully charged. Connect the provided USB charging cable to the camera's charging port and a power source. The charging port is located on the side of the camera.



Side view of the Polaroid Go camera, highlighting the USB charging port.

2. Loading Film

The Polaroid Go camera uses specific Polaroid Go format film. To load the film:

1. Locate the film door latch on the bottom of the camera.
2. Slide the latch to open the film door.
3. Insert the film pack, aligning the yellow arrow on the film pack with the yellow arrow inside the camera. Ensure the darkslide is facing up.
4. Close the film door firmly. The camera will automatically eject the darkslide.



Bottom view of the Polaroid Go camera, illustrating the film door and latch.

Your browser does not support the video tag.

Video demonstrating how to load film into the Polaroid Go camera and the automatic ejection of the darkslide.

OPERATION

1. Powering On/Off

Press the power button located on the top of the camera to turn it on or off. The film counter display will show the number of remaining photos.



Top view of the Polaroid Go camera, showing the power button and digital film counter.

2. Taking a Photo

Aim your camera and press the red shutter button to capture your image. The photo will eject from the front slot.



Front view of the Polaroid Go camera, highlighting the red shutter button.

3. Flash Control

Press the flash button (lightning bolt icon) to toggle the flash on or off. Use the flash in low-light conditions or to add a creative effect.

4. Selfie Mirror & Self-Timer

The reflective surface next to the lens acts as a selfie mirror, allowing you to compose your self-portraits. Activate the self-timer feature for group shots or hands-free selfies.



Front view of the Polaroid Go camera, with the reflective selfie mirror visible next to the lens.

Your browser does not support the video tag.

Video demonstrating the key features of the Polaroid Go camera, including the selfie mirror and flash.

5. Double Exposure

The camera features a double exposure mode to layer two images onto a single frame for artistic effects. Refer to the Quick Start Guide for detailed instructions on activating and using this feature.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body and lens. Avoid abrasive materials or harsh chemicals.
- **Film Storage:** Store unused film packs in a cool, dark place. Once a photo is ejected, protect it from light for the first few minutes of development by keeping it face down or in a dark place.
- **Battery Care:** Recharge the camera regularly to maintain battery health. Avoid extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your Polaroid Go camera, consider the following:

- **Dark or Underexposed Photos:** Ensure adequate lighting. Use the flash in dimly lit environments.
- **Blurry Photos:** Hold the camera steady while taking a picture. Ensure your subject is within the recommended focus range.
- **Film Ejection Issues:** Check that the film pack is correctly inserted and the film door is securely closed. Ensure there are no obstructions in the film ejection slot.
- **Battery Not Charging:** Verify the USB cable is properly connected to both the camera and the power source. Try a different USB port or cable.

SPECIFICATIONS

Feature	Detail
Brand	Polaroid
Model Name	Polaroid Go
Special Feature	Timer
Film Format Type	Instant
Item Weight	240 Grams
Item Dimensions (L x W x H)	4.13 x 3.3 x 2.42 inches
Minimum Shutter Speed	1 Seconds
Maximum Shutter Speed	1/250 Seconds
Shooting Modes	Double Exposure, Self-Timer
Color	White
Water Resistance Level	Not Water Resistant
Viewfinder	Reflective Viewfinder

WARRANTY AND SUPPORT

The Polaroid Go Instant Mini Camera comes with a **1-year warranty** from the manufacturer. For detailed warranty information, product support, or to explore other Polaroid products, please visit the official Polaroid Store:

[Visit the Polaroid Store](#)

