

## Music Sound BTMSTWSINEAR245

# Music Sound Fancy Bluetooth TWS Headphones

Model: BTMSTWSINEAR245 - User Manual

## INTRODUCTION

---


Thank you for choosing Music Sound Fancy Bluetooth TWS In-Ear Headphones. These headphones are designed to provide a comfortable and immersive audio experience with true wireless freedom. This manual provides essential information for the proper use, setup, and maintenance of your device.

## PACKAGE CONTENTS

---

Please verify that all items listed below are included in your package:

- True Wireless Earphones (Left and Right)
- Charging Case
- USB-C Charging Cable
- User Guide
- Multiple sizes of ear tips



This image displays the complete package contents: the two earbuds, the charging case, a USB-C charging cable, different sized ear tips, and the user guide.

## SETUP

---

### 1. Initial Charging

Before first use, fully charge the headphones and the charging case. Connect the USB-C charging cable to the charging port on the case and to a compatible USB power source. The indicator light on the case will show charging status.

### 2. Powering On

Open the charging case. The earbuds will automatically power on and enter pairing mode. If they do not power on, ensure they are charged.

### 3. Bluetooth Pairing

1. Ensure the earbuds are charged and powered on.
2. Enable Bluetooth on your device (smartphone, tablet, laptop).
3. Search for available Bluetooth devices.
4. Select "Music Sound Fancy" (or similar name) from the list of devices.
5. Once connected, a voice prompt will confirm successful pairing. The earbuds will automatically pair with the last connected device when removed from the case.

## OPERATING INSTRUCTIONS

---

### Wearing the Earbuds

Gently insert the earbuds into your ears, ensuring a snug and comfortable fit. Adjust them until they feel secure. The ergonomic in-ear design provides optimal sound isolation and comfort.



This image shows an individual wearing the earbuds, highlighting their comfortable and secure fit within the ear.

### Touch Controls

The earbuds feature touch-sensitive controls for managing music playback and calls:

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Answer/End Call:** Single tap on either earbud.
- **Reject Call:** Press and hold either earbud for 2 seconds.
- **Activate Voice Assistant:** Triple tap on either earbud.



This diagram visually explains the various touch control gestures for managing calls and music playback on the earbuds.

### Powering Off

Place the earbuds back into the charging case and close the lid. They will automatically disconnect from your device and power off.

## CHARGING

---

### Charging the Earbuds

The earbuds charge automatically when placed inside the charging case. Ensure the case has sufficient power. A single charge provides approximately 5 hours of playback time.

### Charging the Case

Connect the provided USB-C cable to the charging port on the case and to a USB power adapter. The charging case can provide up to 5 full charges for the earbuds, extending the total playback time to

approximately 25 hours.



This image illustrates the battery life, showing 25 hours of total playtime with the charging case and 5 hours from a single earbud charge.



This image displays the charging case, which is compact and designed for portability.



This image demonstrates the compact size of the charging case, easily fitting into a pocket for convenient transport.

## MAINTENANCE

---

- **Cleaning:** Use a soft, dry cloth to clean the earbuds and charging case. Do not use abrasive cleaners or solvents.
- **Water Resistance:** The earbuds are waterproof. However, avoid prolonged submersion in water and ensure they are dry before placing them back in the charging case to prevent damage to the charging contacts.
- **Storage:** Store the headphones in their charging case when not in use to protect them and keep them charged.
- **Temperature:** Avoid exposing the device to extreme temperatures (hot or cold) as this can affect battery life and performance.

## TROUBLESHOOTING

---

Problem	Solution
Earbuds not powering on	Ensure earbuds and charging case are fully charged. Place earbuds in case and close/open lid.
Cannot pair with device	Make sure Bluetooth is enabled on your device. Ensure earbuds are in pairing mode. Forget the device from your Bluetooth list and try pairing again. Move closer to your device.
No sound from earbuds	Check volume levels on both your device and the earbuds. Ensure earbuds are properly connected. Try re-pairing.
One earbud not working	Place both earbuds back into the charging case, close the lid, and then open it again to reset. Ensure both earbuds are charged.
Charging case not charging	Check the USB-C cable and power adapter. Ensure the cable is securely connected to both the case and the power source.

## SPECIFICATIONS

---

- **Model:** BTMSTWSINEAR245

- **Connectivity:** Bluetooth (Wireless)
- **Ear Placement:** In-Ear
- **Control Method:** Touch
- **Battery Life (Earbuds):** Up to 5 hours (single charge)
- **Battery Life (with Charging Case):** Up to 25 hours
- **Charging Port:** USB-C
- **Special Features:** True Wireless Technology, Built-in Microphone, Waterproof
- **Compatible Devices:** Phones, Tablets, Laptops, Smart Speakers
- **Material:** Plastic
- **Item Weight:** Approximately 0.08 Kilograms

## WARRANTY AND SUPPORT

---

Music Sound products are manufactured with attention to quality. For warranty information or technical support, please refer to the specific warranty card included in your package or visit the official Music Sound website. Keep your proof of purchase for warranty claims.

For further assistance, please contact Music Sound customer service through the contact details provided on our official website.