

[Manuals.plus](#) /

› [uleway](#) /

› Uleway G2302 Mobile Phone for Seniors: User Manual

uleway G2302

Uleway G2302 Mobile Phone for Seniors: User Manual

Model: G2302

INTRODUCTION

This manual provides detailed instructions for the Uleway G2302 mobile phone. Designed with ease of use in mind, this phone features large buttons, a clear display, and essential functions for seniors. Please read this manual thoroughly before using your device to ensure proper operation and safety.

PACKAGE CONTENTS

Verify that all items are present in your package:

- Uleway G2302 Mobile Phone
- Rechargeable Lithium-ion Battery
- Charging Dock
- USB Cable
- Power Adapter
- User Manual (this document)
- SIM Card Adapters (Nano to Micro, Micro to Standard)



Image: Contents of the Uleway G2302 package, including the phone, charging accessories, and documentation.

SETUP

1. SIM Card and SD Card Installation

1. Remove the back cover of the phone.
2. If a battery is present, remove it.
3. Locate the SIM card slots. This phone supports two standard SIM cards.
4. Insert your standard SIM card(s) into the designated slots (Card Slot 1 and Card Slot 2) with the gold contacts facing down. Ensure they are securely in place.
5. If desired, insert a Micro SD card (up to 32GB, not included) into the Micro SD card slot for additional storage.

Both SIM Card and SD Card NOT Included Please Prepare Your Own One



Image: Illustration of SIM and Micro SD card insertion points.

2. Battery Installation

1. After installing SIM/SD cards, align the battery contacts with the phone's contacts.
2. Gently press the battery into its compartment.
3. Replace the back cover, ensuring it clicks into place.

3. Charging the Phone

Before first use, fully charge the phone battery.

- **Using the Charging Dock:** Place the phone into the charging dock. Ensure the charging contacts on the phone align with those on the dock. Connect the USB cable to the dock and the power adapter, then plug the adapter into a wall outlet.
- **Direct Charging:** Connect the USB cable directly to the phone's Micro USB port and the power adapter, then plug the adapter into a wall outlet.

The charging indicator on the screen will show the charging status. Once fully charged, disconnect the charger.



Image: Uleway G2302 phone being used by seniors, highlighting its user-friendly design.

OPERATING INSTRUCTIONS

1. Power On/Off

- **Power On:** Press and hold the **Call/Green** button until the screen lights up.
- **Power Off:** Press and hold the **End Call/Red** button until the phone powers down.

2. Making Calls

1. Enter the phone number using the keypad. The large buttons and clear display facilitate this.
2. Press the **Call/Green** button to initiate the call.
3. To end the call, press the **End Call/Red** button.

3. Receiving Calls

When an incoming call is received, press the **Call/Green** button to answer. Press the **End Call/Red** button to reject or end the call.

4. Sending and Receiving SMS

Navigate to the 'Message' menu from the main screen. You can compose new messages or read received ones. The phone features a user-friendly interface with clear icons.

User-friendly UI interface



Contacts



Multimedia



Camera



My files



Call logs



Settings



Tools



Alarm



Image: User-friendly interface of the Uleway G2302, showing main menu icons.

5. SOS Function

The SOS function allows you to quickly contact pre-set emergency numbers. This phone supports up to 5 SOS contacts.

- **Setting SOS Numbers:** Go to *Settings* > *SOS Settings* to add emergency contacts.
- **Activating SOS:** In an emergency, press and hold the **SOS button** (usually located on the back of the phone) for a few seconds. The phone will automatically call and send an emergency SMS to the pre-set contacts until one answers.

SOS Function (Support 5 SOS Contact)

Emergency Call for Help in Danger



DOCTOR



SON



First Aid



First Aid



Daughter

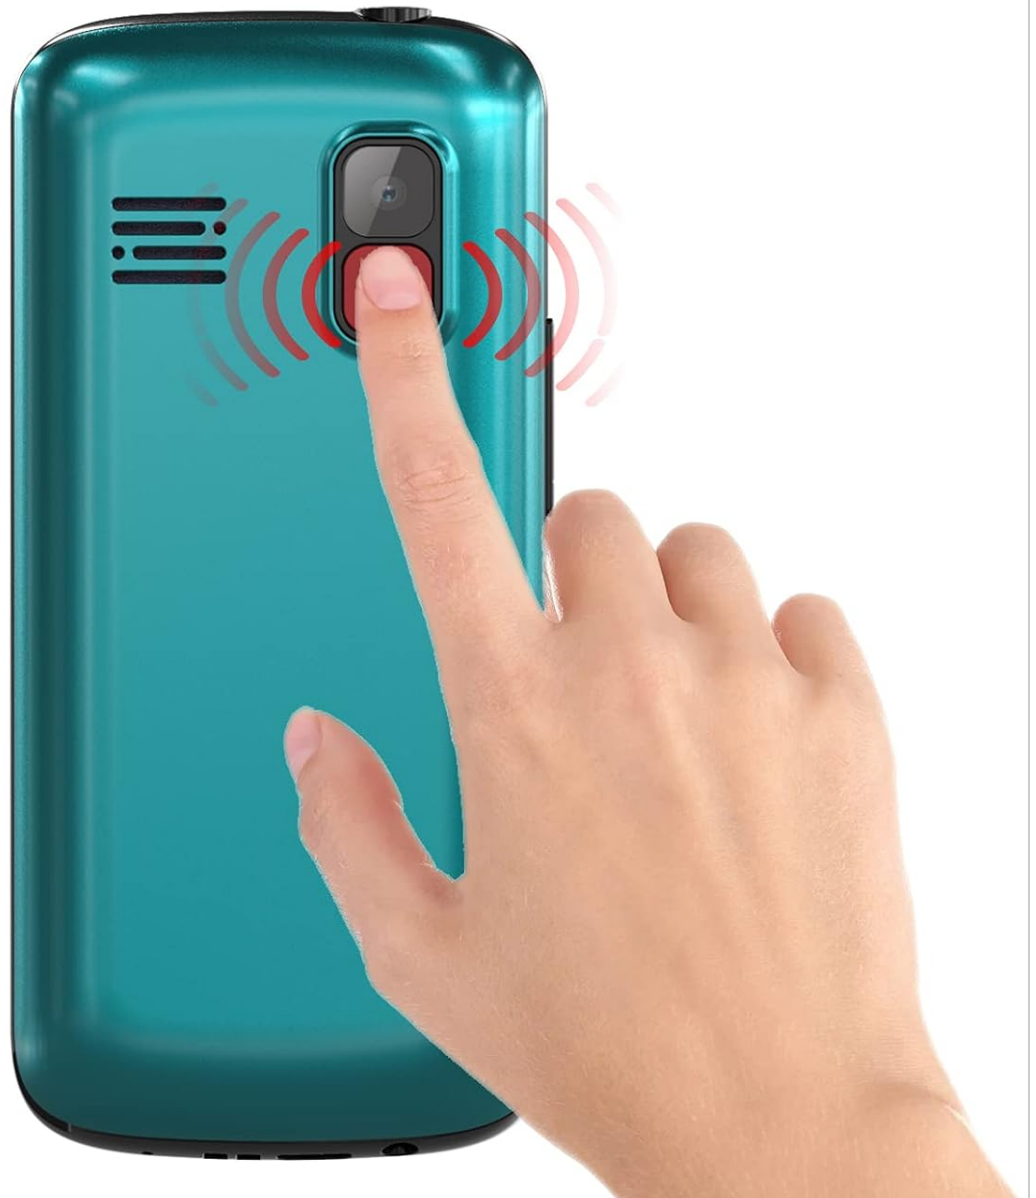


Image: Demonstration of the SOS function on the Uleway G2302.

6. Flashlight

To activate the built-in flashlight, use the dedicated side button or navigate through the 'Tools' menu. Press the button again to turn it off.

Highlight flashlight

Protect You from Unnecessary Harm



Image: The Uleway G2302's flashlight in use.

7. FM Radio

Access the FM Radio function from the main menu. You may need to connect headphones (not included) to act as an antenna for optimal reception.

8. Alarm

Set alarms through the 'Alarm' menu. You can configure multiple alarms with different times and repeat options.

9. Bluetooth

The phone supports Bluetooth connectivity. Go to *Settings* > *Bluetooth* to enable it, search for devices, and pair with compatible accessories like headsets.

10. Language Settings

The phone supports multiple languages including French, English, Spanish, German, and Italian. To change the language, navigate to *Settings > Phone Settings > Language*

MAINTENANCE

- Keep the phone dry. Moisture can damage electronic circuits.
- Avoid extreme temperatures. High temperatures can shorten the life of electronic devices and warp or melt certain plastics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone. Wipe it with a soft, damp cloth.
- Handle the phone gently. Do not drop, knock, or shake it. Rough handling can break internal circuit boards and fine mechanics.
- Only use original or approved replacement batteries and chargers.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Phone does not power on	Battery is low or not installed correctly.	Charge the battery. Ensure the battery is correctly inserted.
Cannot make or receive calls	No SIM card, SIM card not installed correctly, or out of network coverage.	Ensure SIM card is correctly inserted. Check network signal. Verify SIM card is active.
Poor call quality / Low volume	Network issue, volume too low, or HAC feature not optimized.	Move to an area with better signal. Adjust call volume using side buttons. If using a hearing aid, ensure HAC is enabled and positioned correctly.
SOS function not working	SOS numbers not set, or no network signal.	Set up SOS numbers in settings. Ensure phone has network coverage.
Phone freezes or becomes unresponsive	Software glitch or temporary error.	Remove and reinsert the battery to restart the phone.

SPECIFICATIONS

Feature	Description
Brand	Uleway
Model Number	G2302
Product Type	Bar Phone
Screen Size	2.3 Inches (LCD)

Feature	Description
Resolution	120 x 160
Cellular Technology	GSM (850/900/1800/1900MHz)
SIM Card Support	Dual Standard SIM (Does not support 3G or 4G SIM cards)
Memory (RAM)	32 MB
Storage Capacity	16 GB (Internal, for contacts/SMS)
Connectivity	Bluetooth, Micro USB
Special Features	SOS Button, Flashlight, FM Radio, Alarm, Calculator, Camera, HAC (Hearing Aid Compatible M4/T4), Large Buttons, Charging Dock
Battery	1 Lithium-ion (included)
Languages	French, English, Spanish, German, Italian
Manufacturer	Caffmo

WARRANTY AND SUPPORT

Uleway products are designed for reliability and performance. For specific warranty information, please refer to the warranty card included in your product packaging or contact Uleway customer support directly.

If you encounter any issues not covered in this manual, please contact Uleway customer service for assistance. Have your model number (G2302) and purchase details ready.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0967ZCR52>

More documents and user manuals: <https://manuals.plus/>