

[Manuals.plus](#) /

› [Denver](#) /

› Denver SEL-85350FBLACK Electric Scooter User Manual

Denver SEL-85350FBLACK

Denver SEL-85350FBLACK Electric Scooter User Manual

Model: SEL-85350FBLACK

PRODUCT OVERVIEW

The Denver SEL-85350FBLACK is a high-performance electric scooter designed for efficient urban commuting and recreational use. It features a robust aluminum frame, a powerful 350W motor, and an integrated battery, offering a balance of speed, range, and portability. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your scooter.



The Denver SEL-85350BLACK Electric Scooter features a sleek black aluminum frame, 8.5-inch wheels, and a kickstand. It is designed for urban commuting and recreational use.

SAFETY INFORMATION

Operating an electric scooter requires caution and adherence to safety guidelines. Always prioritize your safety and the safety of others.

General Safety Guidelines

- Always wear a helmet and appropriate protective gear (knee pads, elbow pads) when riding.
- Familiarize yourself with local laws and regulations regarding electric scooter use.
- Do not ride under the influence of alcohol or drugs.

- Ensure the scooter is in good working condition before each ride.
- Do not allow children under the recommended age to operate the scooter.
- The maximum weight capacity is 120 kg. Do not exceed this limit.

Riding Safety

- Maintain a safe distance from other vehicles and pedestrians.
- Avoid riding in heavy rain, snow, or icy conditions.
- Be aware of your surroundings, including road conditions, obstacles, and traffic.
- Do not perform stunts or sudden maneuvers.
- Use the bell to alert others of your presence.
- Ensure both hands are on the handlebars while riding.

Battery Safety

- Only use the original power adapter provided with the scooter for charging.
- Do not overcharge the battery. Disconnect the charger once fully charged.
- Do not expose the battery to extreme temperatures or direct sunlight.
- If the battery is damaged or leaking, do not use the scooter and contact support.

PACKAGE CONTENTS

Carefully unpack your Denver SEL-85350FBLACK Electric Scooter and ensure all items are present and undamaged.

- Denver SEL-85350FBLACK Electric Scooter
- User Manual
- Power Adapter

COMPONENTS OVERVIEW

Familiarize yourself with the main components of your electric scooter:

- **Handlebar:** For steering and control.
- **Brake Lever:** Activates the braking system.
- **Accelerator:** Controls the speed of the scooter.
- **Multifunction Display:** Shows speed, distance, battery capacity, and gear indicator.
- **Headlight (LED):** For illumination during low-light conditions.
- **Front Wheel:** 8.5-inch inflatable wheel with front suspension for comfort.
- **Rear Wheel:** 8.5-inch solid wheel.
- **Deck:** The standing platform.
- **Kickstand:** For parking the scooter upright.
- **Charging Port:** For connecting the power adapter.
- **Taillight (Red LED):** For visibility from the rear.
- **Bell:** For signaling.
- **Reflectors:** White on front, red on rear, reflective stripes on sides for enhanced visibility.

SETUP

Unfolding the Scooter

1. Place the scooter on a flat surface.
2. Locate the folding mechanism near the base of the handlebar stem.
3. Release the locking latch and carefully lift the handlebar stem until it clicks into place, indicating it is fully upright and locked.
4. Ensure all locking mechanisms are securely fastened before use.

Initial Charging

Before first use, fully charge the scooter's battery.

1. Locate the charging port on the scooter.
2. Connect the power adapter to the charging port.
3. Plug the power adapter into a standard electrical outlet.
4. The charging indicator on the adapter or scooter will show charging status (e.g., red for charging, green for fully charged).
5. Charging time may vary. Refer to the specifications for estimated charging duration.

Tire Pressure Check (Front Wheel)

The front wheel is inflatable. Ensure it is properly inflated for optimal performance and safety.

- Check the recommended tire pressure (usually indicated on the tire sidewall).
- Use a suitable pump with a pressure gauge to inflate the tire if necessary.

OPERATING INSTRUCTIONS

Powering On/Off

- To power on: Press and hold the power button on the display until the screen illuminates.
- To power off: Press and hold the power button until the display turns off.

Riding the Scooter

1. Place one foot firmly on the scooter deck.
2. Use your other foot to push off the ground to gain initial momentum (kick-start).
3. Once moving, gently press the accelerator lever to engage the motor.
4. Gradually increase pressure on the accelerator to increase speed.

Braking

- To slow down or stop, release the accelerator.
- Gently squeeze the brake lever on the handlebar to activate the braking system. Apply smooth, controlled pressure.

Using the Multifunction Display

The display provides real-time information:

- **Speed:** Current riding speed.
- **Distance:** Total or trip distance traveled.
- **Battery Capacity:** Indicates remaining battery charge.
- **Gear Indicator:** Shows the selected speed mode (if applicable).

Lights and Bell

- **Headlight:** Typically activated by a button on the display or handlebar. Use in low-light conditions.
- **Taillight:** Often illuminates automatically when the headlight is on or when braking.
- **Bell:** Use the bell to alert pedestrians or other riders of your approach.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your scooter.

Cleaning

- Wipe the scooter with a damp cloth. Do not use high-pressure water jets or immerse the scooter in water.
- Avoid using abrasive cleaners that could damage the finish.

Battery Care and Storage

- Charge the battery regularly, even if the scooter is not in use, to maintain battery health.
- Store the scooter in a cool, dry place, away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery to approximately 50-70% before storage.

Tire Maintenance

- Regularly check the pressure of the inflatable front tire and inflate as needed.
- Inspect both tires for wear, punctures, or damage.

General Inspection

- Periodically check all screws and bolts for tightness.
- Ensure the braking system is functioning correctly.
- Inspect the folding mechanism for proper operation and security.

TROUBLESHOOTING

This section addresses common issues you might encounter with your scooter.

Problem	Possible Cause	Solution
Scooter does not turn on.	Battery is depleted; Power button not pressed correctly.	Charge the battery; Press and hold the power button firmly.
Short battery range.	Under-inflated tires; Riding uphill frequently; Heavy load; Cold weather.	Check and inflate tires; Ride on flatter terrain; Reduce load; Battery performance may decrease in cold.
Brakes are not effective.	Brake cable loose; Brake pads worn.	Adjust brake cable tension; Inspect and replace brake pads if necessary (consult professional).
Unusual noises during operation.	Loose components; Debris in wheels.	Check all screws and bolts; Inspect wheels for foreign objects.

If you encounter issues not listed here or if solutions do not resolve the problem, please contact customer support.

SPECIFICATIONS

Model Number	SEL-85350FBLACK
Motor Power	350 W
Maximum Speed	Up to 25 km/h
Range per Charge	Up to 18 km
Battery Capacity	6000 mAh (integrated)
Frame Material	Aluminum
Wheel Size	8.5 inches (Front: Inflatable, Rear: Solid)
Maximum Load Capacity	120 Kilograms
Product Dimensions	43 x 106 x 114 cm
Item Weight	18.4 Kilograms
Lights	Front LED, Rear Red LED
Suspension	Front Suspension
Included Components	Electric scooter, User manual, Power adapter

SUPPORT AND CONTACT INFORMATION

For technical support, warranty inquiries, or further assistance, please refer to the contact information provided by your retailer or the manufacturer's official website.

Always keep your purchase receipt as proof of purchase for warranty claims.

© 2023 Denver. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0968CH45F>

More documents and user manuals: <https://manuals.plus/>