

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GYMAX](#) /

› [GYMAX Folding Golf Push Cart User Manual](#)

GYMAX GM1034

GYMAX Folding Golf Push Cart Instruction Manual

Brand: GYMAX | Model: GM1034

1. INTRODUCTION

Thank you for choosing the GYMAX Folding Golf Push Cart. This manual provides essential information for the proper assembly, operation, and maintenance of your golf push cart. Please read this manual thoroughly before first use to ensure safe and efficient operation. This 4-wheel golf trolley is designed for ease of use, portability, and durability, enhancing your golfing experience.



Figure 1: The GYMAX Folding Golf Push Cart shown both folded for storage and fully extended for use.

2. PRODUCT FEATURES

- **Height Adjustable Handle:** The handle can be adjusted to 4 different height positions, accommodating both teenagers and adults for comfortable pushing. The handle is wrapped in rubber for an improved grip.
- **Adjustable Umbrella Holder:** A flexible umbrella holder allows you to adjust the angle to block sunshine or rain, providing convenience during your game.
- **Quick One-Click Folding Design:** The cart features a rapid folding mechanism, allowing it to be collapsed into a compact size in seconds for easy transport and storage.
- **Integrated Storage:** Includes a professional scorecard holder, a storage compartment for golf balls and tees, and a convenient cup holder for beverages.
- **Durable Construction:** Constructed from heavy-duty aluminum, ensuring stability, sturdiness, and rust resistance for long-term outdoor use.
- **Secure Golf Bag Attachment:** Equipped with firm upper and lower brackets and elastic straps to securely fix golf bags of various sizes.

- **Enhanced Stability Wheels:** Features a 4-wheel structure with two 10.5" front wheels and two 11.5" rear wheels, providing smooth and stable movement across various terrains.
- **Foot Brake System:** A foot brake on the rear wheel allows for easy and secure stopping and parking of the cart.



Figure 2: Detailed view of the integrated features such as the umbrella holder, elastic bag brackets, cup holder, and storage rack.



Figure 3: Illustration of the comfortable rubber-wrapped handle and the durable powder-coated aluminum steel frame.

3. SETUP AND ASSEMBLY

The GYMAX Folding Golf Push Cart requires minimal assembly due to its quick one-click folding design. Follow these steps to prepare your cart for use:

- 1. Unfolding the Cart:** Locate the quick folding button, typically near the handle or main frame joint. Press and hold the button while gently extending the cart's frame until it locks into its fully unfolded position. Ensure all joints are securely locked before use.
- 2. Adjusting Handle Height:** Use the adjustment mechanism on the handle to set it to your preferred height. There are typically multiple preset positions. Ensure the handle is securely locked in place after adjustment.
- 3. Attaching Accessories:** If not pre-attached, secure the umbrella holder, cup holder, and scorecard holder to their designated slots on the handle console.



1 Turn the knob to adjust the scoreboard



2 Press the quick folding button to put the scoreboard down to the lowest position



3 Keep pressing the button and fold the cart



4 Convenient to carry and store

Figure 4: Step-by-step guide for folding the golf push cart, which can be reversed for unfolding.

Adjustable Height Meeting Your Different Needs



Figure 5: The handle's adjustable height mechanism, allowing customization for user comfort.

4. OPERATING INSTRUCTIONS

Operating your GYMAX Golf Push Cart is straightforward. Follow these guidelines for optimal performance:

- 1. Loading Your Golf Bag:** Place your golf bag onto the cart's lower bracket. Secure the bag firmly using the elastic straps provided on both the upper and lower brackets. Ensure the bag is centered and stable.
- 2. Pushing the Cart:** Grip the rubber-wrapped handle firmly. Push the cart forward, guiding it with the handle. The 4-wheel design and ball-bearing wheels ensure smooth maneuverability across the golf course.
- 3. Using the Foot Brake:** To stop and secure the cart, press down on the foot brake lever located near one of the rear wheels. Ensure the brake is fully engaged to prevent the cart from rolling. To release the brake, lift the lever.
- 4. Utilizing Storage Features:** Place your scorecard in the designated holder. Store golf balls and tees in the storage compartment. Use the cup holder for your beverage.
- 5. Umbrella Usage:** Insert your umbrella into the umbrella holder. Adjust its angle as needed to provide shade

or protection from rain.

Video 1: A demonstration of the GYMAX 4-Wheel Height Adjustable Golf Trolley in use, highlighting features like bag attachment, foot brake, adjustable handle, beverage holder, umbrella holder, and folding for storage.



Figure 6: The golf push cart in action, demonstrating its use on the course with an umbrella for sun protection.

5. MAINTENANCE

Regular maintenance will prolong the life and performance of your GYMAX Golf Push Cart:

- **Cleaning:** After each use, especially if used in wet or muddy conditions, wipe down the frame and wheels with a damp cloth. For stubborn dirt, use mild soap and water. Rinse thoroughly and dry completely to prevent rust.
- **Wheel Inspection:** Periodically check the wheels for any debris, such as grass or mud, that might impede their smooth rotation. Ensure the wheel axles are free from obstruction.
- **Lubrication:** Apply a small amount of silicone-based lubricant to moving parts, such as the folding joints and wheel axles, once every few months or as needed to ensure smooth operation.
- **Storage:** Store the cart in a dry, cool place, away from direct sunlight and extreme temperatures. Utilize its folding feature to save space during storage.

- **Strap and Bracket Check:** Regularly inspect the elastic straps and bag brackets for any signs of wear or damage. Replace if necessary to ensure secure golf bag attachment.

6. TROUBLESHOOTING

If you encounter any issues with your golf push cart, refer to the following common troubleshooting tips:

- **Cart Does Not Fold/Unfold Smoothly:**

Solution: Check for any obstructions in the folding mechanism. Ensure all release levers or buttons are fully engaged. Apply a silicone lubricant to the joints if they feel stiff.

- **Wheels Do Not Roll Freely:**

Solution: Inspect the wheels for debris (grass, mud, small stones) caught in the axles or treads. Clean the wheels thoroughly. Ensure the foot brake is fully disengaged.

- **Cart Pulls to One Side:**

Solution: Check if the wheels are properly aligned and securely attached. Ensure no debris is causing uneven rolling. Verify that your golf bag is balanced and securely fastened to the cart.

- **Foot Brake Not Engaging/Disengaging:**

Solution: Check for any debris obstructing the brake mechanism. Ensure the lever moves freely. If the issue persists, inspect the brake cable for damage or looseness.

For issues not covered here, please contact GYMAX customer support.

7. SPECIFICATIONS

Attribute	Detail
Brand	GYMAX
Model Number	GM1034
Material	Aluminum, Polypropylene
Product Dimensions (Unfolded)	42"L x 26.5"W x 44"H
Item Weight	20 Pounds
Front Wheel Size	10.5 inches
Rear Wheel Size	11.5 inches
Suggested Users	Unisex-Adults



Figure 7: Detailed dimensions of the golf push cart, both when unfolded for use and when folded for compact storage.

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official GYMAX website. Keep your purchase receipt as proof of purchase for any warranty claims.

Related Documents - GM1034

 USER'S MANUAL	<u>Gymax Electric Standing Desk User Manual</u> This user manual provides assembly instructions, operational guidance, and protection information for the Gymax Electric Standing Desk.
--	--

	<p>Gymax Folding Picnic Table and Bench Set User Manual</p> <p>User manual for the Gymax Folding Picnic Table and Bench Set, providing assembly instructions, part list, and safety guidelines for outdoor use.</p>
	<p>Gymax SP37619CA Treadmill User Manual</p> <p>Comprehensive user manual for the Gymax SP37619CA Treadmill, covering safety precautions, assembly, operation, maintenance, and troubleshooting. Includes information on the Gymax App for enhanced user experience.</p>
	<p>User Manual: Kids Ride-On Car</p> <p>This user manual provides assembly instructions, safety information, and usage guidelines for the Kids Ride-On Car. Learn how to assemble the steering wheel, wheels, and backrest, and understand the button functions and battery precautions.</p>
	<p>Gymax Set of 2 Counter Height Chairs User Manual</p> <p>Assembly and care instructions for the Gymax Set of 2 Counter Height Chairs. Includes parts list, hardware list, assembly steps, and maintenance tips.</p>
	<p>Gymax 8 ft. Beer Pong Table - Portable Party Drinking Game</p> <p>Discover the Gymax 8 ft. Beer Pong Table, a portable and foldable party essential. Featuring a durable design with unique graphics, it's perfect for tailgating and social events.</p>