

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Panasonic](#) /

› [Panasonic SC-PMX802 Hi-Fi Stereo System User Manual](#)

## Panasonic SC-PMX802

# Panasonic SC-PMX802 Hi-Fi Stereo System User Manual

Model: SC-PMX802

## INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Panasonic SC-PMX802 Hi-Fi Stereo System. Please read this manual thoroughly before using the unit and retain it for future reference. This system offers high-resolution audio playback, CD, Bluetooth, USB, AUX-IN, and Wi-Fi connectivity for a versatile listening experience.

## SAFETY PRECAUTIONS

- **Power Source:** Ensure the unit is connected to an AC power supply of the correct voltage as indicated on the unit.
- **Ventilation:** Do not block ventilation openings. Allow sufficient space around the unit for proper airflow.
- **Water and Moisture:** Do not expose the unit to rain, moisture, dripping, or splashing. Do not place objects filled with liquids on the unit.
- **Heat:** Keep the unit away from heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- **Cleaning:** Unplug the unit from the wall outlet before cleaning. Use a dry cloth only.
- **Servicing:** Do not attempt to service this unit yourself. Refer all servicing to qualified service personnel.

## SETUP

### 1. Unpacking

Carefully remove all components from the packaging. Verify that all items listed in the packing list are present. Retain the packaging materials for future transport or storage.

### 2. Component Identification

- Main Unit (Receiver/CD Player)
- Speaker Units (Left and Right)

- Remote Control with Batteries
- FM/AM Antenna (if included)
- Power Cord

### 3. Speaker Connection

Connect the speaker cables to the corresponding terminals on the main unit and the speakers. Ensure correct polarity (+ to + and - to -) for optimal sound quality. The left speaker connects to the LEFT terminals, and the right speaker to the RIGHT terminals.

### 4. Antenna Connection

If using the built-in tuner, connect the supplied FM antenna to the FM antenna terminal on the rear of the main unit. Extend the antenna for better reception.

### 5. Power Connection

Plug the power cord into the AC IN jack on the rear of the main unit, then plug the other end into a wall outlet.

### 6. Initial Power On

Press the **POWER** button on the main unit or remote control to turn on the system. Follow any on-screen prompts for initial setup, such as network configuration.

## OPERATING INSTRUCTIONS

---

### 1. Basic Controls

- **Power:** Press the **POWER** button to turn the unit on or off.
- **Volume:** Use the **VOLUME +/-** buttons on the unit or remote to adjust the sound level.
- **Input Selection:** Press the **FUNCTION** or **INPUT** button to cycle through available sources (CD, Bluetooth, USB, AUX, Network).

### 2. CD Playback

1. Press the **CD** button to select the CD function.
2. Press the **OPEN/CLOSE** button to open the CD tray.
3. Place a CD with the label side up into the tray and press **OPEN/CLOSE** again to close it.
4. Playback will start automatically. Use **PLAY/PAUSE**, **STOP**, **SKIP** buttons for control.

### 3. Bluetooth Pairing and Playback

1. Press the **BLUETOOTH** button to select the Bluetooth function. The unit will enter pairing mode.
2. On your Bluetooth device (smartphone, tablet), enable Bluetooth and search for available devices.
3. Select "SC-PMX802" from the list. Once paired, the unit will confirm the connection.
4. Start playing audio on your Bluetooth device.

### 4. USB Playback

1. Insert a USB device (flash drive) into the USB port on the front of the unit.
2. Press the **USB** button to select the USB function.
3. The unit will read the files on the USB device. Use the navigation buttons to select and play tracks.

## 5. AUX-IN Usage

1. Connect an external audio device (e.g., MP3 player) to the AUX-IN jack on the unit using a 3.5mm stereo audio cable.
2. Press the **AUX** button to select the AUX-IN function.
3. Start playing audio on your connected external device.

## 6. Wi-Fi and Network Features (Chromecast built-in)

The SC-PMX802 supports Wi-Fi connectivity and features Chromecast built-in, allowing you to stream music from various online services. Refer to the on-screen menu for network setup. You can cast audio directly from compatible apps on your smartphone or tablet to the system.

- **Network Setup:** Navigate to the "Network Settings" menu on the unit's display to connect to your home Wi-Fi network.
- **Chromecast:** Open a Chromecast-enabled audio app on your mobile device, tap the Cast icon, and select "SC-PMX802" to stream audio.

## MAINTENANCE

### 1. Cleaning the Unit

Before cleaning, disconnect the power cord from the wall outlet. Use a soft, dry cloth to wipe the exterior surfaces of the unit. Do not use abrasive cloths, waxes, benzene, thinner, or alcohol, as these may damage the finish. For stubborn dirt, lightly dampen the cloth with water and then wipe dry.

### 2. CD Lens Care

Avoid touching the CD lens. If the lens becomes dirty, use a commercially available CD lens cleaner. Do not use compressed air or other sprays.

### 3. Storage

If you plan to store the unit for an extended period, disconnect the power cord and store it in a cool, dry place, away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected securely.	Check power cord connection to the unit and wall outlet.
No sound	Volume is too low or muted. Incorrect input selected. Speaker cables disconnected.	Increase volume. Select correct input source. Check speaker cable connections.
Bluetooth pairing fails	Unit not in pairing mode. Device too far. Interference.	Ensure unit is in Bluetooth pairing mode. Move device closer. Turn off other Bluetooth devices.
CD does not play	CD inserted incorrectly. CD is dirty or scratched.	Insert CD correctly. Clean or replace CD.
Poor radio reception	Antenna not connected or positioned poorly.	Connect and adjust the position of the FM antenna.

## SPECIFICATIONS

---

- **Power Supply:** AC 220-240V, 50/60Hz
- **Power Consumption:** 45W (Typical)
- **Dimensions (Main Unit, W x H x D):** Approx. 210 x 114 x 267 mm
- **Dimensions (Speaker, W x H x D):** Approx. 161 x 238 x 262 mm per speaker
- **Weight (Main Unit):** Approx. 3.2 kg
- **Weight (Speaker):** Approx. 2.6 kg per speaker
- **Output Power:** 60W + 60W (1kHz, 3 ohms, 10% THD)
- **Supported Audio Formats (USB/Network):** MP3, FLAC, WAV, AIFF, DSD
- **Connectivity:** Bluetooth (Ver. 4.2), Wi-Fi (802.11a/b/g/n/ac), USB (Type A), AUX-IN (3.5mm stereo mini jack), Optical Digital Audio Input
- **CD Compatibility:** CD, CD-R/RW (Audio CD, MP3)
- **Tuner:** FM/AM

*Specifications are subject to change without notice for further improvement.*

## WARRANTY AND SUPPORT

---

Your Panasonic SC-PMX802 Hi-Fi Stereo System comes with a limited warranty. Please refer to the warranty card included in your product packaging for details on warranty terms and conditions specific to your region. For technical support, service, or to purchase accessories, please visit the official Panasonic support website or contact your local Panasonic customer service center.

**Online Support:** [www.panasonic.com/global/consumer/support.html](http://www.panasonic.com/global/consumer/support.html)