

[Manuals.plus](#) /

› [Daewoo](#) /

› Daewoo DCR-4020 19 mm Hair Curling Iron with Brush - User Manual

Daewoo DCR-4020

Daewoo DCR-4020 19 mm Hair Curling Iron with Brush

Model: DCR-4020 | **Brand:** Daewoo

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance and retain for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not use this appliance near water, such as in a bathtub, washbasin, or other vessel containing water.
- Always unplug the appliance immediately after use and before cleaning.
- Do not place or store the appliance where it can fall or be pulled into a tub or sink.
- Keep the appliance away from heated surfaces.
- Never use while sleeping.
- Never drop or insert any object into any opening.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use an extension cord with this appliance.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Allow the appliance to cool down completely before storing.

PRODUCT OVERVIEW

The Daewoo DCR-4020 is a 19 mm hair curling iron designed for versatile styling. It features a brush attachment for added styling options, a PTC heater for efficient heating, and a 360-degree rotating swivel cord for ease of use. The appliance operates on a wide voltage range (110-240V) making it suitable for international travel.

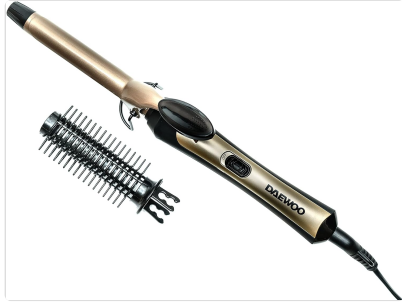


Image 1: The Daewoo DCR-4020 curling iron shown without its brush attachment. It features a gold-colored barrel and a black handle with the Daewoo logo.



Image 2: The Daewoo DCR-4020 curling iron with the brush attachment installed. The brush adds versatility for different styling techniques.



Image 3: A close-up view of the appliance's handle, highlighting the On/Off switch and the power indicator light, which illuminates when the device is active.

Key Features:

- 19 mm barrel diameter for various curl sizes.
- Removable brush attachment for added styling versatility.
- PTC Heater for rapid and consistent heat.
- Maximum temperature of 200°C.
- On/Off switch with power indicator light.
- 360° rotating swivel cord for tangle-free operation.
- Soft-touch handle for comfortable grip.
- Folding stand for safe placement during use.

- Universal voltage compatibility: 110-240V~50/60Hz.

SPECIFICATIONS

Feature	Detail
Model Number	DCR-4020
Barrel Diameter	19 mm
Power Input	110-240V~50/60Hz
Power Consumption	25W
Maximum Temperature	200°C
Heater Type	PTC Heater
Cord Length	170 cm (approximately 5.6 ft)
Product Dimensions	31.5 x 3.5 cm (12.4 x 1.38 inches)
Weight	170 g (6 ounces)
Color	Gold/Black

SETUP

1. **Unpack:** Carefully remove the curling iron and all accessories from the packaging. Retain packaging for storage or future transport.
2. **Inspect:** Check the appliance for any signs of damage. Do not use if the appliance or power cord is damaged.
3. **Voltage Compatibility:** The Daewoo DCR-4020 is designed to work with 110-240V~50/60Hz. No voltage converter is needed for international use, but a plug adapter may be required depending on your region.
4. **Attach Brush (Optional):** If you intend to use the brush attachment, align it with the barrel and gently push it onto the curling iron until it clicks securely into place. Ensure it is firmly attached before use.
5. **Placement:** Place the curling iron on a heat-resistant surface, ensuring it is away from flammable materials. Utilize the integrated folding stand for stability.

OPERATING INSTRUCTIONS

Before styling, ensure your hair is clean, dry, and free of tangles. For best results, apply a heat protectant spray.

1. **Plug In:** Insert the power plug into a suitable electrical outlet.
2. **Power On:** Slide the On/Off switch to the "On" position. The power indicator light will illuminate, indicating the appliance is heating up.
3. **Heating:** Allow the curling iron to heat for approximately 60 seconds. The PTC heater will quickly reach its maximum temperature of 200°C.
4. **Curling Hair (without brush):**
 - Take a section of hair, no wider than 1 inch (2.5 cm).

- Open the clamp, place the hair section between the clamp and the barrel, close the clamp.
- Wrap the hair around the barrel, away from your face, ensuring the ends are securely held.
- Hold for 5-10 seconds, depending on hair type and desired curl intensity.
- Release the clamp and gently slide the curling iron out.
- Repeat for all sections of hair.

5. **Styling with Brush Attachment:**

- The brush attachment can be used to add volume, create soft waves, or smooth hair.
- Take a section of hair and place it over the brush bristles.
- Slowly glide the curling iron through the hair section, rotating it slightly to create desired shape or volume.
- Avoid holding the brush in one place for too long to prevent overheating the hair.

6. **Cool Down:** After styling, slide the On/Off switch to the "Off" position and unplug the appliance from the outlet.

7. **Storage:** Allow the curling iron to cool down completely on a heat-resistant surface before storing it.



Image 4: A hand demonstrating the grip and size of the Daewoo DCR-4020 curling iron during use, highlighting its ergonomic design.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your curling iron.

1. **Unplug and Cool:** Always ensure the appliance is unplugged and completely cool before cleaning.
2. **Cleaning the Barrel:** Wipe the barrel and brush attachment with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals, as these can damage the surface.
3. **Cleaning the Brush:** If using the brush attachment, periodically remove any trapped hair from the bristles.
4. **Drying:** Ensure all parts are thoroughly dry before storing or next use.
5. **Storage:** Store the curling iron in a cool, dry place, away from moisture and direct sunlight. Do not wrap the power cord tightly around the appliance, as this can cause damage. Use the hanging loop for convenient storage if desired.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in correctly; power outlet issue; appliance fault.	Ensure the plug is fully inserted into a working outlet. Check if the outlet is live by plugging in another device. If the issue persists, contact customer support.

Problem	Possible Cause	Solution
Appliance heats up slowly or not to full temperature.	Insufficient power; internal component issue.	Ensure the appliance is connected to a stable power source. Allow adequate time for heating (approx. 60 seconds). If performance is consistently poor, contact customer support.
Hair is not curling effectively.	Hair is too wet; sections are too large; insufficient holding time.	Ensure hair is completely dry before styling. Use smaller sections of hair. Increase holding time slightly. Ensure the appliance has reached its full operating temperature.
Brush attachment is loose.	Not properly secured.	Ensure the brush attachment is pushed firmly onto the barrel until it clicks into place.

DISPOSAL INFORMATION

This symbol on the product or its packaging indicates that this product shall not be treated as household waste. Instead, it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

WARRANTY AND SUPPORT

This Daewoo product is manufactured to high-quality standards. While specific warranty details are not provided in this manual, Daewoo typically offers a manufacturer’s warranty against defects in materials and workmanship. For warranty claims, technical support, or service inquiries, please contact the retailer from whom you purchased the product or refer to the official Daewoo website for customer service contact information in your region. Please have your model number (DCR-4020) and proof of purchase ready when contacting support.

Manufacturer: Daewoo

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0968LBRM2>

More documents and user manuals: <https://manuals.plus/>