

[Manuals.plus](#) /

› [Lasika](#) /

› Lasika W-H9004 Sport Watch User Manual

## Lasika W-H9004

# Lasika W-H9004 Sport Watch User Manual

Model: W-H9004

## PRODUCT OVERVIEW

---

The Lasika W-H9004 is a digital sport watch designed for men, featuring a round dial, rubber band, and various timekeeping functions. This manual provides instructions for its setup, operation, and maintenance.



**Figure 1:** Front view of the Lasika W-H9004 Sport Watch. The watch features a black case with green accents. The digital display shows the time '10:10'. Buttons are visible on the left ('LIGHT', 'MODE') and right ('START', 'RESET') sides of the watch face. The brand 'LASIKA' and model 'W-H9004' are visible on the dial.

### Button Functions

- **LIGHT:** Activates the backlight for illumination. (Top-left button)
- **MODE:** Cycles through different modes (Time, Alarm, Stopwatch). (Bottom-left button)
- **START:** Used to start/stop functions in Stopwatch mode or adjust settings. (Top-right button)
- **RESET:** Used to reset functions or confirm settings. (Bottom-right button)

## SETUP

---

### Initial Time Setting

1. From the Time Mode display, press the **MODE** button repeatedly until the seconds begin to flash. This indicates the watch is in setting mode.
2. Press the **RESET** button to cycle through the setting options: seconds, hour, minute, month, date, day of the week.
3. Use the **START** button to adjust the flashing value. Hold **START** to increase values rapidly.
4. Once all desired settings are adjusted, press the **MODE** button to exit the setting mode and return to the normal Time Mode display.

## OPERATING INSTRUCTIONS

---

### Time Mode

- This is the default display mode, showing the current time, day, and date.
- Press the **LIGHT** button to illuminate the display in low-light conditions.

### Alarm Mode

1. Press the **MODE** button once from Time Mode to enter Alarm Mode. The alarm time will be displayed.
2. To set the alarm, press the **RESET** button. The hour digits will flash.
3. Use the **START** button to adjust the hour.
4. Press **RESET** again to select the minute digits, then use **START** to adjust.
5. Press **MODE** to exit alarm setting.
6. To turn the alarm ON/OFF, press the **START** button while in Alarm Mode (not setting mode). An alarm icon will appear/disappear.

### Stopwatch Mode

1. Press the **MODE** button twice from Time Mode to enter Stopwatch Mode. The display will show '00:00:00'.
2. Press the **START** button to begin timing.
3. Press **START** again to pause timing.
4. Press the **RESET** button while paused to reset the stopwatch to zero.
5. Press **MODE** to exit Stopwatch Mode.

## MAINTENANCE

---

### Cleaning

To clean your watch, wipe it with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners, as they may damage the watch's finish or rubber components.

## Battery Replacement

When the display becomes dim or the backlight function weakens, it may be time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and water resistance. Attempting to replace the battery yourself may void any warranty and compromise the watch's integrity.

## Water Resistance

This watch is designed with a degree of water resistance suitable for daily use, such as splashes or brief immersion. However, it is not suitable for swimming, diving, or prolonged exposure to water. Avoid operating buttons while the watch is wet to prevent water ingress.

## TROUBLESHOOTING

---

### Common Issues and Solutions

- **Display is blank or dim:** The battery may be low or depleted. Refer to the 'Battery Replacement' section.
- **Time is incorrect:** The watch may need to be reset or the time adjusted. Follow the 'Initial Time Setting' instructions.
- **Buttons are unresponsive:** Ensure the watch is not wet. If the issue persists, a reset may be required (consult a technician if a simple reset doesn't work).
- **Alarm does not sound:** Verify that the alarm is set correctly and the alarm icon is displayed in Alarm Mode.

## SPECIFICATIONS

---

- **Brand:** Lasika
- **Model:** W-H9004
- **Display Type:** Digital
- **Watch Shape:** Round
- **Dial Case Diameter:** Approximately 30 millimeters
- **Band Material:** Rubber
- **Targeted Group:** Men

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact the retailer from whom the watch was acquired. Keep your proof of purchase for any warranty claims.