



Manuals.plus /

- › Kisonli /
- › Kisonli G8 Wireless Alarm Speaker User Manual

Kisonli G8

Kisonli G8 Wireless Alarm Speaker User Manual

Model: G8

INTRODUCTION

The Kisonli G8 is a versatile wireless speaker designed to provide high-quality audio, alarm clock functionality, and multiple media playback options. It features Bluetooth connectivity, FM radio, USB, SD card, and AUX input, making it suitable for various audio needs. This manual provides detailed instructions for setting up, operating, and maintaining your Kisonli G8 speaker.



Image: The Kisonli G8 Wireless Alarm Speaker shown with its retail packaging and included cables.

PACKAGE CONTENTS

- Kisonli G8 Wireless Alarm Speaker
- USB Charging Cable
- AUX Audio Cable
- User Manual (this document)

PRODUCT OVERVIEW

Detail function:

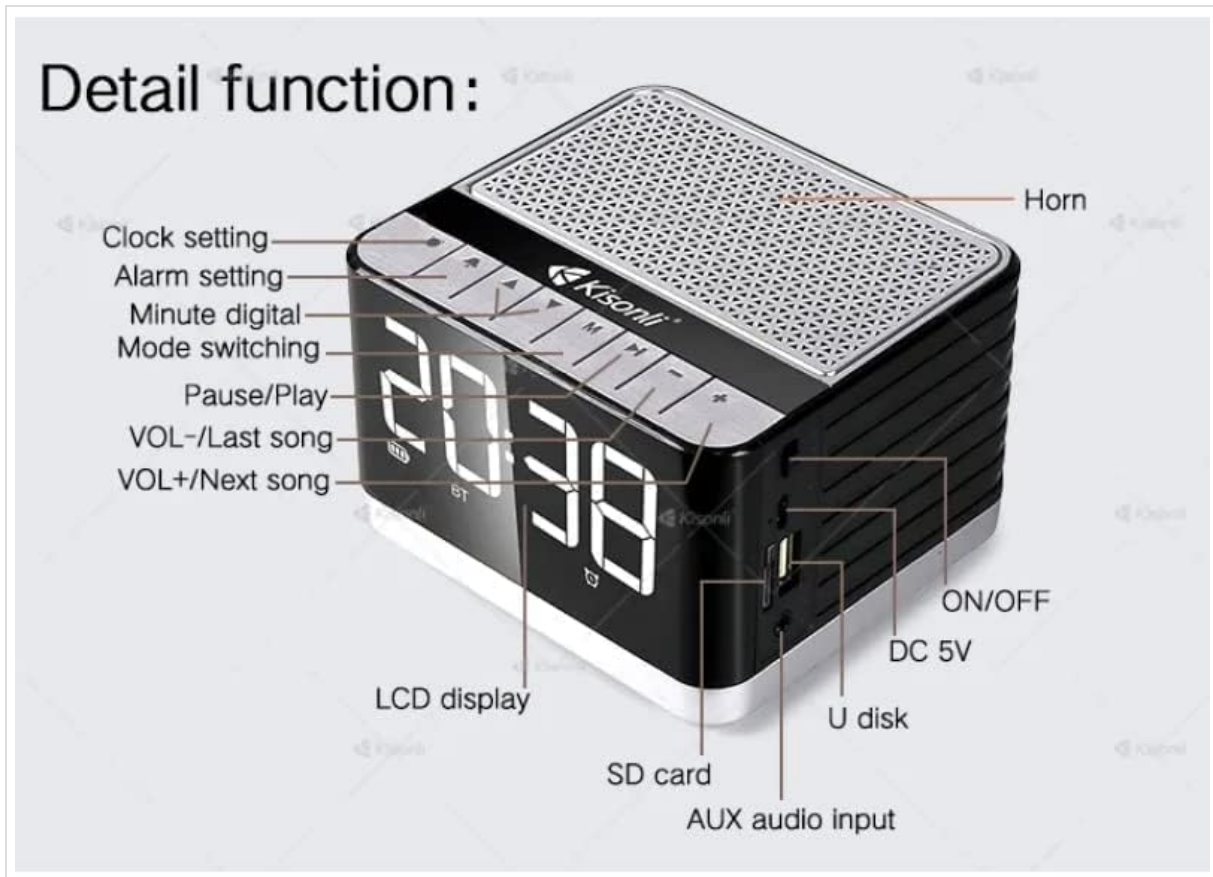


Image: Front and top view of the Kisonli G8 speaker with labels indicating the location and function of buttons, display, and ports.

Controls and Ports:

- **Horn:** Speaker output.
- **Clock Setting:** Button for adjusting time.
- **Alarm Setting:** Button for setting alarms.
- **Minute Digital:** Button for minute adjustment.
- **Mode Switching (M):** Button to cycle through input modes (Bluetooth, FM, USB, SD, AUX).
- **Pause/Play:** Button for media playback control.
- **VOL-/Last Song:** Button to decrease volume or skip to the previous track.
- **VOL+/Next Song:** Button to increase volume or skip to the next track.
- **LCD Display:** Shows time, mode, and other information.
- **ON/OFF Switch:** Power switch for the device.
- **DC 5V:** Micro USB charging port.
- **U Disk (USB):** USB port for media playback.
- **SD Card:** Slot for TF (Micro SD) card media playback.
- **AUX Audio Input:** 3.5mm jack for external audio devices.

SETUP

1. Initial Charging

1. Before first use, fully charge the speaker. Connect the provided USB charging cable to the DC 5V port on the speaker and the other end to a USB power adapter (not included) or a computer USB port.
2. The charging indicator will illuminate. Charging typically takes about 5 hours.
3. Once fully charged, disconnect the charging cable.

2. Powering On/Off

- To power on the speaker, slide the **ON/OFF** switch to the 'ON' position. The LCD display will light up.
- To power off, slide the **ON/OFF** switch to the 'OFF' position.

OPERATING INSTRUCTIONS

1. Clock Setting

1. In standby mode, press the **Clock Setting** button. The hour digits will flash.
2. Use the **VOL+** or **VOL-** buttons to adjust the hour.
3. Press the **Clock Setting** button again. The minute digits will flash.
4. Use the **VOL+** or **VOL-** buttons to adjust the minute.
5. Press the **Clock Setting** button a third time to confirm and exit.

2. Alarm Setting

1. In standby mode, press the **Alarm Setting** button. The alarm hour digits will flash.
2. Use the **VOL+** or **VOL-** buttons to adjust the alarm hour.
3. Press the **Alarm Setting** button again. The alarm minute digits will flash.
4. Use the **VOL+** or **VOL-** buttons to adjust the alarm minute.
5. Press the **Alarm Setting** button a third time to confirm and activate the alarm. An alarm icon will appear on the display.
6. To deactivate the alarm, press the **Alarm Setting** button until the alarm icon disappears.

3. Mode Switching

- Press the **Mode Switching (M)** button repeatedly to cycle through available input modes: Bluetooth, FM Radio, USB, SD Card, and AUX. The current mode will be indicated on the LCD display.

4. Bluetooth Mode

1. Switch the speaker to Bluetooth mode using the **Mode Switching (M)** button. The display will show 'BT' and a flashing Bluetooth icon, indicating it's ready for pairing.
2. On your mobile device, enable Bluetooth and search for available devices. Select 'Kisonli G8' from the list.
3. Once paired, the Bluetooth icon on the speaker's display will stop flashing. You can now play audio from your device.
4. **Controls in Bluetooth Mode:**
 - Press **Pause/Play** to play or pause music.
 - Press **VOL+** briefly for the next track; press and hold to increase volume.
 - Press **VOL-** briefly for the previous track; press and hold to decrease volume.
 - For incoming calls, press **Pause/Play** to answer; press again to hang up.

5. FM Radio Mode

1. Switch the speaker to FM Radio mode using the **Mode Switching (M)** button. The display will show the FM frequency.
2. Press and hold the **Pause/Play** button to initiate an automatic channel search. The speaker will scan and save available FM stations.
3. Once scanning is complete, use the **VOL+** or **VOL-** buttons to navigate between saved stations.

6. USB / SD Card Playback

1. Insert a USB flash drive into the **U Disk (USB)** port or a TF (Micro SD) card into the **SD Card** slot.
2. The speaker will automatically switch to the corresponding mode and begin playing audio files. If not, use the **Mode Switching (M)** button to select the correct mode.
3. Use the **Pause/Play**, **VOL+**, and **VOL-** buttons to control playback as described in Bluetooth mode.

7. AUX Input Mode

1. Connect one end of the provided 3.5mm AUX audio cable to the **AUX Audio Input** port on the speaker.
2. Connect the other end of the cable to the headphone jack of your external audio device (e.g., computer, tablet, mobile phone).
3. Switch the speaker to AUX mode using the **Mode Switching (M)** button. The display will show 'AUX'.
4. Control audio playback directly from your connected external device. The speaker's volume controls will still function.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use for extended periods.
- **Water Exposure:** This speaker is not waterproof. Avoid exposure to water or high humidity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted. Power switch is off.	Charge the speaker for at least 30 minutes. Ensure the ON/OFF switch is in the 'ON' position.
No sound from speaker.	Volume is too low. Incorrect mode selected. Device not connected properly.	Increase the speaker volume and the volume on your connected device. Press the 'M' button to select the correct input mode. Reconnect your device.
Bluetooth pairing fails.	Speaker not in pairing mode. Device too far. Interference.	Ensure the speaker is in Bluetooth mode with a flashing 'BT' icon. Move your device closer to the speaker (within 10 meters). Turn off other Bluetooth devices nearby.
FM radio static or poor reception.	Weak signal. Environmental interference.	Relocate the speaker to an area with better reception. Perform an automatic channel search again.
USB/SD card not playing.	Incorrect file format. Card/drive not inserted correctly.	Ensure audio files are in a supported format (e.g., MP3). Reinsert the USB drive or SD card firmly.

SPECIFICATIONS

Feature	Detail
Model	G8
Bluetooth Version	V5.0+EDR
RF Range	10 meters (without obstacles)
Speaker Output	Φ40* 5W *4Ω + vibrating diaphragm
Microphone	Built-in
Profiles Supported	A2DP, AVRCP, HFP, HSP
Battery	Rechargeable 2000mAh Li-polymer battery
Playing Time	Up to 10 hours
Charging Time	Approximately 5 hours
Charging Means	Micro USB (DC 5V)
Display Type	LCD
Material	Polyvinyl Chloride (PVC)
Dimensions	11.3 x 11.2 x 10.5 cm
Weight	400 g

WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. Please refer to your purchase documentation for specific warranty terms and duration. For technical support or warranty claims, please contact your retailer or the Kisonli customer service department.

Keep your purchase receipt as proof of purchase for warranty purposes.