

SYNOKE SY9468

SYNOKE SY9468 Men's Digital Silicone Sports Watch

Instruction Manual

1. INTRODUCTION

This manual provides detailed instructions for the SYNOKE SY9468 Men's Digital Silicone Sports Watch. This watch features a durable silicone strap, a clear digital display, and a range of functions including a backlight, shock resistance, alarm, and stopwatch. Please read this manual carefully to ensure proper use and maintenance of your watch.

2. PRODUCT OVERVIEW

Familiarize yourself with the main components and buttons of your SYNOKE SY9468 watch.



Image 1: Front view of the SYNOKE SY9468 Digital Sports Watch. The watch features a black silicone strap and a round black case with a digital display. Visible buttons are labeled 'LIGHT' (top left), 'START' (top right), 'MODE' (bottom left), and 'RESET' (bottom right). The display shows '9:22' and '09' with '1/100S CHRONO' and 'SYNOKE' branding.

- **LIGHT Button (Top Left):** Activates the backlight for visibility in low light conditions.
- **START Button (Top Right):** Used to start/stop functions like the stopwatch or to adjust settings.
- **MODE Button (Bottom Left):** Cycles through different modes (Time, Stopwatch, Alarm).
- **RESET Button (Bottom Right):** Used to reset functions or confirm settings.

3. SETUP AND BASIC OPERATION

3.1 Setting Time and Date

1. From the normal time display, press the **MODE** button three times to enter time setting mode. The seconds digits will flash.
2. Press the **RESET** button to zero out the seconds.
3. Press the **START** button to move to the hour setting. The hour digits will flash.
4. Press the **RESET** button to adjust the hour. Pay attention to the 'A' (AM) or 'P' (PM) indicator for 12-hour format, or cycle through to 24-hour format.
5. Press the **START** button to move to the minute setting. The minute digits will flash.
6. Press the **RESET** button to adjust the minutes.
7. Continue pressing **START** to cycle through month, date, and day of the week settings, adjusting each with the **RESET** button.
8. Once all settings are complete, press the **MODE** button to return to the normal time display.

3.2 Using the Backlight

Press the **LIGHT** button (top left) to illuminate the display for a few seconds. This is useful in dark environments.

4. OPERATING INSTRUCTIONS

4.1 Stopwatch Function

1. From the normal time display, press the **MODE** button once to enter stopwatch mode. The display will show '00:00:00'.
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. Press the **RESET** button to reset the stopwatch to '00:00:00'.
5. To resume timing after pausing, press **START**.
6. Press the **MODE** button to exit stopwatch mode and return to the normal time display.

4.2 Alarm Function

1. From the normal time display, press the **MODE** button twice to enter alarm setting mode. The hour digits of the alarm time will flash.
2. Press the **RESET** button to adjust the alarm hour.
3. Press the **START** button to move to the minute setting. The minute digits will flash.
4. Press the **RESET** button to adjust the alarm minutes.
5. Press the **MODE** button to exit alarm setting mode.
6. To turn the alarm ON/OFF, in alarm mode, press the **START** button. An alarm icon will appear/disappear to indicate its status.

5. MAINTENANCE

5.1 Water Resistance

This watch is designed to be water-resistant for daily use, such as accidental splashes or rain exposure. **It is not suitable for swimming, showering, or diving.** Avoid pressing buttons underwater to prevent water ingress.

5.2 Cleaning

Wipe the watch case and strap with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners, as they may damage the watch's finish or seals.

5.3 Battery Replacement

When the display becomes dim or the watch stops functioning, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure the water resistance seal is properly maintained.

6. TROUBLESHOOTING

- **Display is blank or dim:** Check the battery. If the issue persists after battery replacement, contact support.
- **Buttons not responding:** Ensure the watch is not in a locked mode (if applicable, though this model does not feature one). Try resetting the watch by removing and reinserting the battery (professional assistance recommended).
- **Time is inaccurate:** Re-set the time following the instructions in Section 3.1. If the problem continues, the watch movement may require servicing.
- **Water inside the watch:** Immediately stop using the watch and seek professional repair to prevent further damage.

7. SPECIFICATIONS

Feature	Detail
Brand Name	SYNOKE
Model Number	SY9468
Item Type	Wristwatches
Display Type	Digital
Movement Type	Quartz
Power Source	Battery Powered
Case Shape	Round
Case Diameter	40 mm
Band Material Type	Silicone
Band Color	Black
Clasp Type	Buckle (Tang Clasp)
Water Resistance	Rain resistant (not for swimming/showering)
Features	Backlight, Shock Resistant, LED Display, Alarm, Week Display, Luminous Hands
Department	Men
First Available Date	June 1, 2021

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the point of purchase or contact your retailer. Keep your purchase receipt as proof of purchase for any warranty claims.

