

[Manuals.plus](#) /

› [Remax](#) /

› Remax RB-X6 Wireless Karaoke Speaker User Manual

Remax RB-X6

Remax RB-X6 Wireless Karaoke Speaker User Manual

Model: RB-X6

INTRODUCTION

Thank you for choosing the Remax RB-X6 Wireless Karaoke Speaker. This portable speaker system is designed to provide high-quality audio and an enjoyable karaoke experience with its powerful output and dual wireless microphones. Please read this manual carefully to ensure proper use and maintenance of your device.

PRODUCT FEATURES

- **Powerful Audio Output:** Equipped with 51 Watts of rated power for clear and robust sound.
- **Dual Wireless Microphones:** Comes with two microphones for duet performances or interactive sessions.
- **Portable Design:** Features a compact and easily movable design, ideal for various settings.
- **Multiple Connectivity Options:** Supports wireless connectivity, USB, TF memory card, and AUX input.
- **Long Battery Life:** Offers approximately 5 hours of operating time and 35 hours of standby time.
- **Wide Compatibility:** Compatible with a variety of devices.



Figure 1: Remax RB-X6 speaker highlighting key features like 51W output, 5h play time, and 35h standby time.

PACKAGE CONTENTS

Please check the package for the following items:

- Remax RB-X6 Wireless Karaoke Speaker
- Two (2) Wireless Microphones
- Charging Cable (USB)
- AUX Cable
- User Manual (this document)



Figure 2: The retail packaging of the Remax RB-X6 Wireless Karaoke Speaker, showing the speaker and its accessories.

SETUP

1. **Charging the Speaker:** Before first use, fully charge the speaker using the provided USB charging cable. Connect the cable to the speaker's charging port and a compatible USB power adapter (not included). The charging indicator will show the charging status.
2. **Powering On:** Press and hold the power button on the speaker to turn it on. You will hear an audible prompt indicating it's ready.
3. **Microphone Setup:** Ensure the wireless microphones are charged (if applicable) and powered on. They should automatically pair with the speaker.
4. **Connecting to a Device (Wireless):**
 - Activate wireless on your device (smartphone, tablet, etc.).
 - Search for "RB-X6" in the list of available devices.
 - Select "RB-X6" to pair. A confirmation sound will indicate successful connection.
5. **Connecting to a Device (AUX/USB/TF Card):**
 - **AUX:** Connect one end of the AUX cable to the speaker's AUX input and the other end to your audio source's headphone jack.
 - **USB:** Insert a USB flash drive with audio files into the USB port.
 - **TF Card:** Insert a TF (microSD) memory card with audio files into the TF card slot.

OPERATING INSTRUCTIONS

Speaker Controls

The speaker features an intuitive control panel. Refer to the diagram below for button functions (if available, otherwise describe):



Figure 3: Top view of the Remax RB-X6 speaker, showing the control panel and microphone holders.

- **Power Button:** Press and hold to turn on/off. Short press to switch modes (Wireless, AUX, USB, TF).
- **Volume Knobs:** Separate knobs for master volume, microphone volume, and echo effect.
- **Playback Controls:** Play/Pause, Next Track, Previous Track buttons for media playback.

Using the Microphones

- Ensure microphones are powered on and paired with the speaker.
- Adjust the microphone volume knob on the speaker's control panel to your desired level.
- Use the echo knob to add reverberation to your vocals for a karaoke effect.
- For optimal sound, hold the microphone approximately 2-5 cm from your mouth.

Mode Switching

Short press the 'Mode' button (often integrated with the power button or a dedicated button) to cycle through available input modes: Wireless, AUX, USB, and TF Card.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker and microphones. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use for extended periods.
- **Avoid Water:** This device is not waterproof. Keep it away from water and high humidity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power/Speaker won't turn on.	Battery is low or depleted.	Charge the speaker fully using the provided USB cable.
No sound from speaker.	Volume is too low; Incorrect input mode; Device not paired.	Increase speaker volume. Ensure correct input mode is selected. Re-pair the device if using wireless.
Microphones not working.	Microphones are off or not paired; Microphone volume is low.	Ensure microphones are powered on and paired. Increase microphone volume on the speaker.
Poor sound quality/distortion.	Volume too high; Device too far from speaker; Interference.	Lower the volume. Move the connected device closer to the speaker. Avoid sources of strong electromagnetic interference.

SPECIFICATIONS

Feature	Detail
Brand Name	Remax
Item Model Number	RB-X6
Maximum Speaker Output Power	51 Watts
Connectivity Technology	Wireless
Audio Output Mode	Surround
Mounting Type	Tabletop
Speaker Type	Karaoke Speakers
Special Features	Wireless, Portable
Compatible Devices	Multiple
Color	Black
Battery Life	35 hours (Standby) / Approx. 5 hours (Operating)
Package Dimensions	54.8 x 36 x 34.2 cm; 6.38 Kilograms
Date First Available	June 1, 2021

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Remax website. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance, you may contact Remax customer service through their official channels.

© 2024 Remax. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page
<https://manuals.plus/asin/B0969FXGHB>
More documents and user manuals: <https://manuals.plus/>