

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Workmas](#) /

› Replacement TURNTABLE BELT for AIWA AF-5050, AP-B20/C, X-100D

Workmas Does not apply

Replacement Turntable Belt User Manual

For AIWA AF-5050, AP-B20/C, X-100D Turntables

Brand: Workmas

INTRODUCTION

This manual provides essential information for the installation, operation, and maintenance of your Workmas replacement turntable belt. This belt is specifically designed for use with AIWA AF-5050, AP-B20/C, and X-100D turntable models to restore proper platter rotation and audio playback.

PRODUCT OVERVIEW

The Workmas replacement turntable belt is a precision-engineered component made from durable rubber. It serves as the crucial link between the turntable's motor and the platter, ensuring consistent speed and smooth rotation for optimal audio fidelity. Regular replacement of worn belts is vital for maintaining the performance of your turntable.





Image: A black, flexible rubber belt, shaped like an elongated oval, designed for turntable mechanisms. This belt is a replacement part for specific AIWA turntable models.

SETUP AND INSTALLATION

Before beginning, ensure your turntable is unplugged from the power outlet to prevent electrical shock or damage to the unit.

1. **Access the Platter Mechanism:** Carefully remove the turntable's platter. This usually involves lifting it straight up or removing a retaining clip/screw. Consult your specific AIWA turntable's original manual for precise instructions on platter removal.
2. **Remove the Old Belt:** Locate the old, worn, or broken belt. Gently remove it from both the motor pulley and the inner rim of the platter or sub-platter. Dispose of the old belt responsibly.
3. **Clean the Belt Path:** Use a clean, lint-free cloth and a small amount of isopropyl alcohol to clean any residue from the motor pulley and the platter's inner rim. This ensures optimal grip for the new belt.
4. **Install the New Belt:** Carefully loop the new Workmas replacement belt around the motor pulley. Then, stretch the belt gently and evenly around the inner rim of the platter or sub-platter. Ensure the belt is not

twisted and sits flat in its groove.

- 5. Reassemble the Turntable:** Carefully place the platter back onto the spindle, ensuring it seats correctly. Rotate the platter manually a few times to confirm the belt is properly aligned and moves freely without rubbing against any components.
- 6. Test Operation:** Plug in your turntable and test its operation at both 33 1/3 RPM and 45 RPM (if applicable) to ensure stable speed and smooth rotation.

OPERATING PRINCIPLES

Once installed, the replacement belt facilitates the transfer of rotational energy from the turntable's motor to the platter. The belt's consistent tension and material properties are crucial for maintaining accurate playback speed (RPM) and minimizing wow and flutter, which are variations in pitch caused by speed fluctuations. A properly installed belt ensures your records play back at the correct speed, preserving the intended sound quality.

MAINTENANCE

- Regular Inspection:** Periodically inspect the belt for signs of wear, stretching, cracking, or stickiness. A worn belt can lead to inconsistent playback speed.
- Cleaning:** If dust or debris accumulates on the belt or pulleys, gently clean them with a dry, lint-free cloth. Avoid using harsh chemicals that could degrade the rubber.
- Storage:** If the turntable is to be stored for an extended period, it is sometimes recommended to remove the belt to prevent it from developing flat spots or stretching under constant tension, though for short periods this is not necessary.
- Replacement Interval:** The lifespan of a turntable belt varies depending on usage and environmental factors. As a general guideline, consider replacing the belt every 3-5 years, or sooner if performance issues arise.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Platter not spinning or spinning too slowly.	Belt is broken, stretched, or dislodged.	Inspect the belt. Reinstall if dislodged, replace if broken or excessively stretched.
Inconsistent speed (wow and flutter).	Worn, dirty, or incorrect belt.	Clean the belt and pulleys. If problem persists, replace the belt. Ensure it's the correct size.
Belt slipping off.	Improper installation, dirty pulleys, or stretched belt.	Reinstall the belt correctly. Clean pulleys. If still slipping, the belt may be stretched and require replacement.

SPECIFICATIONS

Product Type: Replacement Turntable Belt

Brand: Workmas

Material: High-quality Rubber

Compatibility: AIWA AF-5050, AIWA AP-B20/C, AIWA X-100D Turntables

Part Number: Does not apply (as per manufacturer information)

ASIN: B0969G2C4D

UPC: 308208989906

WARRANTY AND SUPPORT

Workmas stands behind the quality of its products. For any issues or questions regarding your replacement turntable belt, please contact the seller or Workmas customer support through the platform where the purchase was made. Please refer to your purchase receipt for specific warranty details and return policies. For technical assistance related to your AIWA turntable, please consult the original AIWA service manual or contact AIWA support directly.

© 2024 Workmas. All rights reserved.

This manual is for informational purposes only. Always exercise caution when working with electronic devices.