

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY RM-GD020 Replacement Remote Control User Manual for Sony TV Models KDL-32CX520, KDL-46EX520, KDL-32EX520, KDL-46CX520, KDL-40CX520, KDL-40EX520, KDL-32EX420, KDL-22EX420, KDL-22CX520, KDL-32CX523, KDL-26EX420

ECONTROLLY RM-GD020

ECONTROLLY RM-GD020 Replacement Remote Control User Manual

For Sony TV Models: KDL-32CX520, KDL-46EX520, KDL-32EX520, KDL-46CX520, KDL-40CX520, KDL-40EX520, KDL-32EX420, KDL-22EX420, RM-ED045, KDL-22CX520, KDL-32CX523, KDL-26EX420

1. INTRODUCTION

This manual provides comprehensive instructions for the ECONTROLLY RM-GD020 replacement remote control. This remote is designed to function as a direct replacement for your original Sony TV remote, offering stable performance and covering all essential functions. No programming is required; simply install batteries to begin use.

Compatible Sony TV Models: KDL-32CX520, KDL-46EX520, KDL-32EX520, KDL-46CX520, KDL-40CX520, KDL-40EX520, KDL-32EX420, KDL-22EX420, RM-ED045, KDL-22CX520, KDL-32CX523, KDL-26EX420.

2. PRODUCT OVERVIEW

The ECONTROLLY RM-GD020 remote control features a standard layout for intuitive operation of your Sony TV. Below is an image of the remote with a description of its key buttons and functions.



Figure 1: ECONTROLLY RM-GD020 Replacement Remote Control. This image displays the full remote control, a black rectangular device with numerous buttons arranged in a standard television remote layout. The top features power and input buttons, followed by media controls, navigation, number pad, and volume/channel controls at the bottom.

Button Functions:

- **Power (I/O)**: Turns the TV on or off.
- **TrackID**: Accesses the TrackID feature (if supported by TV).
- **i-MANUAL**: Displays the TV's on-screen instruction manual.
- **DIGITAL/ANALOG**: Switches between digital and analog TV channels.
- **Media Control Buttons (Rewind, Play/Pause, Fast Forward, Stop)**: Controls playback of media content.
- **SCENE**: Selects a scene mode for optimized picture and sound settings.
- **INTERNET VIDEO**: Accesses internet video services.
- **SYNC MENU**: Displays the BRAVIA Sync menu for connected devices.
- **GUIDE**: Displays the electronic program guide.
- **RETURN**: Returns to the previous screen or menu.
- **HOME**: Accesses the TV's main menu or home screen.
- **OPTIONS**: Displays context-sensitive options for the current screen.
- **Navigation Pad (Up, Down, Left, Right, Enter)**: Navigates through menus and confirms selections.
- **Colored Buttons (Red, Green, Yellow, Blue)**: Function varies depending on the on-screen prompts.
- **Number Buttons (0-9)**: Directly selects channels or inputs numerical data.
- **PROG (+/-)**: Changes TV channels up or down.
- **VOL (+/-)**: Adjusts the volume level.
- **Mute**: Mutes or unmutes the TV sound.
- **AUDIO**: Selects the audio track or mode.

3. SETUP

3.1 Battery Installation

The RM-GD020 remote control requires two (2) AAA alkaline batteries for operation. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Note: This remote control does not require any programming. Once batteries are installed, it is ready for immediate use with compatible Sony TV models.

4. OPERATING INSTRUCTIONS

Once batteries are installed, point the remote control directly at your Sony TV. Ensure there are no obstructions between the remote and the TV's infrared sensor.

4.1 Basic TV Control

- **Power On/Off**: Press the **Power (I/O)** button.
- **Volume Adjustment**: Use the **VOL +** to increase volume and **VOL -** to decrease volume.
- **Mute Sound**: Press the **Mute** button to silence the TV. Press again to restore sound.
- **Channel Selection**: Use **PROG +** or **PROG -** to change channels sequentially. Alternatively, use the **Number Buttons (0-9)** to directly enter a channel number.
- **Input/Source**: The remote does not have a dedicated "Input" button, but you can often access input selection through the **HOME** or **OPTIONS** menu on your TV.

4.2 Menu Navigation

- **Accessing Menus:** Press the **HOME** button to open the main TV menu. Use **OPTIONS** for context-specific settings.
- **Navigation:** Use the **Up, Down, Left, Right** arrows on the navigation pad to move through menu options.
- **Selection:** Press the **Enter** button (center of navigation pad) to confirm a selection.
- **Return:** Press the **RETURN** button to go back to the previous screen or exit a menu.

5. TROUBLESHOOTING

If you experience issues with your ECONTROLLY RM-GD020 remote control, please refer to the following common solutions:

- **Remote Not Responding:**
 - Ensure the remote is pointed directly at the TV's infrared sensor.
 - Check for any obstructions between the remote and the TV.
 - Verify that the batteries are installed correctly with the correct polarity (+/-).
 - Replace the batteries with new AAA alkaline batteries.
- **Limited Functionality:**
 - While this remote covers most original functions, some advanced or smart TV features might require the original remote or on-screen TV controls.
 - Ensure your TV model is listed as compatible.
- **Intermittent Operation:**
 - This could indicate low battery power. Replace batteries.
 - Strong ambient light (e.g., direct sunlight) can sometimes interfere with infrared signals.

6. SPECIFICATIONS

Model Number	RM-GD020
Brand	ECONTROLLY
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	1 ounces
Batteries Required	2 AAA batteries
Compatible Devices	Television (Sony TV models listed in Introduction)
Special Feature	Ergonomic

7. MAINTENANCE

To ensure the longevity and optimal performance of your remote control:

- Avoid exposing the remote to extreme temperatures, direct sunlight, or high humidity.
- Do not drop the remote or subject it to strong impacts.
- Clean the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.

- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

8. WARRANTY AND SUPPORT

This ECONTROLLY product is covered by the manufacturer's standard warranty. For specific warranty details, please refer to the product packaging or contact ECONTROLLY customer support.

For technical assistance or support, please contact ECONTROLLY customer service through their official channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question