

[Manuals.plus](#) /

> [CHENFEC](#) /

> CHENFEC C50 16GB MP3 Player User Manual

## CHENFEC C50

# CHENFEC C50 16GB MP3 Player User Manual

Model: C50 | Brand: CHENFEC

## INTRODUCTION

---

This manual provides detailed instructions for the operation and maintenance of your CHENFEC C50 16GB MP3 Player. Please read this guide thoroughly to ensure proper use and to maximize your device's functionality.



Image: The CHENFEC C50 MP3 Player, showcasing its compact design and rear clip.

## PRODUCT OVERVIEW

---

Familiarize yourself with the various components and controls of your CHENFEC C50 MP3 Player.



Image: A detailed diagram of the CHENFEC C50 MP3 Player, indicating the display, volume controls, Micro SD card slot, return button, navigation buttons (last, play/pause, next, next song, last song).

- **Display:** Shows menus, track information, images, and e-book content.
- **Volume Up/Down:** Adjusts the audio output level.
- **Micro SD Card Slot:** For expanding storage up to 64GB.
- **Return Button:** Navigates back to the previous menu or screen.
- **Navigation Buttons (Last Song, Next Song, Play/Pause):** Controls media playback and menu navigation.

## SETUP

---

### Package Contents

Before starting, ensure all items are present in the package:



Image: The CHENFEC C50 MP3 Player and its accessories, including wired earphones, a USB charging/data cable, and a user manual.

- CHENFEC C50 MP3 Player
- USB Charging/Data Cable
- Wired Earphones
- User Manual (this document)

## Charging the Device

Connect the MP3 player to a computer's USB port or a compatible USB wall adapter using the provided USB cable. The battery indicator on the screen will show charging status. A full charge typically takes 2-3 hours.

## Powering On/Off

- To power on, press and hold the Power button (usually located on the side or top) until the screen illuminates.
- To power off, press and hold the Power button until the "Power Off" option appears, then select it.

## Loading Music and Files

- **Internal Storage:** Connect the MP3 player to your computer using the USB cable. The device will appear as a removable disk. Drag and drop your music (MP3, WAV) and other supported files (TXT for e-books, images) into the appropriate folders on the device.
- **External Storage:** Insert a Micro SD card (up to 64GB, not included) into the Micro SD card slot. You can then transfer files directly to the card via the player or by inserting the card into a computer's card reader.

## OPERATING INSTRUCTIONS

---

### Basic Navigation

- Use the **Up/Down** navigation buttons to scroll through menu options.
- Press the **Play/Pause** button to select an option or confirm an action.
- Press the **Return** button to go back to the previous menu.

## Music Playback

1. From the main menu, select "Music".
2. Browse your music library by artist, album, or all songs.
3. Select a song and press **Play/Pause** to begin playback.
4. Use **Last Song** and **Next Song** buttons to skip tracks.
5. Adjust volume using the **Volume Up/Down** buttons.

## Bluetooth Connectivity

The CHENFEC C50 supports Bluetooth for wireless audio output to compatible headphones or speakers.



Image: The CHENFEC C50 MP3 Player demonstrating its Bluetooth connectivity with wireless headphones and a portable Bluetooth speaker.

1. From the main menu, select "Bluetooth".
2. Ensure your Bluetooth headphones or speaker are in pairing mode.
3. The player will scan for available devices. Select your device from the list.
4. Once paired, audio will be routed wirelessly.

## FM Radio

1. Plug in wired earphones (they act as the antenna).
2. From the main menu, select "FM Radio".
3. Use the navigation buttons to scan for stations or manually tune to a frequency (87.5MHz - 108MHz).

## Voice Recorder

1. From the main menu, select "Voice Recorder".
2. Choose "Start Recording" to begin.
3. Press **Play/Pause** to stop and save the recording.
4. Recordings are saved in WAV or MP3 format.

## E-book Reader

1. Transfer TXT format e-books to the device's storage.
2. From the main menu, select "E-book".
3. Select the desired book to open and read.

## Image Viewer

1. Transfer image files to the device's storage.
2. From the main menu, select "Image Viewer".
3. Browse and select images to view them on the display.

## Settings

Access the "Settings" menu to customize various options:

- **Language:** Select from 24 supported languages, including English, German, French, Italian, Dutch, Portuguese, Spanish, and Russian.
- **Sound Effects:** Choose from 7 different equalizer presets.
- **Display Settings:** Adjust brightness and backlight timeout.
- **Date & Time:** Set the current date and time.

## MAINTENANCE

---

- Keep the device dry. Avoid exposure to moisture or liquids.
- Clean the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid dropping the device or subjecting it to strong impacts.
- Store the device in a cool, dry place when not in use.
- Do not attempt to disassemble or repair the device yourself. This will void the warranty.

## TROUBLESHOOTING

---

Problem	Possible Solution
Device does not power on.	Ensure the device is fully charged. Connect it to a power source and try again.
No sound from earphones.	Check if earphones are properly plugged in. Verify volume level. Test with different earphones.
Cannot connect via Bluetooth.	Ensure Bluetooth is enabled on both the player and the receiving device. Make sure the receiving device is in pairing mode and within range.
Files not appearing on the device.	Ensure files are in supported formats (MP3, WAV for audio; TXT for e-books). Verify files were transferred to the correct folder. Check if the Micro SD card is properly inserted and recognized.
Device freezes or becomes unresponsive.	Press and hold the Power button for 10-15 seconds to force a restart. If the issue persists, try resetting the device (refer to the settings menu for a reset option, if available).

## SPECIFICATIONS

---

Feature	Detail
---------	--------

Feature	Detail
Brand Name	CHENFEC
Model Name	C50
Memory Storage Capacity	16 GB (Internal)
External Storage Support	Up to 64 GB Micro SD Card
Body Material	Plastic
Special Features	FM Radio, Voice Recorder, Image Viewer, E-book Reader, Pedometer, Bluetooth
Connectivity Technology	Bluetooth
Color	Black
Screen Size	2 inches
Compatible Devices	Laptop, Personal Computer
Supported Audio Standards	MP3, WAV (for recording)
Supported E-book Format	TXT
FM Radio Frequency	87.5MHz ~ 108MHz
Sound Effects	7 types
Supported Languages	24 languages (e.g., English, German, French, Italian, Dutch, Portuguese, Spanish, Russian)

## WARRANTY AND SUPPORT

---

For warranty information and technical support, please refer to the documentation provided with your purchase or contact CHENFEC customer service. Keep your proof of purchase for warranty claims.

**Important:** Any unauthorized attempts to repair or modify the device will void the product warranty.

