

Nixplay W10K

Nixplay Digital Touch Screen Picture Frame W10K User Manual

Model: W10K

Brand: Nixplay

1. INTRODUCTION

This manual provides comprehensive instructions for setting up, operating, and maintaining your Nixplay Digital Touch Screen Picture Frame W10K. This 10.1-inch Wi-Fi enabled photo frame allows you to easily share and display your most cherished photos and videos with family and friends.


2. KEY FEATURES

- **10.1-inch Touch Screen Display:** Intuitive touch controls for easy navigation.
- **Wi-Fi Connectivity:** Seamlessly connect to your home network for content updates.
- **Nixplay Mobile App:** Upload photos and videos directly from iOS/Android devices.
- **Multiple Content Sources:** Transfer content from Apple Photos, Facebook, Instagram, and via email. Google Photos integration may require a subscription.
- **Pre-load Content:** Prepare the frame with photos and videos before gifting.
- **AI-Enhanced Display:** Features like smart-centering and automatic rotation for optimal viewing.
- **Customizable Slideshow Settings:** Adjust display modes and transitions.
- **NixCast & NixEvents:** Cast content to smart TVs and enable shared albums for events.
- **Secure Cloud Storage:** Photos are stored on CCPA & GDPR-compliant encrypted servers in the USA.
- **Adjustable Stand:** Supports both portrait and landscape orientations.

3. SETUP INSTRUCTIONS

Follow these steps to set up your Nixplay Digital Touch Screen Picture Frame W10K:

1. **Unpack the Frame:** Carefully remove the frame and all accessories from the packaging.
2. **Attach the Stand:** Securely attach the adjustable stand to the back of the frame. The stand allows for both portrait and landscape orientations.
3. **Power On:** Plug the power adapter into the frame and then into a wall outlet. The frame will automatically power on.
4. **Initial Setup:** Follow the on-screen prompts to select your language and connect to your Wi-Fi network. You will need your Wi-Fi network name and password.
5. **Download the Nixplay App:** Download the Nixplay mobile app from the App Store (iOS) or Google Play Store (Android). You can also access the Nixplay website for desktop login.
6. **Create an Account:** Open the app and create a Nixplay account, or log in if you already have one.
7. **Connect Your Frame:** Follow the app's instructions to link your new frame to your Nixplay account. This typically involves scanning a QR code displayed on the frame or entering a unique code.

 **Easy touchscreen setup**




 **Motion Sensor detects movement, turning the frame on and off automatically**

Image: The Nixplay frame displaying touchscreen setup instructions, highlighting its ease of use.



Power supply will be replaced with EU/UK adaptor for purchases in EU/UK.

Image: Contents of the Nixplay frame box, including the frame, power adapter, and setup guide.

4. OPERATING INSTRUCTIONS

4.1 Adding Photos and Videos

- **Via Nixplay App:** Use the mobile app to select photos and videos from your device's gallery or linked social media accounts (Apple Photos, Facebook, Instagram, Google Photos - subscription may be required for Google Photos).
- **Via Website:** Log in to your Nixplay account on a web browser to upload content.
- **Via Email:** Each frame has a unique email address. Send photos and videos directly to this address.

Use the Nixplay App to add photos



Image: A smartphone screen showing the Nixplay App interface for selecting and adding photos to the frame.

4.2 Managing Playlists and Settings

- **Create Playlists:** Organize your content into custom playlists through the app or website.
- **Invite Family/Friends:** Share your frame's unique code to allow others to contribute photos and videos to your playlists.
- **Slideshow Settings:** Customize transition effects, display duration, and shuffle options via the app or directly on the frame's touchscreen.
- **Auto-Rotation:** The frame automatically adjusts content orientation (landscape or portrait) based on its physical placement.
- **AI Smart-Centering:** Images are automatically adjusted to be perfectly centered within the frame.

4.3 Advanced Features

- **NixCast:** Use the Nixplay app to cast photos and videos from your frame to a compatible smart TV.
- **NixEvents:** Create shared albums for events, allowing guests to easily contribute their photos for a real-time slideshow.

Video: An overview of the Nixplay Digital Photo Frame with Touchscreen, demonstrating its features and ease of use.

5. MAINTENANCE

- **Cleaning the Screen:** Use a soft, lint-free cloth to gently wipe the touch screen. Avoid abrasive cleaners or sprays directly on the screen.
- **Cleaning the Frame:** Wipe the frame's exterior with a soft, dry cloth.
- **Software Updates:** Ensure your frame's software is up-to-date by checking for updates through the Nixplay app or the frame's settings menu. Regular updates provide new features and performance improvements.

6. TROUBLESHOOTING

- **Frame Not Turning On:** Ensure the power adapter is securely connected to both the frame and a working power outlet.
- **Wi-Fi Connectivity Issues:** Verify your Wi-Fi network is active and the password is correct. Try restarting your router and the frame.
- **Photos Not Appearing:** Check your Nixplay app to ensure photos have been successfully uploaded to the correct playlist and synced with the frame.
- **Incorrect Photo Orientation:** The frame features automatic rotation. If a photo displays incorrectly, ensure the frame is placed on a stable, level surface. You can also manually adjust orientation in the app.
- **Touch Screen Unresponsive:** Try restarting the frame by unplugging it and plugging it back in. If the issue persists, contact customer support.

7. SPECIFICATIONS

Feature	Detail
Screen Size	10.1 Inches
Resolution	1280x800
Product Dimensions	10.55 x 1.54 x 0.99 inches
Item Weight	1.36 pounds
Compatible Devices	Smartphone

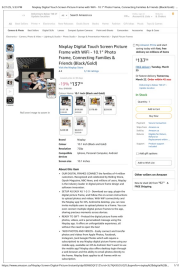





Connectivity	Wi-Fi
Language Support	English, French, German, Japanese

8. WARRANTY AND SUPPORT

For warranty information or technical assistance, please refer to the official Nixplay website or contact Nixplay customer support directly. Keep your purchase receipt for warranty claims.

© 2023 Nixplay. All rights reserved.

Related Documents - W10K

	<p>Nixplay 10.1" Digital Touch Screen WiFi Photo Frame for Connecting Families</p> <p>Discover the Nixplay 10.1-inch WiFi digital touch screen photo frame, designed to connect families and friends. Easily share photos and videos, enjoy a vibrant HD display, and utilize secure cloud storage for cherished memories.</p>
	<p>Nixplay Smart Photo Frame Setup Guide</p> <p>Comprehensive setup guide for the Nixplay Smart Photo Frame 10.1 inch Touch. Follow step-by-step instructions for assembly, power connection, stand placement, and account creation. Includes support contact information and setup links.</p>
	<p>Nixplay W15F Wifi Digital Photo Frame User Guide</p> <p>A comprehensive guide to setting up, using, and troubleshooting your Nixplay W15F Wifi Digital Photo Frame. Learn about the remote control, Wi-Fi connection, account creation, wall mounting, and photo sharing features.</p>
	<p>Nixplay W10K Quick Start Guide</p> <p>A quick start guide for the Nixplay W10K digital photo frame, covering setup, assembly, and connection. Includes contact information and troubleshooting support.</p>
	<p>Nixplay Smart Photo Frame: Quick Start Guide and Setup</p> <p>Comprehensive guide to setting up and using your Nixplay Smart Photo Frame, including remote control functions, wall mounting, app connection, and app features.</p>
	<p>Nixplay W13D-06 Wifi Digital Photo Frame User Guide</p> <p>A comprehensive guide to setting up, using, and mounting your Nixplay W13D-06 Wifi Digital Photo Frame, including remote control operation and account creation.</p>

