

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Havells](#) /

> [Havells Big Fill Multi Grill Sandwich Maker GHCSTDKK090 User Manual](#)

## Havells GHCSTDKK090

# Havells Big Fill Multi Grill Sandwich Maker GHCSTDKK090 User Manual

Model: GHCSTDKK090 | Brand: Havells

## 1. INTRODUCTION

Thank you for choosing the Havells Big Fill Multi Grill Sandwich Maker. This appliance is designed to provide versatile and convenient sandwich preparation. Please read this manual thoroughly before first use to ensure safe and optimal operation. Keep this manual for future reference.

### Important Safety Instructions

- Always ensure the appliance is placed on a stable, heat-resistant surface.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Keep out of reach of children.
- Unplug from the outlet when not in use and before cleaning.
- Do not operate the appliance with a damaged cord or plug.
- Avoid touching hot surfaces. Use handles or knobs.
- Do not use outdoors.

## 2. PRODUCT FEATURES

The Havells Big Fill Multi Grill Sandwich Maker offers a range of features designed for ease of use and versatility:


- **Multi-Grill Functionality:** This appliance serves as a multi-grill sandwich maker, allowing for various cooking styles.
- **3 Interchangeable Plates:** Comes with three sets of detachable non-stick coated plates for different preparations: pocket sandwiches, grill sandwiches, and toast.
- **LED Indicators:** Features LED indicators for 'Power On' (red) and 'Ready' (green) functions, providing clear status updates.
- **Deeper Grooves:** All plates are designed with deeper grooves, accommodating more filling and suitable for bigger size bread.
- **Hinged Lock & Cool Touch Handle:** Equipped with a hinged lock for secure closure during cooking and

a cool-touch handle for safe operation.




Figure 1: Havells Big Fill Multi Grill Sandwich Maker (Closed View)

# BIG FILL MULTI GRILL SANDWICH MAKER

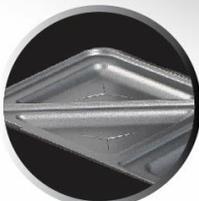

Sandwich Plate

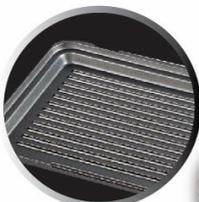

Grill Plate



Toast Plate



Figure 2: The three interchangeable plates: Sandwich, Grill, and Toast.

# LIGHT INDICATOR FOR "POWER ON" & " READY" FUNCTION



Figure 3: Close-up of the LED indicators for power and ready status.



# **HINGED LOCK & COOL TOUCH HANDLE**

Figure 4: The hinged lock and cool-touch handle for secure and safe use.

# NON-STICK PLATES WITH DEEPER GROOVES FOR MORE FILLING



Figure 5: Illustration of the deeper grooves on the non-stick plates, allowing for more filling.

## Product Videos

Video 1: Overview of the Havells Big Fill Multi Grill Sandwich Maker, highlighting its key features and design.

Video 2: Demonstration of the Havells Big Fill Multi Grill Sandwich Maker in use, showcasing its operation and results.

## 3. SETUP

### Unpacking

1. Carefully remove the sandwich maker and all accessories from the packaging.
2. Remove any packaging materials, stickers, or labels.
3. Retain the packaging for storage or in case of return.

### Before First Use

1. Wipe the exterior of the appliance with a damp cloth.
2. Wash the interchangeable plates with warm, soapy water, rinse thoroughly, and dry completely.
3. Ensure the appliance is completely dry before plugging it in.

### **Installing/Removing Plates**

1. Ensure the appliance is unplugged and cool.
2. To install, align the plate with the grooves on the heating element and gently press down until it clicks into place.
3. To remove, locate the plate release buttons (if present, usually near the hinges) or gently lift the plate from the edges until it detaches.
4. Always ensure both upper and lower plates are securely installed before use.

## **4. OPERATION**

### **Preparing for Cooking**

1. Place the sandwich maker on a flat, stable, and heat-resistant surface.
2. Ensure the desired interchangeable plates are correctly installed.
3. Close the lid and plug the appliance into a suitable power outlet (230 Volts). The red 'Power On' indicator light will illuminate.
4. Allow the appliance to preheat. The green 'Ready' indicator light will illuminate when the desired cooking temperature is reached. This typically takes 3-5 minutes.

### **Cooking Your Sandwich**

1. Once the green 'Ready' light is on, carefully open the lid using the cool-touch handle.
2. Place your bread with desired fillings onto the lower plate. For best results, lightly butter or oil the outer sides of the bread.
3. Gently close the lid and secure it with the hinged lock. Do not force the lid shut if the sandwich is too thick.
4. Cook for approximately 3-6 minutes, or until the sandwich is golden brown and the filling is heated through. Cooking time may vary based on bread type, filling, and desired crispness.
5. Periodically check the sandwich by carefully opening the lid.
6. Once cooked, open the lid and carefully remove the sandwich using a heat-resistant plastic or wooden utensil. Avoid metal utensils to prevent scratching the non-stick coating.
7. Unplug the appliance from the power outlet after use.

## **5. MAINTENANCE & CLEANING**

Regular cleaning and maintenance will prolong the life of your Havells Big Fill Multi Grill Sandwich Maker.

### **Cleaning the Plates**

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Remove the interchangeable plates.

3. Wash the plates with warm, soapy water using a soft sponge or cloth. The non-stick coating makes cleaning easy.
4. Rinse thoroughly and dry completely before re-installing or storing.
5. Do not use abrasive cleaners, scouring pads, or metal utensils on the non-stick surfaces.

### Cleaning the Exterior

1. Wipe the exterior housing with a soft, damp cloth.
2. Do not use abrasive cleaners or immerse the main unit in water.

### Storage

Ensure the appliance is clean, dry, and cool before storing. Store it in a dry place, preferably in its original packaging, away from direct sunlight and moisture.

## 6. TROUBLESHOOTING

If you encounter any issues with your sandwich maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not heat up.	Not plugged in correctly; Power outlet malfunction; Appliance fault.	Check if the plug is securely inserted. Test the outlet with another appliance. If the issue persists, contact customer support.
Sandwiches are not cooking evenly.	Uneven bread thickness; Insufficient preheating; Too much filling.	Ensure bread slices are of even thickness. Allow the appliance to fully preheat until the green 'Ready' light illuminates. Do not overfill sandwiches.
Food sticks to the plates.	Plates not properly cleaned; No oil/butter applied; Damaged non-stick coating.	Ensure plates are clean before use. Lightly butter or oil the bread. If coating is damaged, contact customer support for replacement plates.
Lid does not close properly.	Overfilled sandwich; Obstruction.	Reduce the amount of filling. Check for any food debris or obstructions preventing the lid from closing.

If the problem persists after trying these solutions, please contact Havells customer support.

## 7. SPECIFICATIONS

Technical details for the Havells Big Fill Multi Grill Sandwich Maker GHCSTDKK090:

Feature	Specification
Brand	Havells
Model Number	GHCSTDKK090

Feature	Specification
Wattage	900 Watts
Voltage	230 Volts
Colour	Black
Material	Plastic
Product Dimensions	32D x 15.8W x 31H Centimeters
Item Weight	2190 Grams (2 kg 190 g)
Special Feature	Cool Touch, Non Stick Coating
Included Components	1 N Main unit with 3 in 1 detachable non-stick coating plates (1 N Toast plate, 1 N Grill plate, 1 N Sandwich plate)
Warranty Type	Limited Warranty

## 8. WARRANTY & SUPPORT

### Warranty Information

This Havells appliance comes with a limited warranty. Please refer to the warranty card included with your product for specific terms, conditions, and duration of coverage. Keep your purchase receipt as proof of purchase for warranty claims.

### Customer Support

For any product-related queries, service requests, or technical assistance, please contact Havells customer support. Contact details can typically be found on the Havells official website or on the product packaging.

You may also visit the official Havells store on Amazon for more information: [Havells Store](#)