

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SINGER](#) /

› [SINGER Stitch Quick+ Portable Cordless Mending Machine User Manual](#)

SINGER Stitch Quick+

SINGER Stitch Quick+ Portable Cordless Mending Machine User Manual

Model: Stitch Quick+

1. INTRODUCTION

The SINGER Stitch Quick+ is a portable, cordless mending machine designed for quick fixes, small projects, and everyday fabric repairs. It is ideal for tasks such as mending seams, hemming, or crafting. This machine is not intended as a substitute for a full-size sewing machine, especially for thicker fabrics or large-scale projects. For optimal performance and longevity, please read this manual thoroughly before use.



Image 1.1: The SINGER Stitch Quick+ portable mending machine with its accessory kit and storage bag.

2. PRODUCT COMPONENTS

Familiarize yourself with the various parts of your SINGER Stitch Quick+ mending machine to ensure correct operation.



Image 2.1: Labeled diagram of the SINGER Stitch Quick+ machine components.

- **Thread Tension Dial:** Adjusts the tightness of the upper thread.
- **Thread Guides (1-5):** Direct the upper thread through the machine.
- **Bobbin Winding Hole:** Used for winding thread onto bobbins.
- **Handwheel:** Manually raises and lowers the needle.
- **Upper Bobbin:** Holds the upper thread spool.
- **Mode Selector Switch:** Toggles between Handheld, Desktop, and Lock modes.
- **ON/OFF Button:** Activates or deactivates the machine.
- **Handle Storage Recess:** Area for comfortable grip in handheld mode.
- **Thread Take-up Lever:** Controls the flow of the upper thread.
- **Thread Cutter:** Conveniently cuts thread after stitching.
- **Needle Clamp Screw:** Secures the needle in place.
- **Needle:** Pierces the fabric to form stitches.
- **Presser Foot:** Holds the fabric firmly against the feed dogs.
- **Presser Foot Lifter:** Raises and lowers the presser foot.
- **Bobbin Case Cover:** Protects the bobbin compartment.
- **Bobbin Case & Bottom Bobbin:** Holds the lower thread.
- **Attached Rear Battery Cover:** Secures the battery compartment.

Included Accessories

The Stitch Quick+ bundle includes a 39-piece sewing accessory kit to get you started immediately.



Image 2.2: Contents of the sewing notion starter pack, including thread, bobbins, needles, and tools.

- 5 Machine Needles
- 1 Needle Threader
- 1 Seam Ripper
- 16 Polyester Thread Spools in Assorted Colors (25 yards each)
- 16 Matching Colored Bobbins

- Drawstring Storage Bag

3. SETUP

3.1 Powering the Machine

The Stitch Quick+ can be powered by four (4) AA Alkaline batteries (not included) or an AC adapter (not included).



Image 3.1: The battery compartment requires four AA Alkaline batteries.

- **Battery Installation:** Open the attached rear battery cover. Insert four AA Alkaline batteries, ensuring correct polarity (+/-). Close the cover securely.
- **Important Battery Reminders:**
 - Always replace all four batteries at once.
 - Use Alkaline batteries ONLY for optimal performance.
 - Do NOT use Carbon Zinc or Heavy Duty batteries as they may cause malfunction.
- **AC Adapter (Optional):** If using an AC adapter (not included), plug it into the designated port on the machine.

3.2 Threading the Machine

Proper threading is crucial for consistent stitch quality. Ensure the device is in the LOCK/OFF position before threading.

TROUBLESHOOTING POSSIBLE CAUSES OF POOR STITCHES

Perfect for Quick Fixes, Not a Substitute for a Full Sewing Machine

1. The upper threading is not correct.
2. The presser foot is not in the down position.
3. The needle is not fully inserted in the needle bar.
4. The needle eye is not facing the right or the left of the machine.
5. The needle is bent.
6. Lower threading is not correct.
7. The wrong size bottom bobbin is used.
8. Upper threading is too loose.
9. The bobbin placement in case is not in the right position which will block its correct movement.



Image 3.2: Step-by-step guide for threading the upper thread.

1. Place the upper bobbin or spool with thread (A) onto the spool pin, ensuring it unwinds in a counter-clockwise direction.
2. Pull the thread through Thread Guide 1 (B).
3. Slip the thread between the two discs of the Thread Tension Dial (C).
4. Pull thread through Thread Guide 2 (D) (from the back to the front), then through the Thread Take-Up Lever (E) (from the front to the back).
5. Continue pulling thread through Thread Guide 3 (F) (from the front to the back) and Thread Guide 4 (G) (downwards).
6. Raise the Needle (H) using the handwheel. Pass the needle threader through the eye of the needle, from right to left. Pass the thread through the eye of the needle using the threader. Remove the needle threader.

Note: For easier sewing, the machine comes pre-threaded to avoid initial threading difficulties.

3.3 Bobbin Winding

The machine features a built-in bobbin winder for convenience.

- Place an empty bobbin onto the bobbin pin for rewinding.
- Guide thread from the upper spool through the bobbin winding hole and around the empty bobbin.
- Engage the bobbin winder and press the ON/OFF button to wind thread onto the bobbin.

4. OPERATING INSTRUCTIONS

4.1 Mode Selection

The Stitch Quick+ offers three operational modes via the mode selector switch:

- **Handheld Mode:** For quick, on-the-go repairs and difficult-to-reach areas.
- **Desktop Mode:** For more stable and controlled stitching on a flat surface.

- **Lock Mode:** Disables the machine for safety during threading, needle changes, or storage.

4.2 Stitching

The machine uses a two-thread stitching mechanism for enhanced durability and locked stitches.

- **Prepare Fabric:** Place the fabric under the presser foot. Lower the presser foot using the lifter.
- **Start Sewing:** Select your desired mode (Handheld or Desktop). Press the ON/OFF button to begin stitching. Guide the fabric gently.
- **Adjust Tension:** Use the tension dial to achieve balanced stitches. Adjust as needed for different fabric types.
- **End Sewing:** Press the ON/OFF button to stop. Raise the presser foot, pull the fabric away, and use the thread cutter to snip the threads.

4.3 Material Compatibility

The Stitch Quick+ is suitable for various fabric types. Select appropriate needles based on project type and fabric weight for best stitch quality.

Uses **two threads** to ensure
stronger and durable stitches
for both temporary and long
lasting repairs



Image 4.1: Examples of compatible fabrics including denim, knit, cotton, and polyester. Not suitable for heavyweight fabrics like leather or wool.

- **Compatible Fabrics:** Denim, Cotton, Polyester, Knit fabrics, Paper crafts.
- **Not Recommended For:** Heavyweight fabrics such as leather or wool.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your mending machine.

- **Cleaning:** Periodically clean lint and dust from the bobbin area and around the needle plate using a small brush.
- **Needle Replacement:** Replace needles regularly, especially if they become bent, dull, or if you are experiencing skipped stitches. Ensure the flat side of the needle faces the back of the machine when inserting.
- **Storage:** When not in use, store the machine in its drawstring bag in a dry, clean place. Remove batteries if storing for extended periods.

6. TROUBLESHOOTING


If you encounter issues with your Stitch Quick+, refer to the common problems and solutions below.

THREADING THE MACHINE

Caution: When threading the machine, make sure the device is in LOCK/OFF position

Designed to enhance your sewing experience with its specialized features, this machine is ideal for quick fixes, small crafts, and on-the-go adjustments, complementing your broader sewing toolkit.

Note: While this machine excels at specific tasks and smaller projects, it does not substitute a full-sized sewing machine. For extensive sewing demands and complex projects, we recommend complementing it with one of SINGER's sewing machine models.

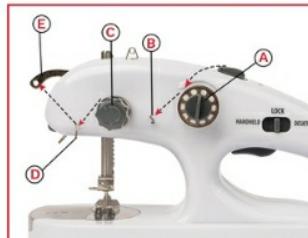

1. Make sure the upper bobbin or spool with thread (A) unwinds in a counter-clockwise direction.
2. Then pull the thread through Thread Guide 1 (B). Slip the thread in between the two discs of the Thread Tension Dial (C).
3. Pull thread through Thread Guide 2 (D) (From the back to the front), Thread Take-up Lever (E) (from the front to the back), Thread Guide 3 (F) (from the front to the back) and Thread Guide 4 (G) (Down).

4. Raise the Needle (H). Pass needle threader through eye of needle, from right to left. Pass thread through the eye of needle threader.
5. Pull Needle Threader (I) with inserted thread through the eye of the needle, from left to right. Remove needle threader.

- | | | |
|------------------------|-------------------------|--------------------|
| A. Bobbin | D. Thread Guide 2 | G. Thread Guide 4 |
| B. Thread Guide 1 | E. Thread Take-up lever | H. Needle |
| C. Thread Tension Dial | F. Thread Guide 3 | I. Needle Threader |

***Note:** For an easier sewing experience, machine comes pre-threaded to avoid the hassle of threading the machine yourself on the first use

Image 6.1: Common causes of poor stitches and how to address them.

1. Poor Stitches:

- The upper threading is not correct. Re-thread the machine carefully.
- The presser foot is not in the down position. Lower the presser foot before sewing.
- The needle is not fully inserted in the needle bar. Ensure the needle is pushed up as far as it can go and secured with the clamp screw.
- The needle eye is not facing the right or the left of the machine. Ensure the needle is correctly oriented.
- The needle is bent. Replace with a new, straight needle.
- Lower threading is not correct. Check the bobbin placement and threading in the bobbin case.

- The wrong size bottom bobbin is used. Use only bobbins designed for this machine.
- Upper threading is too loose. Adjust the tension dial to a higher number.
- The bobbin placement in the case is not in the right position, which will block its correct movement. Re-seat the bobbin correctly.

2. Machine Not Turning On:

- Check if batteries are correctly inserted and are fresh Alkaline batteries.
- If using an AC adapter, ensure it is properly connected and functional.
- Ensure the mode selector switch is not in the LOCK position.

7. SPECIFICATIONS

Feature	Specification
Model Number	Stitch Quick+
Product Dimensions	11 x 5 x 8 inches (11"D x 5"W x 8"H)
Item Weight	1.87 pounds
Power Source	4 AA Alkaline batteries (not included) or AC adapter (not included)
Stitching Type	Two-thread straight stitch
Color	White
UPC	075691117740

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your product packaging or visit the official SINGER website. Contact information for customer service is typically available on the manufacturer's website.

© 2023 SINGER. All rights reserved.

Related Documents - Stitch Quick+

 <p>INSTRUCTION MANUAL S0100 / S0105</p>	<p>SINGER S0100 / S0105 Overlock Sewing Machine Instruction Manual</p> <p>Comprehensive instruction manual for the SINGER S0100 and S0105 overlock sewing machines, covering essential safety precautions, setup, operation, threading, stitch settings, maintenance, and troubleshooting.</p>
---	--

 <p>SINGER® HD6380 English</p> <table border="1"> <tr> <td>1</td> <td>STRAIGHT STITCH</td> <td>Seams</td> <td>1</td> <td>For most common uses, the straight stitch is the easiest and most versatile. It is used for joining two pieces of fabric together, for hemming, and for general sewing. It is also used for decorative stitching.</td> </tr> <tr> <td>2</td> <td>STRAIGHT STITCH</td> <td>Gold Hemming</td> <td>1</td> <td>For hemming and other decorative stitching. The straight stitch is used for hemming and decorative stitching.</td> </tr> <tr> <td>3</td> <td>STRAIGHT STITCH</td> <td>Topstitching</td> <td>1</td> <td>For topstitching, decorative stitching, and general sewing. The straight stitch is used for topstitching, decorative stitching, and general sewing.</td> </tr> <tr> <td>4</td> <td>STRAIGHT STITCH</td> <td>Edge Hemming</td> <td>1</td> <td>For edge hemming and decorative stitching. The straight stitch is used for edge hemming and decorative stitching.</td> </tr> <tr> <td>5</td> <td>STRAIGHT STITCH</td> <td>Seaming</td> <td>1</td> <td>For seaming and decorative stitching. The straight stitch is used for seaming and decorative stitching.</td> </tr> </table> <p>1-50</p>	1	STRAIGHT STITCH	Seams	1	For most common uses, the straight stitch is the easiest and most versatile. It is used for joining two pieces of fabric together, for hemming, and for general sewing. It is also used for decorative stitching.	2	STRAIGHT STITCH	Gold Hemming	1	For hemming and other decorative stitching. The straight stitch is used for hemming and decorative stitching.	3	STRAIGHT STITCH	Topstitching	1	For topstitching, decorative stitching, and general sewing. The straight stitch is used for topstitching, decorative stitching, and general sewing.	4	STRAIGHT STITCH	Edge Hemming	1	For edge hemming and decorative stitching. The straight stitch is used for edge hemming and decorative stitching.	5	STRAIGHT STITCH	Seaming	1	For seaming and decorative stitching. The straight stitch is used for seaming and decorative stitching.	<p>SINGER HD6380 Sewing Machine Stitch Applications Guide</p> <p>A comprehensive guide to 110 stitch applications for the SINGER HD6380 sewing machine, covering straight, zigzag, multi-step zigzag, blind hem, picot hem, decorative, overlock, and bartack buttonhole stitches for various sewing projects and fabric types.</p>
1	STRAIGHT STITCH	Seams	1	For most common uses, the straight stitch is the easiest and most versatile. It is used for joining two pieces of fabric together, for hemming, and for general sewing. It is also used for decorative stitching.																						
2	STRAIGHT STITCH	Gold Hemming	1	For hemming and other decorative stitching. The straight stitch is used for hemming and decorative stitching.																						
3	STRAIGHT STITCH	Topstitching	1	For topstitching, decorative stitching, and general sewing. The straight stitch is used for topstitching, decorative stitching, and general sewing.																						
4	STRAIGHT STITCH	Edge Hemming	1	For edge hemming and decorative stitching. The straight stitch is used for edge hemming and decorative stitching.																						
5	STRAIGHT STITCH	Seaming	1	For seaming and decorative stitching. The straight stitch is used for seaming and decorative stitching.																						
 <p>Singer Stitch Quick+ INSTRUCTION MANUAL</p> <p>Before operating this unit, please read these instructions completely. When using this unit, always use proper safety procedures and common sense.</p> <p>IMPORTANT SAFETY INSTRUCTIONS</p> <p>When using electrical equipment, basic safety precautions should be followed, including the following:</p> <p>WARNING: To reduce the risk of fire, electric shock, or injury to persons: 1. Use this unit only in a well-ventilated area. 2. Do not use this unit near water, such as a bathtub, washbasin, sink, or swimming pool. 3. Do not use this unit near flammable materials, such as gasoline or kerosene. 4. Do not use this unit in a dusty environment. 5. Do not use this unit in a humid environment. 6. Do not use this unit in a high-temperature environment. 7. Do not use this unit in a high-humidity environment. 8. Do not use this unit in a high-temperature environment. 9. Do not use this unit in a high-humidity environment. 10. Do not use this unit in a high-temperature environment. 11. Do not use this unit in a high-humidity environment. 12. Do not use this unit in a high-temperature environment. 13. Do not use this unit in a high-humidity environment. 14. Do not use this unit in a high-temperature environment. 15. Do not use this unit in a high-humidity environment. 16. Do not use this unit in a high-temperature environment. 17. Do not use this unit in a high-humidity environment. 18. Do not use this unit in a high-temperature environment. 19. Do not use this unit in a high-humidity environment. 20. Do not use this unit in a high-temperature environment. 21. Do not use this unit in a high-humidity environment. 22. Do not use this unit in a high-temperature environment. 23. Do not use this unit in a high-humidity environment. 24. Do not use this unit in a high-temperature environment. 25. Do not use this unit in a high-humidity environment. 26. Do not use this unit in a high-temperature environment. 27. Do not use this unit in a high-humidity environment. 28. Do not use this unit in a high-temperature environment. 29. Do not use this unit in a high-humidity environment. 30. Do not use this unit in a high-temperature environment. 31. Do not use this unit in a high-humidity environment. 32. Do not use this unit in a high-temperature environment. 33. Do not use this unit in a high-humidity environment. 34. Do not use this unit in a high-temperature environment. 35. Do not use this unit in a high-humidity environment. 36. Do not use this unit in a high-temperature environment. 37. Do not use this unit in a high-humidity environment. 38. Do not use this unit in a high-temperature environment. 39. Do not use this unit in a high-humidity environment. 40. Do not use this unit in a high-temperature environment. 41. Do not use this unit in a high-humidity environment. 42. Do not use this unit in a high-temperature environment. 43. Do not use this unit in a high-humidity environment. 44. Do not use this unit in a high-temperature environment. 45. Do not use this unit in a high-humidity environment. 46. Do not use this unit in a high-temperature environment. 47. Do not use this unit in a high-humidity environment. 48. Do not use this unit in a high-temperature environment. 49. Do not use this unit in a high-humidity environment. 50. Do not use this unit in a high-temperature environment. 51. Do not use this unit in a high-humidity environment. 52. Do not use this unit in a high-temperature environment. 53. Do not use this unit in a high-humidity environment. 54. Do not use this unit in a high-temperature environment. 55. Do not use this unit in a high-humidity environment. 56. Do not use this unit in a high-temperature environment. 57. Do not use this unit in a high-humidity environment. 58. Do not use this unit in a high-temperature environment. 59. Do not use this unit in a high-humidity environment. 60. Do not use this unit in a high-temperature environment. 61. Do not use this unit in a high-humidity environment. 62. Do not use this unit in a high-temperature environment. 63. Do not use this unit in a high-humidity environment. 64. Do not use this unit in a high-temperature environment. 65. Do not use this unit in a high-humidity environment. 66. Do not use this unit in a high-temperature environment. 67. Do not use this unit in a high-humidity environment. 68. Do not use this unit in a high-temperature environment. 69. Do not use this unit in a high-humidity environment. 70. Do not use this unit in a high-temperature environment. 71. Do not use this unit in a high-humidity environment. 72. Do not use this unit in a high-temperature environment. 73. Do not use this unit in a high-humidity environment. 74. Do not use this unit in a high-temperature environment. 75. Do not use this unit in a high-humidity environment. 76. Do not use this unit in a high-temperature environment. 77. Do not use this unit in a high-humidity environment. 78. Do not use this unit in a high-temperature environment. 79. Do not use this unit in a high-humidity environment. 80. Do not use this unit in a high-temperature environment. 81. Do not use this unit in a high-humidity environment. 82. Do not use this unit in a high-temperature environment. 83. Do not use this unit in a high-humidity environment. 84. Do not use this unit in a high-temperature environment. 85. Do not use this unit in a high-humidity environment. 86. Do not use this unit in a high-temperature environment. 87. Do not use this unit in a high-humidity environment. 88. Do not use this unit in a high-temperature environment. 89. Do not use this unit in a high-humidity environment. 90. Do not use this unit in a high-temperature environment. 91. Do not use this unit in a high-humidity environment. 92. Do not use this unit in a high-temperature environment. 93. Do not use this unit in a high-humidity environment. 94. Do not use this unit in a high-temperature environment. 95. Do not use this unit in a high-humidity environment. 96. Do not use this unit in a high-temperature environment. 97. Do not use this unit in a high-humidity environment. 98. Do not use this unit in a high-temperature environment. 99. Do not use this unit in a high-humidity environment. 100. Do not use this unit in a high-temperature environment. 101. Do not use this unit in a high-humidity environment. 102. Do not use this unit in a high-temperature environment. 103. Do not use this unit in a high-humidity environment. 104. Do not use this unit in a high-temperature environment. 105. Do not use this unit in a high-humidity environment. 106. Do not use this unit in a high-temperature environment. 107. Do not use this unit in a high-humidity environment. 108. Do not use this unit in a high-temperature environment. 109. Do not use this unit in a high-humidity environment. 110. Do not use this unit in a high-temperature environment.</p> <p>SAVE THESE INSTRUCTIONS This instruction book is intended for the responsible authority.</p>	<p>Singer Stitch Quick+ Instruction Manual</p> <p>Comprehensive instruction manual for the Singer Stitch Quick+ handheld sewing machine, covering safety, operation, threading, bobbin winding, needle changing, and troubleshooting.</p>																									
 <p>SINGER® HD6380 English</p> <table border="1"> <tr> <td>1</td> <td>STRAIGHT STITCH</td> <td>Seams</td> <td>1</td> <td>For most common uses, the straight stitch is the easiest and most versatile. It is used for joining two pieces of fabric together, for hemming, and for general sewing. It is also used for decorative stitching.</td> </tr> <tr> <td>2</td> <td>STRAIGHT STITCH</td> <td>Gold Hemming</td> <td>1</td> <td>For hemming and other decorative stitching. The straight stitch is used for hemming and decorative stitching.</td> </tr> <tr> <td>3</td> <td>STRAIGHT STITCH</td> <td>Topstitching</td> <td>1</td> <td>For topstitching, decorative stitching, and general sewing. The straight stitch is used for topstitching, decorative stitching, and general sewing.</td> </tr> <tr> <td>4</td> <td>STRAIGHT STITCH</td> <td>Edge Hemming</td> <td>1</td> <td>For edge hemming and decorative stitching. The straight stitch is used for edge hemming and decorative stitching.</td> </tr> <tr> <td>5</td> <td>STRAIGHT STITCH</td> <td>Seaming</td> <td>1</td> <td>For seaming and decorative stitching. The straight stitch is used for seaming and decorative stitching.</td> </tr> </table> <p>1-50</p>	1	STRAIGHT STITCH	Seams	1	For most common uses, the straight stitch is the easiest and most versatile. It is used for joining two pieces of fabric together, for hemming, and for general sewing. It is also used for decorative stitching.	2	STRAIGHT STITCH	Gold Hemming	1	For hemming and other decorative stitching. The straight stitch is used for hemming and decorative stitching.	3	STRAIGHT STITCH	Topstitching	1	For topstitching, decorative stitching, and general sewing. The straight stitch is used for topstitching, decorative stitching, and general sewing.	4	STRAIGHT STITCH	Edge Hemming	1	For edge hemming and decorative stitching. The straight stitch is used for edge hemming and decorative stitching.	5	STRAIGHT STITCH	Seaming	1	For seaming and decorative stitching. The straight stitch is used for seaming and decorative stitching.	<p>SINGER HD6380 Sewing Machine Stitch Guide</p> <p>A comprehensive guide to various sewing machine stitches and their applications for the SINGER HD6380 model, including straight, zigzag, multi-step zigzag, blind hem, picot hem, decorative, straight stretch, reinforced zigzag, honeycomb, overlock, slant overedge, and bartack buttonhole stitches. Learn about techniques like seaming, quilting, topstitching, darning, applique, gathering, pleating, zipper insertion, hemming, couching, and attaching trims.</p>
1	STRAIGHT STITCH	Seams	1	For most common uses, the straight stitch is the easiest and most versatile. It is used for joining two pieces of fabric together, for hemming, and for general sewing. It is also used for decorative stitching.																						
2	STRAIGHT STITCH	Gold Hemming	1	For hemming and other decorative stitching. The straight stitch is used for hemming and decorative stitching.																						
3	STRAIGHT STITCH	Topstitching	1	For topstitching, decorative stitching, and general sewing. The straight stitch is used for topstitching, decorative stitching, and general sewing.																						
4	STRAIGHT STITCH	Edge Hemming	1	For edge hemming and decorative stitching. The straight stitch is used for edge hemming and decorative stitching.																						
5	STRAIGHT STITCH	Seaming	1	For seaming and decorative stitching. The straight stitch is used for seaming and decorative stitching.																						
 <p>SINGER 1019/1025/1027</p>	<p>Singer Sewing Machine 1019/1025/1027 Parts List and Diagrams</p> <p>Comprehensive parts list and exploded view diagrams for Singer sewing machine models 1019, 1025, and 1027, detailing housing parts, thread tension, head end parts, arm shaft, handwheel, bobbin winder, hook drive system, stitch length drive, stitch length adjustment, reverse control, and electrical parts.</p>																									
 <p>SINGER 1412 Instruction Manual</p>	<p>Singer 1412 Instruction Manual</p> <p>Comprehensive instruction manual for the Singer 1412 sewing machine, covering safety, setup, operation, maintenance, and troubleshooting.</p>																									

Documents - SINGER – Stitch Quick



Before operating this unit, please read these instructions completely.

IMPORTANT SAFETY INSTRUCTIONS

When using any electrical appliance, basic safety precautions should always be followed, including the following:

Read all instructions before using this handheld machine.

WARNING — To reduce the risk of burns, fire, electric shock or injuries to persons:

1. Keep fingers away from all moving parts. Special care is required around the handheld machine.
2. Always use the proper needle plate. The wrong plate can cause the needle to break.
3. Do not use a damaged needle.
4. Do not push or pull fabric while stitching. It may deflect the needle causing it to break.
5. Turn off the machine when changing needles, bobbins or thread. Never leave the machine unattended when it is in use.
6. Turn off the machine when changing needles, bobbins or thread. Never leave the machine unattended when it is in use.
7. Do not allow to be used as a toy. Close attention is necessary when this appliance is used by or near children.
8. Use this appliance only for its intended use as described in this manual. Use only attachments recommended by the manufacturer as contained in this manual. Never operate on a surface that is not level or stable.
9. Never operate the appliance with any air opening blocked. Keep ventilation openings of the machine free of dust, dirt and hair.
10. Never drop or insert any object into any opening.
11. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.

SAVE THESE INSTRUCTIONS

This handheld machine is intended for household use only.

[\[pdf\] User Manual Instructions](#)

Stitch Quick™originalcontent syndigo asset cbedccaf 8d37 46cf b489 011f0addc9cf original Quick™Singer 1774 Hand Held Mending Machine INSTRUCTION MANUALcontent originalmanual internal 2024 06 Singer MANUAL ||| ||| Stitch Quick INSTRUCTION MANUAL Before operating this unit, please read these instructions completely. **IMPORTANT SAFETY INSTRUCTIONS** When using any electrical appliance, basic safety precautions should always be followed, including the foll

Stitch Quick INSTRUCTION MANUAL Before operating this unit, please read these instructions completely. **IMPORTANT SAFETY INSTRUCTIONS** When using any electrical appliance, basic safety precautions should always be followed, including the following: Read all instructions before using this handheld ...


lang:en **score:40** filesize: 2.88 M page_count: 24 document date: 2023-08-04



[\[pdf\] User Manual Dimension Guide](#)

Singer 1200 Instruction Manual manualzilla manuals archive org details id 6980375 null text aatn You are about to sew on the new, advanced electronic sewing machine .. Athens 1200. It makes sewing simple, foolproof and fun * ETTE After years of Singer research, the Athena 1200 has these important technological breakthroughs: sewing machine features e...

lang:en **score:38** filesize: 17.59 M page_count: 90 document date: 2021-06-04

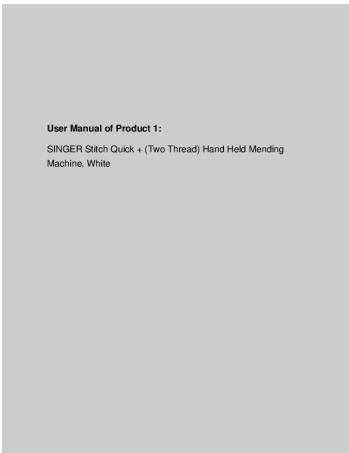

[\[pdf\] User Manual Instructions](#)

User Manual SINGER Stitch Quick Two Thread Hand Held Mending Machine White 42145 Class 15 Black Threaded Bobbins 12 Count Home B1TjZcyNInL m media amazon images I |||

User Manual of Product 1: SINGER Stitch Quick Two Thread Hand Held Mending Machine, White Stitch Quick™ INSTRUCTION MANUAL Before operating this unit, please read these instructions completely. **IMPORTANT SAFETY INSTRUCTIONS** When using any electrical appliance, basic safety precautions should...

lang:en **score:22** filesize: 2.55 M page_count: 25 document date: 0000-00-00

SINGER | Tradition.
Model 2250

Feature	Benefit
10 Built-in Stitch Patterns	6 Basic Stitches, 3 Decorative Stitches, 1 Buttonhole--perfect for crafts, home dec, clothing construction and much more
Automatic 4-step Buttonhole	Make beautiful buttonholes automatically in 4 easy steps
Adjustable Stitch Length	Adjust the desired stitch length by a simple turn of the dial
Adjustable Tension	Ensures excellent straight stitch quality regardless the type of fabric sewn
Automatic Reverse	Automatically sew in reverse and reinforce stitches
Quick Start Guide DVD	Great for beginners, this DVD demonstrates how to thread the machine and to get started sewing!
Accessories	Carrying Case, Spool Cap Holder, Sewingview, Buttonhole Foot, Button Sewing Foot, All Purpose Foot, Zipper Foot, Edge/Quilting Guide, Bobbin Needles, Lint Brush, Seam Ripper, and Oil Bottle
Snip-on Presser Feet	Quick release for easy on and off—orange presser feet in a snap!
Heavy Duty Metal Frame	Rigid support holds all the mechanisms in perfect alignment for perfect sewing and durability.
Warranty	Limited 25-year warranty on the sewing machine head, limited 2-year on electrical, limited 90-day warranty on labor

SINGER® and Tradition® are exclusive trademarks of The Singer Company Ltd. or its affiliates. ©2008 The Singer Company Limited or its affiliates.

[\[pdf\]](#) Quick Start Guide Guide Warranty Accessories

2250 pub hoyk singer tradition media rainpos 2063 |||

Model 2250 Feature 10 Built-in Stitch Patterns Benefit 6 Basic Stitches, 3 Decorative Stitches, 1 Buttonhole--perfect for crafts, home dec, clothing construction and much more Automatic 4-step Buttonhole Make beautiful buttonholes automatically in 4 easy steps Adjustable Stitch Length Adjust t...

lang:en **score:17** filesize: 104.01 K page_count: 3 document date: 2010-02-10



[\[pdf\]](#) User Manual

Nested Stars Quilt Gold Latch Bobbin Case for rotary hook models with directional capability artista 180

185 200 730 Clear templates included manual 01182201110180356502469 media rainpos

STITCH RECIPE SOFTWARE What's Inside Nested Stars Quilt Aprons Revisited From Fiber to Fabric BERNINA Fashion Show - Magnifique Winter White Pleasant Peasant Felting Fun...Options for Needle Felting Rags to Riches Stitch Recipe: Painted Stitches Serge It Once, Serge It Twice Sew Easy F...

lang:en **score:11** filesize: 8.97 M page_count: 64 document date: 2006-10-13