

SEAGO SG-833W

SEAGO SG-833W Cordless Electric Water Flosser User Manual

Model: SG-833W

[Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Safety Information](#) [Product](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. SAFETY INFORMATION

Please read all instructions carefully before using the SEAGO SG-833W Cordless Electric Water Flosser. Keep this manual for future reference.

- Do not immerse the charging base in water.
- Ensure the charging port is dry before connecting the USB cable.
- This device is intended for oral hygiene only. Do not use it for any other purpose.
- Keep out of reach of children.
- Do not use if you have an open wound on your tongue or in your mouth.
- Consult your dentist before use if you have had oral surgery in the past two months.
- Use only water or dentist-recommended mouthwash in the water tank.
- Do not direct water under the tongue, into the ear, nose, or other delicate areas.

2. PRODUCT OVERVIEW

The SEAGO SG-833W is a cordless electric water flosser designed for effective oral cleaning. It features a portable design, multiple cleaning modes, and specialized nozzles for various dental needs.

2.1. Components

The package includes:

- SEAGO SG-833W Water Flosser Unit

- Standard Nozzle
- Orthodontic Spray Head
- Periodontal Pocket Sprinkler
- Tongue Scraper
- USB Charging Cable (adapter not included)
- Storage Pouch

2.2. Key Features

- **200ML Water Reservoir:** Sufficient capacity for a complete cleaning session.
- **3 Cleaning Modes:** Daily, High, and Pulse modes for customized cleaning.
- **High-Pressure Water Pulse:** Up to 2000 pulses per minute for efficient plaque and food debris removal.
- **360-Degree Rotating Nozzle:** Allows for thorough cleaning in all areas of the mouth.
- **IPX7 Waterproof Rating:** Safe for use in the shower and easy to clean.
- **Long Battery Life:** Up to 65 days of use on a single 5-hour charge.
- **Portable Design:** Cordless and lightweight, ideal for travel and home use.



Image: The SEAGO SG-833W Cordless Electric Water Flosser unit with its sleek design.

Four Kinds of Nozzles



Image: Illustration of the four included nozzles: Standard, Orthodontic, Periodontal pocket, and Tongue scraper, each designed for specific oral care needs.

3. SETUP

3.1. Charging the Device

Before first use, fully charge the water flosser. Connect the USB charging cable to the device's charging port and plug the other end into a compatible USB power adapter (not included). The charge indicator light will show charging status. A full charge takes approximately 5 hours and provides up to 65 days of use.



Image: Visual representation of the water flosser's battery life, indicating 5 hours for USB charging and 65 days of battery life.

3.2. Attaching a Nozzle

1. Select the desired nozzle (Standard, Orthodontic, Periodontal, or Tongue Scraper).
2. Insert the nozzle into the hole at the top of the flosser unit until it clicks into place.
3. To remove, press the nozzle release button (usually located on the side or back of the unit) and pull the nozzle out.

3.3. Filling the Water Tank

The SG-833W features a 200ML detachable water tank for easy filling.

1. Remove the water tank from the main unit by twisting or pulling it down, depending on the design.
2. Fill the tank with lukewarm water. You may also use a non-abrasive, non-corrosive mouthwash if recommended by your dentist.
3. Reattach the water tank securely to the main unit.



Image: Diagram showing two methods of filling the 200ml water tank: direct water injection and separate water injection by detaching the tank.

4. OPERATING INSTRUCTIONS

4.1. Selecting a Mode

The device offers three cleaning modes:

- **Daily (Gentle):** Continuous water spray, suitable for first-time users and sensitive gums.
- **High (Clean):** Continuous high-pressure water spray for efficient and deep cleaning, suitable for most users.

- **Pulse (Massage):** 3 times per second pulsed water spray for deep cleaning and gum massage.

Press the mode button to cycle through the modes. The corresponding indicator light will illuminate.



Image: Visual representation of the three cleaning modes: Soft, Normal, and Pulse, demonstrating their different water spray patterns.

4.2. Using the Water Flosser

1. Lean over a sink and place the nozzle tip into your mouth, aiming it at your gumline.
2. Press the power button to turn on the device.
3. Start with the lowest pressure setting (Daily mode) and gradually increase as you become comfortable.
4. Guide the water jet along your gumline, pausing briefly between teeth. Allow the water to flow into the sink.
5. For best results, follow the contours of your teeth and gums.
6. The device has a 2-minute timer to ensure adequate cleaning.
7. After use, press the power button to turn off the device.

HIGH-PRESSURE WATER PULSE

2000 TIMES/ MIN*
80-160 PSI*
STRONG WATER PRESSURE



*Data from Seago Lab

Image: Close-up view of the high-pressure water pulse effectively cleaning between teeth and along the gumline.

4.3. Nozzle Specific Usage

- **Standard Nozzle:** For general deep cleaning and removal of food residue.
- **Orthodontic Spray Head:** Designed for cleaning around braces and orthodontic appliances.
- **Periodontal Pocket Sprinkler:** For gentle cleaning of periodontal pockets and sensitive gums.
- **Tongue Scraper:** Use to clean the tongue coating for fresh breath.

4.4. Instructional Video

Video: A demonstration of the SEAGO water flosser's features and usage, including nozzle attachment, water filling, mode selection, and effective cleaning techniques for various oral needs.

5. MAINTENANCE

5.1. Cleaning the Unit

The SEAGO SG-833W is IPX7 waterproof, allowing for easy cleaning.

1. After each use, empty any remaining water from the tank.
2. Rinse the water tank and the main unit under running water.
3. Wipe the exterior of the device with a soft, damp cloth.

4. Ensure the charging port is dry before storing or recharging.

Waterproof at IPX7

Using safely
for shower in bathroom



Image: The water flosser submerged in water, illustrating its IPX7 waterproof rating for safe use and easy cleaning.

5.2. Cleaning Nozzles

Rinse nozzles thoroughly after each use. For deeper cleaning, soak nozzles in a solution of 2 parts water to 1 part white vinegar for 5-10 minutes, then rinse well.

5.3. Storage

Store the device in a cool, dry place. If not using for an extended period, ensure the battery is partially charged (around 50%) to prolong its lifespan.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery.	Charge the device for at least 5 hours.

Problem	Possible Cause	Solution
Weak water pressure.	Water tank is low or empty. Nozzle is clogged.	Refill the water tank. Remove and clean the nozzle.
Water leakage.	Water tank not properly attached.	Ensure the water tank is securely attached to the main unit.
Device stops during use.	2-minute auto-timer activated. Low battery.	Press the power button to restart if desired. Recharge the device.

7. SPECIFICATIONS

- **Model Number:** SG-833W
- **Product Dimensions:** 2.87 x 3.31 x 8.9 inches
- **Item Weight:** 1.01 Pounds
- **Water Tank Volume:** 200 Milliliters
- **Power Source:** Corded Electric (USB charging)
- **Battery:** 1 Lithium Ion battery (included)
- **Charging Time:** Approximately 5 hours
- **Usage Time:** Up to 65 days (based on typical use)
- **Water Pressure:** 80-160 PSI (2000 pulses/min)
- **Waterproof Rating:** IPX7
- **Additional Features:** Multiple Operation Modes, Portable, Timer
- **Manufacturer:** Ningbo Seago Electric Co.,Ltd

8. WARRANTY & SUPPORT

The SEAGO SG-833W Cordless Electric Water Flosser comes with a **2-year after-sales guarantee**. For any questions, concerns, or warranty claims, please contact SEAGO customer support through the retailer where the product was purchased or refer to the official SEAGO website for contact information.