

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [WINFLIKE](#) /

> [GCBLTV65AI-C1 Replacement Remote Control for Changhong TV UHD50F6000 UHD55F6000 User Manual](#)

WINFLIKE GCBLTV65AI-C1

User Manual: GCBLTV65AI-C1 Replacement Remote Control

For Changhong TV Models: UHD50F6000, UHD55F6000, UHD65F6000

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your new WINFLIKE GCBLTV65AI-C1 Replacement Remote Control. This remote is specifically designed to be compatible with various Changhong TV models, including UHD50F6000, UHD55F6000, and UHD65F6000. It offers a seamless replacement experience, requiring no complex programming.

2. PRODUCT OVERVIEW

The GCBLTV65AI-C1 remote control is an infrared (IR) remote, designed for ease of use with a comfortable grip and sensitive keys. It provides full access to all essential functions of your compatible Changhong TV.





Figure 2.1: Front view of the GCBLTV65AI-C1 Replacement Remote Control, showing the full button layout including power, number pad, navigation, volume, channel, and media controls.



Figure 2.2: Angled view of the GCBLTV65AI-C1 Replacement Remote Control, highlighting its ergonomic design and button placement from a side perspective.

3. SETUP

3.1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Close the battery compartment cover securely.

3.2. First Use

This replacement remote control requires no programming or setup. Once the batteries are correctly installed, it is

ready for immediate use with your compatible Changhong TV.

4. OPERATING INSTRUCTIONS

The remote control provides intuitive access to your TV's functions. Below are common button functions:

- **Power Button** (●): Turns the TV on or off.
- **Mute Button** (⏸): Mutes or unmutes the TV audio.
- **Number Buttons (0-9)**: Directly select channels or input numerical values.
- **Volume Up/Down (+/-)**: Adjusts the TV volume.
- **Channel Up/Down (P ▲/P ▼)**: Changes TV channels.
- **Navigation Buttons (▲ ▼ ◀ ▶)**: Navigate through menus and options.
- **OK Button**: Confirms selections in menus.
- **Menu Button**: Opens the TV's main menu.
- **Back Button**: Returns to the previous screen or menu.
- **Home Button**: Accesses the TV's home screen or smart features.
- **Source Button**: Selects input sources (HDMI, AV, etc.).
- **Media Control Buttons (Play, Pause, Stop, Fast Forward, Rewind, Skip)**: Control playback of media content.
- **EPG (Electronic Program Guide)**: Displays program information.
- **LIST**: Accesses channel lists or recorded programs.
- **TOOLS**: Opens a context-sensitive tools menu.

5. MAINTENANCE

- **Cleaning**: Use a soft, dry cloth to clean the remote control. Do not use liquid or aerosol cleaners.
- **Battery Replacement**: Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones.
- **Storage**: Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops**: Protect the remote from physical impact, as this can damage internal components.

6. TROUBLESHOOTING

- **Remote Not Responding:**
 - Ensure batteries are inserted correctly with proper polarity.
 - Replace old batteries with new AAA alkaline batteries.
 - Check for any obstructions between the remote and the TV's IR sensor.
 - Ensure you are within the effective range and line of sight of the TV.
- **Certain Buttons Not Working:**
 - This could indicate low battery power; try replacing the batteries.
 - Ensure the remote is clean and free of debris that might obstruct button presses.
- **Remote Works Intermittently:**
 - This often points to weak batteries. Replace them.

- Check for strong light sources (like direct sunlight or fluorescent lights) that might interfere with the IR signal.

7. SPECIFICATIONS

Feature	Detail
Model Number	WL-GCBLTV65AI-C1-S1-210604
Product Dimensions	8.7 x 2 x 0.6 inches
Item Weight	2.11 ounces
Batteries Required	2 AAA batteries (not included)
Connectivity Technology	Infrared (IR)
Compatible Devices	Television (Changhong UHD50F6000, UHD55F6000, UHD65F6000)
Special Features	Ergonomic, Lightweight, No Programming Required

8. WARRANTY AND SUPPORT

While specific warranty details are not provided in this manual, WINFLIKE is committed to customer satisfaction. If you encounter any issues with your GCBLTV65AI-C1 Replacement Remote Control or require further assistance, please do not hesitate to contact WINFLIKE customer support. Your feedback is valuable, and we are here to help resolve any problems you may experience with our product or service.