

[Manuals.plus](#) /

› [Moen](#) /

› Moen Kurv Motionsense Wave Kitchen Faucet Instruction Manual

Moen 9126EWSRS

Moen Kurv Motionsense Wave Sensor Touchless Kitchen Faucet

Model: **9126EWSRS** | Brand: **Moen**

PRODUCT OVERVIEW

The Moen Kurv Motionsense Wave Sensor Touchless Kitchen Faucet (Model 9126EWSRS) is designed to enhance kitchen functionality with its advanced features and durable construction. This faucet offers convenient touchless operation and a sleek design, making daily tasks more efficient.





Image: Moen Kurv Motionsense Wave Sensor Touchless Kitchen Faucet, showcasing its high arc design and Spot Resist Stainless finish.

Key Features:

- **SPOT RESISTANT:** Spot Resist Stainless finish resists fingerprints and water spots for a cleaner looking kitchen.
- **ONE SENSOR:** MotionSense Wave features single-sensor touchless activation, allowing you to easily turn water on and off with the wave of a hand.
- **POWER CLEAN:** Power Clean spray technology provides 50 percent more spray power versus most of our pulldown and pullout faucets without the Power Clean technology.
- **BATTERIES INCLUDED:** Includes 6 AA Batteries, eliminating the need for a dedicated outlet (optional AC power available).
- **EVERY DROP, CERTIFIED SAFE:** Every Moen residential kitchen and bath faucet complies with the Federal Safe Drinking Water Act and NSF 61 standards — making Moen the safe choice for clean drinking water.
- **RETRACTABLE:** Equipped with the Reflex system for smooth operation, easy movement and secure docking of the spray head.
- **EASY TO INSTALL:** Features Duralock quick connect system for easy installation.
- **ADA COMPLIANT:** Complies with Americans with Disabilities Act (ADA) specifications.
- **TRUSTED PERFORMANCE:** Tested beyond industry standards to handle real-world wear and tear, so your faucet

performs like new for decades.

SETUP AND INSTALLATION

The Moen Kurv faucet is designed for straightforward installation. It includes the necessary components for a standard setup.

Included Components:

- Kitchen faucet assembly
- Control Box
- 6 AA batteries (required for MotionSense Wave functionality)
- Flexible supply lines with 3/8" compression fittings
- Instruction Manual (this document)

Installation Steps:

1. Ensure all necessary components are present before beginning installation.
2. Mount the faucet onto the sink or countertop. The faucet is designed for 1-hole installation.
3. Connect the flexible supply lines to your water supply using the 3/8" compression fittings.
4. Utilize the Duralock quick connect system for secure and tool-free connection of the spray hose to the control box.
5. Install the 6 AA batteries into the control box to power the MotionSense Wave sensor. An optional AC power adapter can be used (sold separately) if a dedicated outlet is preferred.
6. Follow the detailed diagrams and instructions provided in the physical instruction manual for specific plumbing and electrical connections.



Touchless Faucet

Use the handle when you want to touch the faucet,
use the sensor when you don't.

Image: The Duralock quick connect system, designed for easy and secure hose connection without tools.



Image: Diagram showing the dimensions (height 16.38", spout reach 8.75") and sensor location for the Moen Kurv faucet. It is designed for 1-hole installation.

OPERATING INSTRUCTIONS

Touchless Operation (MotionSense Wave):

The MotionSense Wave sensor allows for convenient hands-free operation. Simply wave your hand in front of the sensor located on the side of the faucet to turn the water on or off. This feature is ideal for minimizing germ transfer and when your hands are full or messy.



Image: A user activating the Moen Kurv faucet's MotionSense Wave sensor with a simple hand wave, demonstrating touchless operation.



MOEN®

POWER CLEAN SPRAY

Power Clean technology provides **50% more** spray power* than most pulldown and pullout faucets, while containing splash and minimizing the mess.

*As compared to Moen pullout and pulldown faucets without Power Boost™ excludes Power Boost™ Pro

Image: A close-up view of the touchless sensor on the Moen faucet, highlighting the convenience of using either the handle or the sensor for water control.

Manual Operation:

The faucet can also be operated manually using the single lever handle. Move the handle up to turn water on and down to turn it off. Adjust the temperature by moving the handle left for hot water and right for cold water.

Power Clean Spray:

The pulldown spray head features Power Clean technology, delivering a concentrated spray with 50% more power compared to standard pulldown faucets. This is effective for rinsing dishes and cleaning the sink.

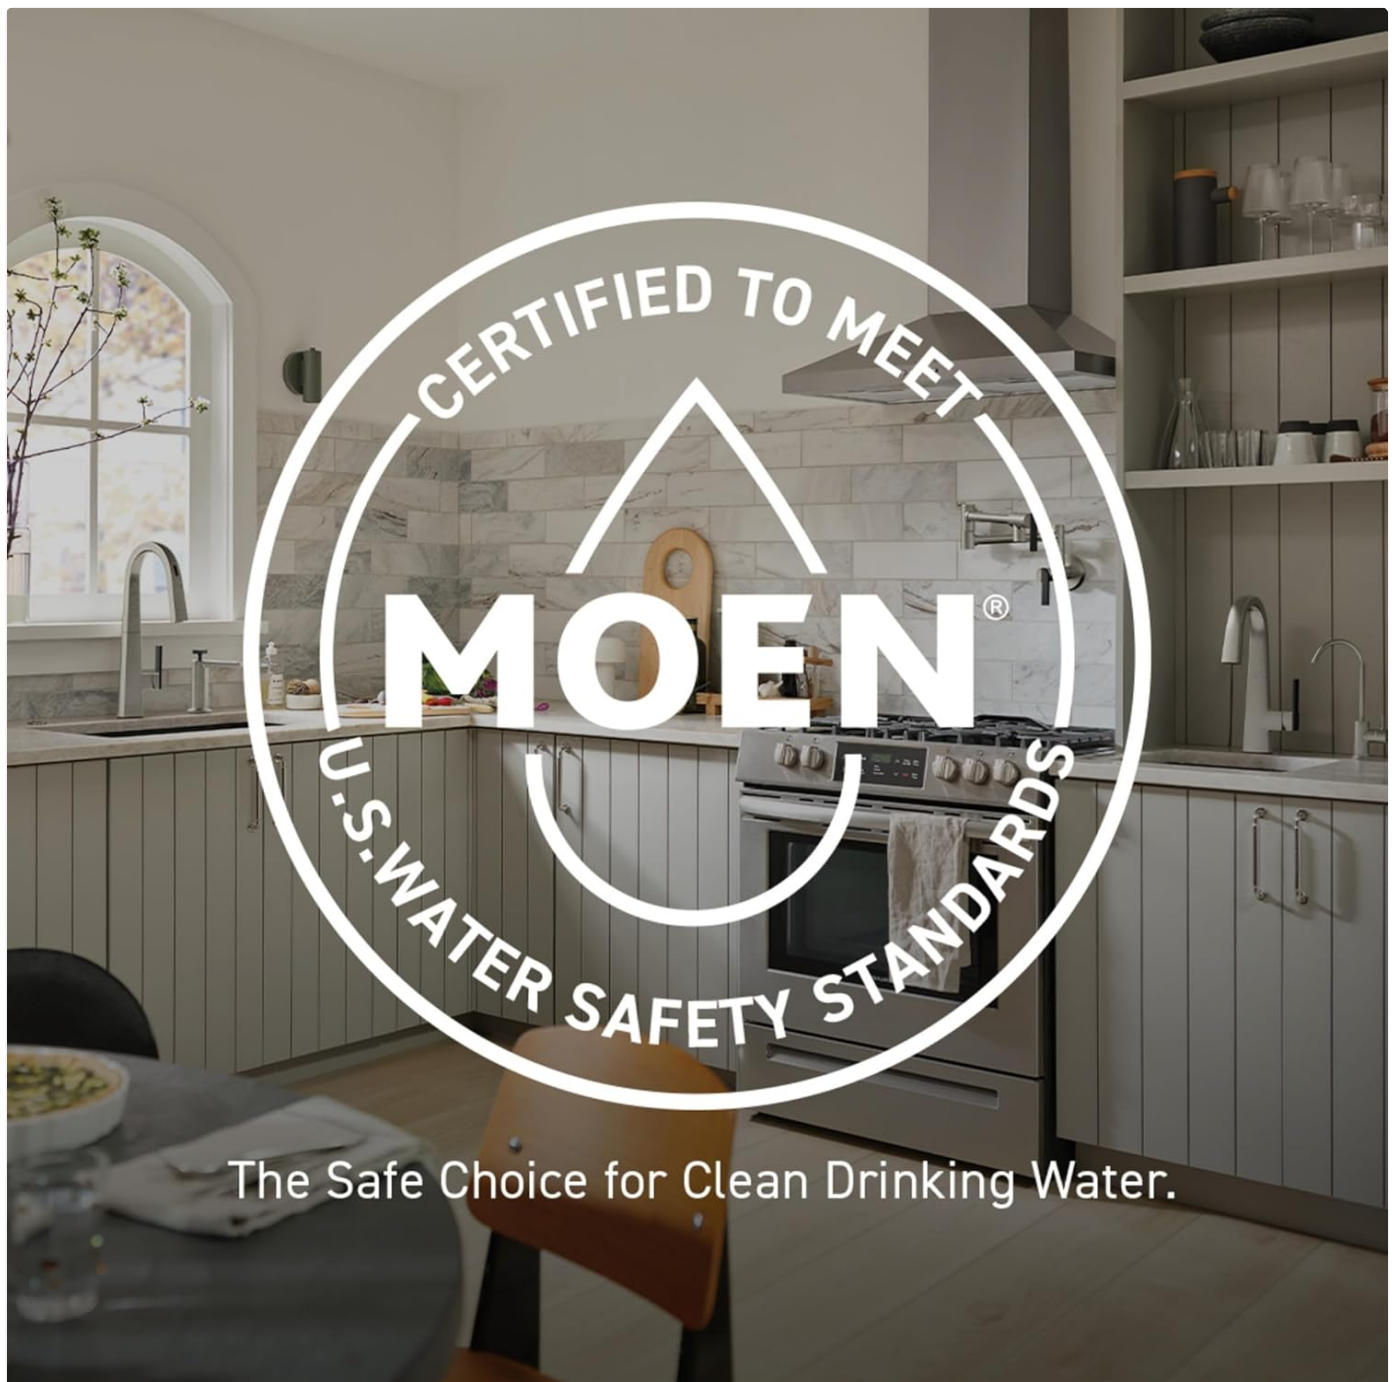


Image: The Moen faucet demonstrating its Power Clean spray technology, providing enhanced spray power for effective cleaning while minimizing splash.

Reflex System:

The Reflex system ensures smooth operation, easy movement, and secure docking of the spray head back into the faucet spout after use.

MAINTENANCE

Cleaning the Faucet:

The Spot Resist Stainless finish is designed to resist fingerprints and water spots, making cleaning easier. To maintain the finish, wipe the faucet with a soft, damp cloth. Avoid abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the finish.

MOEN®

Spot Resist™ Technology

Keep your faucet looking cleaner with a finish that resists fingerprints and water spots.

WITH SPOT RESIST

WITHOUT SPOT RESIST

Image: A visual comparison demonstrating the effectiveness of Moen's Spot Resist Technology in preventing fingerprints and water spots on the faucet surface.

Battery Replacement:

When the MotionSense Wave sensor's performance diminishes, it may be time to replace the 6 AA batteries in the control box. Refer to the installation manual for specific instructions on accessing and replacing the battery pack.

TROUBLESHOOTING

If you encounter issues with your Moen Kurv faucet, consider the following common troubleshooting steps:

- **No Water Flow / Low Flow:** Check water supply valves under the sink to ensure they are fully open. Verify that the flexible supply lines are not kinked. If using the sensor, ensure batteries are not depleted.
- **Sensor Not Responding:** Ensure the sensor area is clean and unobstructed. Replace the 6 AA batteries if they are old or depleted. Check connections to the control box.
- **Leaking:** Inspect all connections for tightness. Ensure O-rings and seals are properly seated. If leaking persists, professional assistance may be required.

- **Inconsistent Temperature:** Verify hot and cold water supply lines are correctly connected. Ensure water heater is functioning properly.

For more complex issues or if troubleshooting steps do not resolve the problem, please contact Moen customer support or consult a qualified plumber.

SPECIFICATIONS

Attribute	Detail
Brand	Moen
Model Name	Kurv Collection
Part Number	9126EWSRS
Color	Spot Resist Stainless
Material	Metal
Finish Type	Brushed
Mounting Type	Deck Mount
Number of Handles	1
Hole Count	1
Maximum Flow Rate	1.5 Gallons Per Minute
Spout Height	16.38 Inches
Spout Reach	8.75 Inches
Hose Length	68 Inches
Item Weight	7.3 Pounds
Product Dimensions	8.75 x 6.63 x 16.38 inches
Batteries Required	6 AA batteries (included)
Special Feature	Easy to Install, Touchless 2nd Gen

WARRANTY AND SUPPORT

The Moen Kurv Motionsense Wave Sensor Touchless Kitchen Faucet comes with a comprehensive warranty to ensure your peace of mind:

- **5-Year Warranty:** Applies to digital components.
- **Limited Lifetime Warranty:** Applies to the trim.

For warranty claims, technical support, or additional product information, please visit the official Moen website or contact Moen customer service directly. Retain your proof of purchase for warranty validation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question