

[Manuals.plus](#) /

› [Pyle](#) /

› Pyle Portable Bluetooth PA Speaker System - 800W 12 Inch Outdoor Speaker with Built-In Party Lights - USB/SD Card Reader, FM Radio, Extendable Handle w/ Wheels - Includes Wired Microphone & Remote User Manual

Pyle PPHP128B

Pyle Portable Bluetooth PA Speaker System

USER MANUAL

1. Product Overview

The Pyle Portable Bluetooth PA Speaker System is a versatile audio solution designed for both indoor and outdoor use. It features an 800W peak power output, a 12-inch subwoofer, and a 1-inch tweeter for full-range sound. This system supports various audio sources including Bluetooth wireless streaming, USB drives, SD cards, AUX input, and FM radio. It is equipped with an extendable handle and wheels for easy portability, and a built-in rechargeable battery for extended use. The system also includes multi-color flashing LED party lights and comes with a wired microphone and remote control, making it ideal for karaoke, public announcements, and various events.



This image displays the Pyle Portable Bluetooth PA Speaker System, showcasing the main speaker unit with its extendable handle and wheels, alongside the included wired microphone, remote control, and power adapter.

2. Key Features

- **800 Watt Power:** Equipped with a 12" subwoofer and 1-inch tweeter for full range surround stereo sound and impressive bass response.
- **Bluetooth Compatibility:** Wireless audio streaming from devices like iPhone, Android mobile phones, iPads, tablets, and PCs.
- **Multiple Inputs:** Features USB flash drive and SD card reader (MP3 player function), 3.5mm AUX input, and 6.5mm mic input.

- **FM Radio:** Built-in FM radio tuner for listening to local stations.
- **Flashing DJ Lights:** Multi-color flashing disco LED lights enhance the party atmosphere.
- **Portable Design:** Fully portable with a built-in rechargeable battery, rolling wheels, and an extendable handle.
- **Included Accessories:** Comes with a wired microphone and a remote control.

NUMEROUS WAYS TO USE



Bluetooth 5.0



Mic In



USB



Micro SD



AUX In



FM Radio



The Pyle PA speaker offers multiple connectivity options, including Bluetooth for wireless streaming, dedicated inputs for microphones, USB drives, Micro SD cards, and AUX devices, as well as an integrated FM radio tuner.

MUSIC ANYTIME, ANYWHERE

Built-in Rechargeable Battery



3-6H
Playing Time



3600mAh
7.4V

Note: Because being in standby mode might cause battery damage, please turn off the power with the ON/OFF switch when not in use.

Equipped with a built-in rechargeable battery, the speaker provides 3-6 hours of playing time on a single charge, with a battery capacity of 3600mAh at 7.4V. A power-saving mode is available to extend usage.

PORTABLE, CARRY IT ANYWHERE



Designed for portability, the speaker features an extendable handle and convenient rolling wheels, allowing for easy transport to various locations.

MULTI-COLOR FLASHING LED PARTY LIGHTS



Dynamic bright lights provide a disco ambiance at your party, making it more enjoyable.

The speaker includes multi-color flashing disco LED lights on the front grille, enhancing the atmosphere for parties and gatherings.

3. What's in the Box

- (1) Pyle Portable Bluetooth PA Speaker System
- (1) Wired Microphone
- (1) Remote Control
- (1) Power Cable

4. Setup

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all items listed in the "What's in the Box" section are present.
2. **Initial Charging:** Before first use, fully charge the speaker's built-in battery. Connect the provided power cable to the DC 9V input port on the speaker's rear panel and plug it into a standard wall outlet. The charging indicator light will illuminate.
3. **Power On:** Once charged, locate the power switch on the rear panel and switch it to the 'ON' position. The display screen will light up, indicating the unit is ready for operation.
4. **Microphone Connection:** If using the wired microphone, insert its 6.5mm jack into the 'MIC IN' port on the control panel.



The rear control panel features the DC 9V input for charging and powering the unit, along with the main power switch. Ensure the unit is fully charged before first use for optimal battery life.

5. Operating Instructions

The speaker's control panel features various buttons and knobs for managing audio playback, volume, and effects. Familiarize yourself with the main volume control, bass and treble adjustments, and input mode selection buttons. The included remote control provides convenient access to most functions from a distance.

6. Bluetooth Connectivity

1. **Activate Bluetooth Mode:** Power on the speaker. Press the 'MODE' button on the control panel or remote until 'BLUE' appears on the display, indicating Bluetooth mode.
2. **Enable Bluetooth on Device:** On your smartphone, tablet, or computer, go to your Bluetooth settings and ensure Bluetooth is enabled.
3. **Pairing:** Search for available devices. Select 'Pyle Speaker' from the list. The speaker will emit an audible confirmation tone once successfully paired.
4. **Playback:** You can now play audio wirelessly from your connected device through the speaker.

BASS AMPLIFICATION STRONG STEREO AUDIO



The speaker supports Bluetooth wireless music streaming. To connect, activate Bluetooth on your device and select 'Pyle Speaker' from the available devices. A successful connection will be indicated by an audible prompt.

7. Media Playback (USB/SD)

1. **Insert Media:** Insert a USB flash drive or SD card (containing MP3 audio files) into the corresponding port on the control panel.
2. **Automatic Playback:** The speaker will automatically switch to USB/SD mode and begin playing audio files. If not, press the 'MODE' button to select the correct input.
3. **Controls:** Use the 'PLAY/PAUSE', 'PREV', and 'NEXT' buttons on the control panel or remote to manage playback.

8. FM Radio

1. **Select FM Mode:** Press the 'MODE' button until 'FM' appears on the display.
2. **Auto Scan:** Press and hold the 'PLAY/PAUSE' button to initiate an automatic scan for available FM stations. The speaker will save detected stations.
3. **Tune Stations:** Use the 'PREV' and 'NEXT' buttons to navigate through the saved FM stations.

9. Microphone Usage

1. **Connect Microphone:** Plug the wired microphone into the 'MIC IN' port.
2. **Adjust Volume:** Use the 'MIC VOL' knob on the control panel to adjust the microphone's volume.
3. **Echo/Bass/Treble:** Adjust the 'ECHO', 'BASS', and 'TREBLE' knobs to fine-tune the microphone's sound and overall audio output.

10. Party Lights

The speaker features built-in multi-color LED lights that flash and change patterns to the rhythm of the music. These lights automatically activate when the speaker is powered on. There is no specific control for the lights; they are designed to enhance the audio experience visually.

11. Charging and Battery

The Pyle PA Speaker System is equipped with a built-in rechargeable battery. A full charge provides approximately 3-6 hours of playing time, depending on volume levels and feature usage. To extend battery life, utilize the power-saving mode when available. Always turn off the speaker using the ON/OFF switch when not in use to prevent battery damage from prolonged standby.

12. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the speaker. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, ensure the battery is partially charged (around 50%) to maintain battery health.
- **Avoid Water:** This speaker is not waterproof. Keep it away from water, moisture, and excessive humidity to prevent damage.

13. Troubleshooting

Problem	Possible Cause	Solution
No power	Battery is depleted; Power switch is OFF; Power cable not connected.	Charge the battery; Turn the power switch ON; Ensure power cable is securely connected.
No sound	Volume is too low; Incorrect input mode selected; Device not paired (Bluetooth); Media file corrupted.	Increase master volume; Press MODE button to select correct input; Re-pair Bluetooth device; Try a different media file.
Microphone not working	Microphone not plugged in correctly; MIC VOL knob is too low; Microphone is faulty.	Ensure microphone is fully inserted; Increase MIC VOL; Test with another microphone if possible.
Bluetooth connection unstable	Device is too far from speaker; Interference from other devices.	Move device closer to speaker (within 30 ft); Move away from other wireless devices.

14. Specifications

Specification	Value
Model Number	PPHP128B
Output Wattage	800 Watts (Peak)
Subwoofer Size	12 inches
Tweeter Size	1 inch
Power Source	Battery Powered
Battery Type	Built-in Rechargeable
Playing Time	3-6 Hours
Connectivity Technology	Bluetooth, USB, AUX
Bluetooth Version	5.0
Audio Inputs	3.5mm AUX input, 1/4inch mic input
Material	Metal, Plastic
Item Weight	12.45 Pounds
Product Dimensions (L x W x H)	13.97 x 21.65 x 10.62 inches
UPC	842893137773

15. Warranty and Support

Pyle products are designed and manufactured to the highest standards. For warranty information and technical support, please refer to the official Pyle website or contact their customer service. A digital version of this user manual is available for download at <https://manuals.plus/m/a82f94f365be831cd690b430fa0e94f440c181c97799f79a6aeed91a29d19065>.

© 2024 Pyle. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question