

Manuals.plus /

› Mienta /

› Mienta Microwave Blaze 28L (MW32617A) User Manual

Mienta MW32617A

Mienta Microwave Blaze 28L (MW32617A) Instruction Manual

1. INTRODUCTION

Thank you for purchasing the Mienta Microwave Blaze 28L, model MW32617A. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new microwave oven. Please read these instructions thoroughly before using the appliance and retain them for future reference.

1.1 Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. These include:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door, or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure proper ventilation around the appliance.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Only use utensils suitable for microwave ovens.
- Clean the oven regularly and remove any food deposits.

2. PRODUCT OVERVIEW

The Mienta Microwave Blaze 28L (MW32617A) is a countertop microwave oven designed for efficient food preparation. It features a 28-liter capacity and 1000 watts of cooking power.



Figure 2.1: Front view of the Mienta Microwave Blaze 28L, showing the door, handle, and control panel.

2.1 Components and Controls

Familiarize yourself with the main parts of your microwave oven:

- **Oven Door:** Equipped with a safety interlock system.
- **Door Handle:** For opening and closing the oven door.
- **Control Panel:** Contains the display, function buttons, and control dial.
- **Turntable:** Rotates food for even cooking.
- **Oven Light:** Illuminates the oven interior during operation.



Figure 2.2: Detailed view of the control panel, showing various function buttons and the rotary dial.



Figure 2.3: Close-up of the digital display and indicator icons on the Mienta Microwave.

2.2 Control Panel Functions

The control panel features several buttons and a rotary dial for setting cooking parameters:

- **Microwave / Grill / Combi:** Selects cooking mode.
- **Weight Defrost:** Defrosts food based on weight input.
- **Time Defrost:** Defrosts food based on time input.
- **Kitchen Timer / Clock:** Sets the kitchen timer or adjusts the clock.
- **Stop / Clear:** Stops current operation or clears settings.
- **Start / +30Sec / Confirm:** Starts cooking, adds 30 seconds to cooking time, or confirms selections.
- **Rotary Dial (Timer Weight Auto menu):** Adjusts time, weight, or selects auto menu options.

3. SETUP

3.1 Unpacking

1. Carefully remove the microwave oven and all packaging materials from the carton.
2. Check the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged. Contact Mienta customer service.
3. Remove any protective film from the cabinet surface.

3.2 Placement

- Place the oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it.
- Ensure adequate ventilation. Leave a minimum of 20 cm (8 inches) of space above the oven, 10 cm (4 inches) at the rear, and 5 cm (2 inches) on each side for proper airflow.
- Do not block air vents. Blocking vents can damage the oven and lead to poor cooking results.
- Keep the oven away from heat sources, steam, or splashing liquids.

3.3 Power Connection

- Plug the power cord into a properly grounded electrical outlet.
- Ensure the voltage and frequency of the power supply match the specifications on the oven's rating label.
- Do not use extension cords or adapters with this appliance.

4. OPERATING INSTRUCTIONS

4.1 Setting the Clock

1. Press the "Kitchen Timer / Clock" button once.
2. Turn the rotary dial to set the hour.
3. Press "Kitchen Timer / Clock" again.
4. Turn the rotary dial to set the minutes.
5. Press "Kitchen Timer / Clock" or "Start / +30Sec / Confirm" to confirm the setting.

4.2 Basic Microwave Cooking

1. Place food in a microwave-safe container on the turntable. Close the door.
2. Press the "Microwave" button repeatedly to select the desired power level (e.g., 100% for full power).
3. Turn the rotary dial to set the cooking time.
4. Press "Start / +30Sec / Confirm" to begin cooking.

4.3 Defrosting Food

The microwave offers two defrost modes: Weight Defrost and Time Defrost.

4.3.1 Weight Defrost

1. Place the frozen food on the turntable.
2. Press the "Weight Defrost" button.
3. Turn the rotary dial to select the weight of the food (e.g., 0.2 kg to 2.0 kg).
4. Press "Start / +30Sec / Confirm" to start defrosting.

4.3.2 Time Defrost

1. Place the frozen food on the turntable.
2. Press the "Time Defrost" button.
3. Turn the rotary dial to set the desired defrosting time.
4. Press "Start / +30Sec / Confirm" to start defrosting.

4.4 Using the Auto Menu

The Auto Menu provides pre-programmed settings for common food items. Refer to the specific auto menu chart (if

provided with your appliance) for details on each program.

1. Turn the rotary dial to select an Auto Menu program.
2. Press "Start / +30Sec / Confirm" to confirm the selection.
3. Turn the rotary dial to adjust the quantity or weight if prompted.
4. Press "Start / +30Sec / Confirm" to begin cooking.

5. MAINTENANCE AND CLEANING

Regular cleaning and proper maintenance will ensure the longevity and efficient operation of your microwave oven.

5.1 Cleaning the Oven Interior

- Always unplug the oven before cleaning.
- Wipe the interior cavity after each use with a damp cloth to remove food splatters.
- For stubborn stains, place a bowl of water with lemon juice inside and heat for 2-3 minutes on high power. The steam will loosen the stains, making them easier to wipe away.
- Do not use abrasive cleaners or harsh detergents.

5.2 Cleaning the Oven Exterior

- Wipe the exterior surface with a soft, damp cloth.
- Clean the control panel with a soft, damp cloth. Avoid excessive water near the buttons.

5.3 Cleaning the Turntable and Roller Ring

- Remove the glass turntable and roller ring.
- Wash them in warm, soapy water or in the dishwasher.
- Ensure they are completely dry before placing them back in the oven.

6. TROUBLESHOOTING

If you encounter issues with your microwave oven, refer to the following table for common problems and solutions. If the problem persists, contact Mienta customer service.

Problem	Possible Cause	Solution
Oven will not start.	Power cord not securely plugged in. Door not closed properly. Fuse blown or circuit breaker tripped.	Ensure power cord is firmly plugged into outlet. Close the oven door securely. Check household fuse or reset circuit breaker.
Food not heating.	Incorrect cooking time or power level set. Door not closed properly. Microwave-safe dish not used.	Adjust cooking time and power level. Ensure door is fully closed. Use only microwave-safe cookware.
Turntable not rotating.	Turntable or roller ring not correctly positioned. Debris under turntable.	Reposition turntable and roller ring. Clean under the turntable.
Oven light not working.	Light bulb needs replacement.	Contact qualified service personnel for bulb replacement.

7. SPECIFICATIONS

Technical specifications for the Mienta Microwave Blaze 28L (MW32617A):

- **Brand:** Mienta
- **Model Number:** MW32617A
- **Capacity:** 28 Liters
- **Energy Use (Wattage):** 1000 Watts
- **Installation Type:** Countertop
- **Oven Cooking Mode:** Microwave Radiation
- **Controller Type:** Button
- **Material:** Metal (Inner and Outer)
- **Color:** Silver
- **Package Dimensions (L x W x H):** 56.1 x 45.13 x 34.83 cm
- **Item Weight:** 14.9 Kilograms
- **Door Hinges:** Left
- **Defrost Function:** Yes (Weight and Time Defrost)
- **Human Interface Input:** Buttons
- **Number of Microwave Power Levels:** 1 (1000 Watts)

8. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your purchase or contact your retailer.

Mienta provides customer support for product inquiries, service, and spare parts.

Please visit the official Mienta website or contact their customer service department for assistance. Keep your purchase receipt as proof of purchase for warranty claims.