

[Manuals.plus](#) /

› [CUSIMAX](#) /

› CUSIMAX Bread Maker Machine User Manual

CUSIMAX B096LXVPWF

CUSIMAX Bread Maker Machine User Manual

Model: B096LXVPWF

INTRODUCTION

Thank you for choosing the CUSIMAX Bread Maker Machine. This appliance is designed to simplify the process of baking fresh, homemade bread, dough, jam, and more. With its programmable settings and versatile functions, you can enjoy a variety of baked goods with minimal effort. Please read this manual thoroughly before first use to ensure safe operation and optimal performance.



Image: The CUSIMAX Bread Maker Machine in black, shown next to its removable bread pan containing freshly baked bread rolls.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "off", then remove plug from wall outlet.

- Do not use appliance for other than intended use.

PACKAGE CONTENTS

Please check the package contents upon unpacking. If any items are missing or damaged, contact customer support.

- CUSIMAX Bread Maker Machine
- Bread Pan (Nonstick)
- Kneading Blades (2)
- Measuring Cup
- Measuring Spoon
- Metal Hook (for removing kneading blades)
- User Manual (this document)

ACCESSORIES INCLUDE



Bread pot



Measuring cup



Kneading blade



Measuring spoon



Metal hook

Image: The CUSIMAX Bread Maker Machine displayed with its accessories, including the bread pan, measuring cup, two kneading blades, measuring spoon, and a metal hook.

PRODUCT OVERVIEW

Familiarize yourself with the main components of your bread maker:

- **Control Panel:** Features buttons for Menu, Weight, Timer, and Color, along with a Start/Stop button.
- **LED Display:** Shows program selection, time remaining, loaf size, and crust color settings.
- **View Windows:** Allows monitoring of the baking process without opening the lid.
- **Bread Pan:** Nonstick, removable pan for baking.
- **Kneading Paddles:** Two paddles located at the bottom of the bread pan for mixing and kneading dough.

Homemade bread for the family

3
CRUST
COLORS

Light

Medium

Dark



3
LOAF
SIZES


3lb


2.5lb


2lb



Image: A detailed view of the bread maker's top, highlighting the control panel, LED display, view windows, and the list of 15 available programs.



Image: A close-up of the LED display on the CUSIMAX Bread Maker, showing the time '13:05' and indicators for loaf size (1000G, 1250G, 1500G) and crust color (Light, Med, Dark).

SETUP AND FIRST USE

1. **Unpack:** Carefully remove the bread maker and all accessories from the packaging.
2. **Clean:** Wash the bread pan and kneading blades with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the bread maker with a damp cloth.
3. **Assemble:** Insert the kneading blades onto the shafts at the bottom of the bread pan. Place the bread pan into the bread maker, ensuring it clicks securely into place.
4. **Ventilate:** Place the bread maker on a stable, heat-resistant surface with adequate ventilation around it.
5. **Power On:** Plug the power cord into a grounded electrical outlet. The display will light up, indicating it's ready for use.



Image: The nonstick bread pan and two kneading blades, essential components for bread making, shown alongside a finished loaf.

OPERATING INSTRUCTIONS

Basic Bread Making Steps

1. **Add Ingredients:** Place ingredients into the bread pan in the order specified by your recipe (typically liquids first, then dry ingredients, with yeast last). Ensure kneading blades are properly installed.
2. **Select Program:** Press the "MENU" button to cycle through the 15 available programs until your desired program is selected (e.g., Basic, French, Whole Wheat, Gluten Free).
3. **Choose Loaf Size:** Press the "WEIGHT" button to select the desired loaf size (2lb, 2.5lb, or 3lb).

4. **Select Crust Color:** Press the "COLOR" button to choose your preferred crust color (Light, Medium, or Dark).
5. **Start Baking:** Press the "START/STOP" button to begin the baking process. The machine will automatically perform kneading, rising, and baking cycles.
6. **Remove Bread:** Once the program is complete, the machine will beep. Unplug the appliance and carefully remove the bread pan using oven mitts. Invert the pan to release the bread. Use the metal hook to remove the kneading blades from the bread if they remain embedded.



Image: A visual guide showing three simple steps for baking fresh bread: adding ingredients, setting the program and loaf size on the control panel, and enjoying the finished bread.

Available Programs (15-in-1)

The CUSIMAX Bread Maker offers 15 versatile programs:

- 1. Basic
- 2. French
- 3. Whole Wheat
- 4. Sweet
- 5. Buttermilk
- 6. Gluten Free
- 7. Super Rapid
- 8. Cake
- 9. Knead
- 10. Dough
- 11. Pasta Dough
- 12. Yogurt
- 13. Jam
- 14. Bake
- 15. Homemade



Image: A collage showcasing the variety of items that can be prepared using the 15 programs, such as basic bread, sweet bread, French bread, cake, jam, yogurt, and pizza dough.

Loaf Sizes and Crust Colors

You can customize your bread to suit your preferences:

- **Loaf Sizes:** Choose between 2lb (1000g), 2.5lb (1250g), and 3lb (1500g) to accommodate different needs.
- **Crust Colors:** Select Light, Medium, or Dark crust for your bread.



Image: A visual comparison of three bread loaves, illustrating the available loaf sizes (2lb, 2.5lb, 3lb) and the corresponding crust color options (Light, Medium, Dark).

Delay Timer and Keep Warm Function

- **Delay Timer:** Use the "TIMER+" and "TIMER-" buttons to set a delay for up to 15 hours, allowing you to wake up to fresh bread.
- **Keep Warm:** After baking, the bread maker automatically enters a 1-hour "Keep Warm" cycle to maintain the bread's temperature.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your bread maker.

- **Unplug:** Always unplug the appliance and allow it to cool completely before cleaning.
- **Bread Pan & Kneading Blades:** These parts are **Hand Wash Only**. Wash with warm, soapy water using a soft sponge. Do not use abrasive cleaners or scouring pads, as this can damage the nonstick coating. Rinse thoroughly and dry completely before reassembling or storing.
- **Exterior:** Wipe the exterior of the bread maker with a soft, damp cloth. Do not immerse the main unit in water or any other liquid.
- **Interior:** Remove any crumbs from the baking chamber with a soft brush or damp cloth.

TROUBLESHOOTING

If you encounter issues with your bread maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Bread does not rise	Expired yeast, incorrect water temperature, too much salt, not enough sugar.	Check yeast expiration date. Use lukewarm water (105-115°F / 40-46°C). Ensure correct ingredient measurements.
Bread is too dense	Too much flour, not enough liquid, incorrect program selected.	Measure ingredients precisely. Ensure proper liquid-to-flour ratio. Select appropriate program for the recipe.
Bread pan sticks	Damage to nonstick coating, residue buildup.	Ensure pan is clean and dry before use. Avoid using metal utensils. If coating is damaged, consider replacement.
Machine does not start	Not plugged in, lid not closed properly, program not selected.	Check power connection. Ensure lid is securely closed. Select a program and press Start/Stop.

SPECIFICATIONS

Brand	CUSIMAX
Model	B096LXVPWF
Colour	Black
Product Dimensions	40.01 x 23.5 x 29.01 cm (15.75 x 9.25 x 11.42 inches)

Capacity	1.36 kg (3 LB)
Power/Wattage	700 watts
Voltage	220 Volts
Material	Aluminum
Item Weight	6.35 kg
Number of Programs	15
Product Care Instructions	Hand Wash Only (for bread pan and kneading blades)

WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the warranty card included with your purchase or visit the official CUSIMAX website. You can also contact CUSIMAX customer service directly for assistance.
CUSIMAX Official Store: [Visit CUSIMAX Store on Amazon](#)

