



[Manuals.plus](#) /

> [VEGER](#) /

> VEGER Slim & Lightweight 10000mAh Mini Power Bank USB C 5V 3A with LED Display User Manual

VEGER 10000mAh USB C Power Bank

VEGER 10000mAh USB C Power Bank User Manual

Model: 10000mAh USB C Power Bank

INTRODUCTION

Thank you for choosing the VEGER 10000mAh USB C Power Bank. This compact and lightweight portable charger is designed to provide reliable power for your mobile devices on the go. With its accurate LED display and versatile charging options, it ensures you stay connected wherever you are.



Image: The VEGER 10000mAh Power Bank, demonstrating its ultra-compact design when held in a hand.

PRODUCT FEATURES

- **Accurate LED Display:** The integrated LED screen provides a precise real-time percentage of the remaining power, activated by pressing the power button.
- **Dual Input/Output Ports:** Supports both Micro USB and USB-C inputs for recharging the power bank. The USB-C port also functions as an output.
- **10000mAh Capacity:** Sufficient capacity to charge an iPhone 12 approximately 2.3 times, an iPhone 11 Pro 2.3 times, or a Huawei P20 2.1 times, ideal for daily use and travel.
- **Simultaneous Charging & Wide Compatibility:** Equipped with two output ports (USB-A and USB-C) to charge two devices concurrently without sacrificing speed. Compatible with a wide range of USB-enabled devices including smartphones, iPads, and tablets.
- **Compact & Portable Design:** Ultra-compact body measuring only 10.6 x 6.9 x 1.6 cm (4.17 x 2.72 x 0.63 inches) and weighing just 164.4 g (5.8 oz), making it easy to carry in a pocket or bag.

Accurate LED Display

Check remaining battery clearly

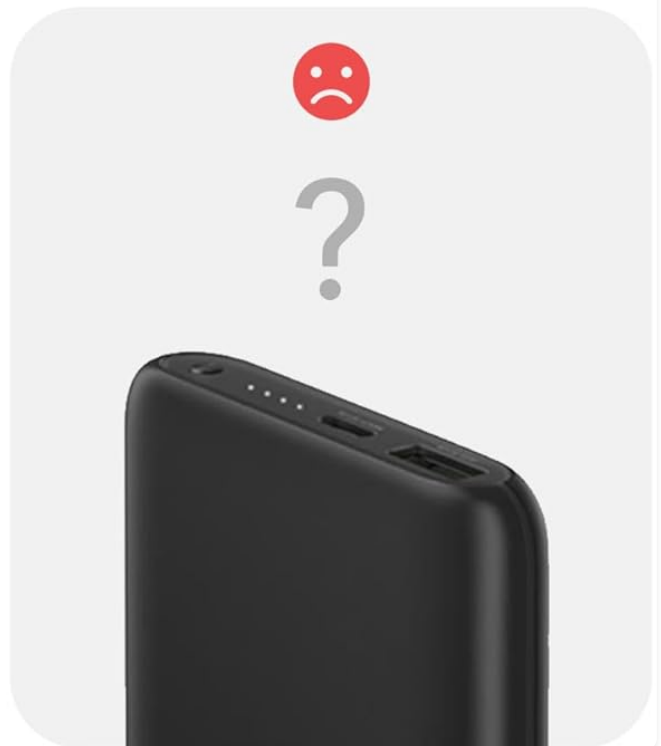


Image: Detailed view of the accurate LED display on the power bank, showing the battery percentage.

Special Design for iPhone Series



Image: Visual representation of the power bank's charging capacity for different devices, including iPhone 12, Google Pixel 6, AirPods, and Galaxy S21.

Charge 2 Devices Simultaneously



Image: The power bank connected to and charging two devices at once, demonstrating its dual output capability.

PACKAGE CONTENTS

Please check the package contents upon unboxing to ensure all items are present:

- 1 x VEGER 10000mAh Power Bank
- 1 x USB-A to USB-C Charging Cable
- 1 x User Manual

- 1 x Storage Pouch



Image: An overhead view of the VEGER power bank's packaging and included accessories.

SETUP

First Use

Before using your VEGER Power Bank for the first time, it is recommended to fully charge it. This ensures optimal battery performance and accuracy of the LED display.

1. Connect the provided USB-A to USB-C cable to the USB-C input port on the power bank.
2. Plug the USB-A end of the cable into a compatible USB wall charger (not included) or a computer's USB port.
3. The LED display will show the charging progress. The power bank is fully charged when the display shows "100%".

OPERATING INSTRUCTIONS

Charging Your Devices

The VEGER Power Bank can charge a wide range of USB-powered devices.

1. Connect your device's charging cable to one of the output ports on the power bank (USB-A or USB-C).
2. Connect the other end of the cable to your device.
3. The power bank will automatically begin charging your device. If it doesn't, press the power button on the side of the power bank.
4. The LED display will show the remaining battery percentage of the power bank.



Image: The power bank charging both a smartphone and a pair of wireless earbuds, showcasing its versatility for different devices.

Recharging the Power Bank

When the power bank's battery is low, recharge it using either the Micro USB or USB-C input port.

1. Connect a compatible charging cable (Micro USB or USB-C) to the corresponding input port on the power bank.
2. Plug the other end of the cable into a USB wall charger (5V/3A recommended for fastest charging) or a computer's USB port.
3. The LED display will illuminate and show the charging percentage. It takes approximately 4.5 hours to fully recharge the power bank with a 3A charger.



Image: A USB-C cable being inserted into the power bank's USB-C port, highlighting its dual input/output functionality.

LED Display Guide

The LED display shows the exact battery percentage of the power bank. Press the power button once to activate the display and check the current charge level.

MAINTENANCE

- Keep the power bank away from extreme temperatures (hot or cold), direct sunlight, and humid environments.
- Do not expose the power bank to water or other liquids.
- Clean the power bank with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Store the power bank in a cool, dry place when not in use. For long-term storage, it is recommended to charge it to about 50-75% every 3 months to preserve battery life.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Power bank not charging devices.	Power bank is out of charge; Cable is faulty or not properly connected; Device is not compatible.	Recharge the power bank; Try a different cable or ensure connections are secure; Verify device compatibility.
Power bank not recharging.	Charging cable or adapter is faulty; Input port is damaged; Power bank is already full.	Try a different charging cable or wall adapter; Ensure the input port is clean and undamaged; Check the LED display for 100%.
Slow charging speed.	Using a low-power charger/cable; Device's charging input limit; Charging multiple devices simultaneously.	Use a 5V/3A charger and a high-quality cable; Check your device's charging specifications; Charge one device at a time for faster charging.

Problem	Possible Cause	Solution
LED display not working.	Power button not pressed; Power bank is completely drained or faulty.	Press the power button firmly; Recharge the power bank; If issue persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	VEGER
Model	10000mAh USB C Power Bank
Connector Type	USB Type C, Micro USB
Color	Black 1
Special Feature	Slim
Voltage	5 Volts
Battery Composition	Lithium Polymer
Item Weight	167 Grams
Amperage	3 A
Number of Ports	3 (1 Micro USB Input, 1 USB-C Input/Output, 1 USB-A Output)
Charging Time	4.5 hours (with 3A charger)

4X Faster than Normal Charger



VEGER **22.5W** Fast Charge



Other **5V 2A / 1.5A**



4x
FASTER

Image: A visual breakdown of the power bank's input and output capabilities, including Micro Input (18W), USB A Output (22.5W), and USB C Output/Input (18W/20W).

SAFETY INFORMATION

Please read and follow these safety guidelines to prevent injury or damage to the product:

- Do not disassemble, open, or shred the power bank.
- Do not expose the power bank to heat or fire. Avoid storage in direct sunlight.

- Do not short-circuit the power bank.
- Do not subject the power bank to mechanical shock.
- In the event of a leak, do not allow the liquid to come into contact with skin or eyes. If contact has occurred, wash the affected area with copious amounts of water and seek medical advice.
- Keep the power bank out of reach of children.
- Dispose of the power bank properly according to local regulations. Do not dispose of it with household waste.

WARRANTY AND SUPPORT

VEGER products come with a standard manufacturer's warranty. For detailed warranty information, technical support, or any product-related inquiries, please refer to the contact information provided on the product packaging or visit the official VEGER website.

Please retain your proof of purchase for warranty claims.