

[Manuals.plus](#) /

> [Vanzon](#) /

> Vanzon Climber-Z Bluetooth Speaker User Manual

## Vanzon Climber-Z

# Vanzon Climber-Z Bluetooth Speaker User Manual

Model: Climber-Z

## INTRODUCTION

---


Thank you for purchasing the Vanzon Climber-Z Portable Bluetooth Speaker. This manual provides detailed instructions on how to set up, operate, and maintain your speaker. Please read this manual carefully before use to ensure optimal performance and longevity of your device. Keep this manual for future reference.

## PRODUCT OVERVIEW

---

The Vanzon Climber-Z is a versatile and robust portable Bluetooth speaker designed for various environments, from home use to outdoor adventures. It features IPX7 waterproofing, powerful 30W audio output, and multiple playback modes.



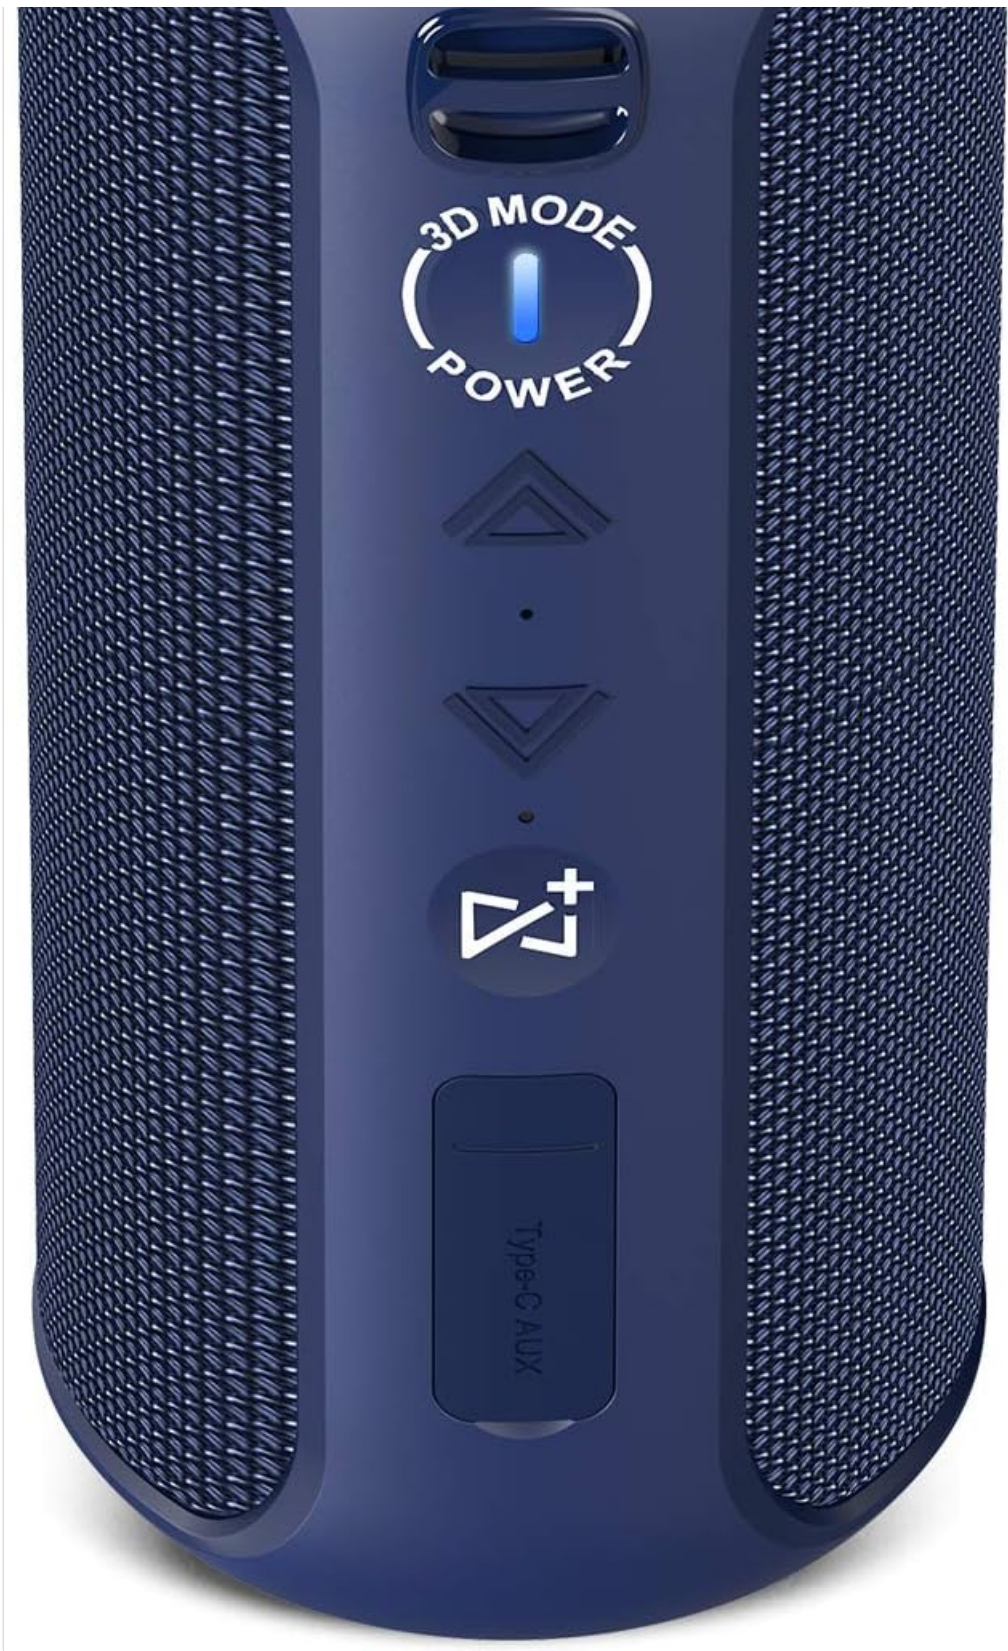

**Figure 1:** Front view of the Vanzon Climber-Z speaker, highlighting the main control panel including volume knob, 3D mode button, power button, track controls, and Party-Buddy button.

# BLUETOOTH V5.0

- 1-3 second connection
- Distance : Up to 60 feet



**Figure 2:** Detailed diagram of the Vanzon Climber-Z speaker's controls and ports. This includes the volume/play/pause/answer/reject call knob, strip hole, power ON/OFF, previous track, next track, Party-Buddy button, Type-C charge slot, and AUX input port.

## Package Contents:

- Vanzon Climber-Z Bluetooth Speaker
- USB-C Charging Cable
- 3.5mm AUX Audio Cable
- User Manual
- Carabiner

## FEATURES

- **IPX7 Structure Waterproof:** Provides strong waterproof protection, making it suitable for various environments.
- **Compact & Practical Design:** Small size, lightweight, and includes a carabiner for easy portability.
- **Shocking Sound:** 30W HD superior 360° sound with powerful bass and 3D audio mode.
- **True Wireless Stereo (TWS) Technology:** Allows pairing two Climber-Z speakers for enhanced stereo sound.

- **Extended Wireless Range:** Bluetooth V5.0 connectivity with a range of up to 66 feet (20 meters).
- **Built-in Microphone:** Supports hands-free calls with clear sound quality.
- **Multiple Play Modes:** Supports Bluetooth connection, 3.5mm AUX input, and TF card (WAV/FLAC/APE/MP3 format).
- **Long Battery Life:** High-efficiency 3600mAh lithium-ion battery for extended playback.

## SETUP

---

### 1. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB-C charging cable to the speaker's Type-C port and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator light will show charging status (refer to LED indicator section for details). A full charge typically takes 3-4 hours.

### 2. Powering On/Off

- **To Power On:** Press and hold the **POWER** button for 2-3 seconds until you hear an audible prompt and the LED indicator lights up.
- **To Power Off:** Press and hold the **POWER** button for 2-3 seconds until you hear an audible prompt and the LED indicator turns off.

## OPERATING INSTRUCTIONS

---

### 1. Bluetooth Connection

1. Ensure the speaker is powered on and in Bluetooth pairing mode (the LED indicator will flash blue rapidly).
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Vanzon Climber-Z" from the list of devices.
4. Once connected, the LED indicator will turn solid blue, and you will hear a confirmation sound.
5. The speaker will automatically reconnect to the last paired device when powered on, if the device is within range and Bluetooth is enabled.

# BLUETOOTH V5.0

- 1-3 second connection
- Distance : Up to 60 feet



**Figure 3:** Illustration of Bluetooth V5.0 connectivity, showing a smartphone connected to the Vanzon Climber-Z speaker with a range of up to 60 feet.

## 2. AUX Mode

Connect one end of the 3.5mm AUX audio cable to the speaker's AUX input port and the other end to the audio output jack of your device. The speaker will automatically switch to AUX mode. Use your device to control playback and volume.

## 3. TF Card Playback

Insert a TF (MicroSD) card with supported audio files (WAV, FLAC, APE, MP3) into the TF card slot. The speaker will automatically detect the card and begin playing music. Use the speaker's controls to manage playback.

## 4. Controls

- **Volume Up/Down:** Rotate the top knob clockwise to increase volume, counter-clockwise to decrease.
- **Play/Pause:** Press the top knob once to play or pause music.
- **Next Track:** Press the **Next Track** button (triangle pointing right).

- **Previous Track:** Press the **Previous Track** button (triangle pointing left).
- **Answer/End Call:** Press the top knob once during an incoming call to answer, press again to end.
- **Reject Call:** Press and hold the top knob for 2 seconds during an incoming call to reject.
- **3D Mode:** Press the **3D MODE** button to toggle 3D audio effect on/off.

## 5. Party-Buddy (TWS) Function

The True Wireless Stereo (TWS) function allows you to pair two Vanzon Climber-Z speakers together for a true stereo sound experience. This feature is ideal for larger spaces or immersive listening.

1. Ensure both speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), press the **Party-Buddy** button (the button with the square and plus sign). You will hear a prompt indicating it's searching.
3. On the second speaker (this will be the secondary speaker), press the **Party-Buddy** button.
4. The two speakers will automatically connect to each other. You will hear a confirmation sound when they are successfully paired.
5. Once paired, connect your device to the primary speaker via Bluetooth as described in the "Bluetooth Connection" section. Both speakers will now play audio in stereo.
6. To disconnect TWS, press the **Party-Buddy** button on either speaker.



**Figure 4:** Visual representation of multiple Vanzon Climber-Z speakers connected using the Party-Buddy feature, enabling synchronized audio playback for a larger sound experience.

## MAINTENANCE

- **Cleaning:** Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Resistance:** While the speaker is IPX7 waterproof, ensure the port cover is securely closed before exposing it to water. Do not submerge the speaker for extended periods or beyond the specified depth (1 meter for 30 minutes). After exposure to water, dry the speaker thoroughly before charging.
- **Battery Care:** To prolong battery life, charge the speaker regularly, even if not in use for extended periods. Avoid fully discharging the battery frequently.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
Cannot pair with Bluetooth device.	Speaker not in pairing mode; device too far; interference.	Ensure speaker is flashing blue; move device closer; turn off other Bluetooth devices.
No sound.	Volume too low; incorrect mode; cable not connected.	Increase volume on speaker and device; check mode (Bluetooth/AUX/TF); ensure cables are secure.
Sound distortion.	Volume too high; low battery; poor signal.	Reduce volume; charge speaker; move device closer to speaker.
Party-Buddy (TWS) not connecting.	Speakers already paired to a device; too far apart.	Disconnect speakers from any Bluetooth devices; ensure they are close to each other.

## SPECIFICATIONS

Feature	Detail
Model Name	Climber-Z
Brand	Vanzon
Speaker Type	Outdoor
Connectivity Technology	Bluetooth V5.0, Auxiliary
Speaker Maximum Output Power	30 Watts
Waterproof Rating	IPX7
Battery Capacity	3600mAh Lithium Ion
Play Modes	Bluetooth, AUX, TF Card
Supported TF Card Formats	WAV / FLAC / APE / MP3
Wireless Range	Up to 66 feet (20 meters)
Built-in Microphone	Yes
Power Source	Battery Powered

## WARRANTY AND SUPPORT

Vanzon products come with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included in your product packaging or visit the official Vanzon website. If you encounter any issues or have questions regarding your Climber-Z speaker, please contact Vanzon customer support through the contact information provided on the official website or your purchase platform.

**Customer Support:** Please refer to your purchase documentation or the Vanzon official website for contact details.

