

[Manuals.plus](#) /

› [Instant Pot](#) /

› Instant Vortex Plus 6-Quart Air Fryer Oven User Manual

Instant Pot 140-3088-01

Instant Vortex Plus 6-Quart Air Fryer Oven User Manual

Model: 140-3088-01 | Brand: Instant Pot

INTRODUCTION

Welcome to the Instant Vortex Plus 6-Quart Air Fryer Oven. This appliance is designed to simplify your cooking experience by offering multiple functions in one compact unit. With its advanced features, you can enjoy healthier, delicious meals with ease. Please read this manual thoroughly before first use to ensure safe and optimal operation.



The Instant Vortex Plus 6-Quart Air Fryer Oven, showcasing its sleek design and the ClearCook window, alongside its product packaging.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.

- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.

SETUP

Unpacking

Carefully remove all contents from the packaging. Ensure all parts are present: the main air fryer unit, the cooking basket, and the cooking tray.

Initial Cleaning

Before first use, wash the cooking basket and cooking tray with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely. Wipe the interior and exterior of the main unit with a damp cloth.



Non-stick cooking tray



Fits 2lbs of french fries or 4lbs of chicken



ClearCook window to monitor cooking



EvenCrisp™ Technology creates the perfect crisp



Dishwasher safe basket and tray

The non-stick cooking tray, designed for easy cleaning, and the intuitive control panel of the Instant Vortex Plus Air Fryer.

Placement

Place the air fryer on a stable, level, heat-resistant surface, away from walls and other appliances. Ensure there is at least 5 inches (13 cm) of space on all sides of the appliance to allow for proper air circulation.

OPERATING INSTRUCTIONS

Control Panel Overview

The Instant Vortex Plus features a digital touchscreen and a central knob for precise control. The display shows temperature, time, and cooking progress.



Progress bar shows step-by-step instructions for each stage of cooking



Easy-to-use controls
Digital touch interface allows
for fast, exact control

A detailed view of the digital control panel, showing the progress bar and various function buttons for easy operation.

Cooking Functions

This appliance offers 6-in-1 functionality:

- **Air Fry:** For crispy results with little to no oil.
- **Roast:** Perfect for tender meats and vegetables.
- **Broil:** For browning and melting.
- **Bake:** Ideal for cakes, pastries, and more.
- **Reheat:** Quickly warms up leftovers.
- **Dehydrate:** For making dried fruits, jerky, and other snacks.

ClearCook Window and Internal Light

The integrated ClearCook window and internal light allow you to monitor your food's progress without opening the basket, preserving heat and ensuring consistent cooking.



ClearCook window
Monitor cooking progress
without opening the basket

The ClearCook window provides a clear view of the cooking process, allowing you to monitor food without interrupting the cycle.

EvenCrisp Technology

This advanced technology ensures optimal airflow, delivering a perfect golden finish and crispy, tender results every time.



EvenCrisp™ Technology
Creates the perfect crunch
with 95% less oil *

*Compared to deep frying

EvenCrisp Technology ensures food, such as these roasted Brussels sprouts, achieves a perfectly crispy texture.

One-Touch Smart Programs

The appliance comes with customizable smart programs for common dishes like wings, roasted vegetables, and more, allowing for convenient one-touch cooking.

MAINTENANCE AND CLEANING

Daily Cleaning

Always unplug the air fryer and allow it to cool completely before cleaning. The cooking basket and cooking tray are non-stick and dishwasher safe for easy cleanup. For stubborn residue, soak in warm, soapy water before washing.

Exterior Cleaning

Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may

damage the finish.

Storage

Ensure the appliance is clean and dry before storing. Store in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on	Not plugged in; Power outlet issue	Ensure plug is securely inserted; Check power outlet with another appliance.
Food not cooked evenly	Basket overloaded; Food not shaken/turned	Do not overload the basket; Shake or turn food halfway through cooking.
Food not crispy	Insufficient cooking time/temperature; Too much moisture	Increase cooking time or temperature; Pat food dry before cooking; Use a light coating of oil.
White smoke from appliance	Grease residue; Fatty food	Clean the basket and tray thoroughly; For fatty foods, drain excess fat during cooking.

SPECIFICATIONS

- **Model Number:** 140-3088-01
- **Capacity:** 6 Liters
- **Power:** 1700 Watts
- **Voltage:** 120 Volts (AC)
- **Product Dimensions:** 32.51 cm (D) x 29.97 cm (W) x 37.85 cm (H)
- **Item Weight:** 5.15 kg
- **Material:** Plastic
- **Functions:** Air Fry, Roast, Broil, Bake, Reheat, Dehydrate



The spacious cooking basket of the Instant Vortex Plus, demonstrating its capacity compared to a standard 12-inch skillet.

WARRANTY INFORMATION

This Instant Pot appliance comes with a limited warranty. Please refer to the warranty card included in your product packaging or visit the official Instant Pot website for detailed warranty terms and conditions. Keep your purchase receipt as proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, troubleshooting, or to inquire about replacement parts, please contact Instant Pot customer support:

- **Website:** instantbrands.ca
- **Phone:** Refer to the Instant Pot website for regional contact numbers.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question