

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Epson](#) /

› [Epson EcoTank ET-2800 Wireless Color All-in-One Cartridge-Free Supertank Printer with Scan and Copy User Manual](#)

Epson ET-2800 Black

Epson EcoTank ET-2800 Wireless Color All-in-One Printer User Manual

Model: ET-2800 Black | Brand: Epson

INTRODUCTION

The Epson EcoTank ET-2800 is a versatile all-in-one printer designed for home use, offering printing, scanning, and copying functionalities. It features an innovative cartridge-free Supertank system, utilizing high-capacity, easily refillable ink tanks to reduce ink replacement costs and waste. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your ET-2800 printer.

WHAT'S IN THE BOX

- Epson EcoTank ET-2800 All-in-One Printer
- User Manual
- CD-ROM for Product Setup
- Power Cord
- 1 Bottle 522 Black Ink
- 1 Bottle each 522 Cyan, Magenta, Yellow Ink

SETUP

Follow these steps for initial setup of your Epson EcoTank ET-2800 printer:


1. **Unpack the Printer:** Carefully remove the printer from its packaging. Remove all protective tapes and materials.
2. **Connect Power:** Plug the power cord into the printer and then into a wall outlet.
3. **Initial Ink Fill:** Open the ink tank unit cover. Carefully uncap each ink bottle and insert it into the corresponding color tank. The bottles are keyed to fit only the correct color. Allow the ink to drain completely into the tanks. Close the ink tank unit cover.
4. **Software Installation:** Insert the provided CD-ROM into your computer or visit the official Epson support website to download the latest drivers and software. Follow the on-screen instructions to complete the installation.
5. **Connect to Wi-Fi:** Use the printer's control panel to connect to your wireless network. Refer to the on-screen

prompts for network selection and password entry.

Stress-Free, Cartridge-Free Printing

Use Epson's exclusive **EcoFit® bottles** to easily refill the high-capacity ink tanks, with up to **2 years of ink included** in the box — and with every replacement ink set!

ecotank®
#1 SUPERTANK PRINTERS
Over 60 Million Sold
Worldwide 2011 - 6/2021



1 Based on average monthly document print volumes of about 125 pages.

Image: Epson EcoTank ET-2800 with its refillable ink tanks, emphasizing the cartridge-free design.



Save up to
\$1,000
with Replacement Ink¹

Low-Cost Replacement Ink Bottles Instead of Expensive Cartridges

Print thousands of pages with each set of low-cost replacement ink bottles²

¹ Actual savings and costs will vary considerably based on print tasks, print volumes and usage conditions. Savings and cost per ISO page are based on the cost of replacement ink bottles and the cost of enough standard cartridges to achieve the total page yields of the bottles using the MSRP (USD) and yields for Epson® standard-capacity ink cartridges for similarly featured Epson consumer inkjet printers as of May 2021.

² Replacement and included ink bottle yields based on the ISO/IEC 24712 pattern with Epson's methodology. Actual ink yields will vary considerably. For more information, visit www.epson.com/inkinfo

Image: A user demonstrating the easy and mess-free ink refill process for the EcoTank ET-2800.

OPERATING INSTRUCTIONS

Basic Printing

To print documents, ensure the printer is connected to your device via Wi-Fi or USB. Load paper into the rear paper feed. From your computer or mobile device, select the print option in your application. Choose the Epson ET-2800 as your printer, adjust settings (e.g., paper size, print quality), and click print. The printer supports up to 10 pages per minute for black and 5 pages per minute for color.

Copying Documents

Place the document face-down on the scanner glass. Use the printer's control panel and the 1.44" color display to select the 'Copy' function. You can adjust settings such as number of copies and color/black-and-white mode. Press the start button to begin copying.

Scanning Documents

Place the document face-down on the scanner glass. On the printer's control panel, select 'Scan'. You can choose to scan to a computer or a cloud service if configured. Follow the on-screen prompts to complete the scan. The maximum scan resolution is 5760 x 1440 dpi.

Wireless Connectivity

The ET-2800 supports Wi-Fi connectivity, allowing you to print from various devices without a direct cable connection. Ensure your printer and device are on the same network. For mobile printing, download the Epson Smart Panel app.

MAINTENANCE

Ink Refill

The EcoTank system allows for easy and mess-free ink refills. Monitor the ink levels through the transparent tanks on the front of the printer. When a tank is low, open the ink tank unit cover, uncap the corresponding Epson 522 ink bottle, and insert it into the correct tank. The bottles are designed to stop filling automatically when the tank is full. Close the cover once refilled.

Cleaning

Regularly clean the exterior of the printer with a soft, damp cloth. For print quality issues such as banding or missing lines, perform a nozzle check and head cleaning through the printer's maintenance settings or the Epson software on your computer. Refer to the user guide for detailed cleaning procedures.

TROUBLESHOOTING

Common issues and their solutions:

- **Printer Not Responding/Offline:**

Check all cable connections (power, USB if applicable). Ensure the printer is powered on. Verify Wi-Fi connection status on the printer's display and your device. Restart both the printer and your router.

- **Poor Print Quality (Streaks, Fading, Incorrect Colors):**

Check ink levels in all tanks. Perform a Nozzle Check to identify clogged nozzles. If clogs are present, run a Head Cleaning cycle. Repeat if necessary. Ensure you are using genuine Epson ink for optimal performance.

- **Paper Jams:**

Carefully remove any jammed paper from the paper feed or output tray. Open covers as necessary to access and clear all paper fragments. Ensure paper is loaded correctly and not overloaded.

- **Connectivity Issues with Mobile Devices:**

Confirm the Epson Smart Panel app is installed and updated. Ensure your mobile device is connected to the same Wi-Fi network as the printer. Restart the app and the printer.

For more complex issues, consult the comprehensive [User Guide \(PDF\)](#) or Epson's online support resources.

TECHNICAL SPECIFICATIONS

Feature	Specification
Product Dimensions	14.8"D x 22.8"W x 10"H
Item Weight	11.4 pounds
Connectivity Technology	Wi-Fi, USB
Printing Technology	Inkjet
Printer Output	Color
Maximum Print Speed (Color)	5 ppm
Max Printspeed Monochrome	10 ppm
Maximum Color Print Resolution	5760 x 1440 dpi

Feature	Specification
Scanner Type	Flatbed
Max Input Sheet Capacity	100 sheets
Display Type	LCD
Power Consumption	12 Watts
Dual-sided printing	No (Simplex)

WARRANTY AND SUPPORT

The Epson EcoTank ET-2800 comes with a limited warranty. For specific details regarding your warranty coverage, please refer to the documentation included with your product or visit the official Epson website.

For additional support, including FAQs, driver downloads, and contact information, please visit the [Epson Store on Amazon](#) or download the comprehensive [User Guide \(PDF\)](#).