

SURNICE SN10032+SN20021

SURNICE Wireless Remote Control Outlet Kit

Model: SN10032+SN20021

INTRODUCTION

Thank you for choosing the SURNICE Wireless Remote Control Outlet Kit. This kit provides a convenient way to control your electronic devices remotely, enhancing comfort and energy efficiency in your home or office. Please read this manual carefully before use to ensure proper installation, operation, and maintenance.

SAFETY INSTRUCTIONS

- **Electrical Safety:** Always ensure the total load of connected devices does not exceed the maximum power rating of 2300W. Overloading can cause the outlet to automatically shut off for safety, or lead to electrical hazards.
- **Child Safety:** The outlets are designed with a plastic plate that blocks the socket, providing enhanced protection for children. However, always keep electrical devices out of reach of children.
- **Indoor Use Only:** This product is designed for indoor use. Do not expose to water, moisture, or extreme temperatures. The IP20 rating indicates protection against solid objects larger than 12.5mm, but no protection against liquids.
- **Proper Installation:** Ensure the outlets are fully inserted into wall sockets. Do not force them into incompatible sockets.
- **Maintenance:** Do not attempt to disassemble or repair the device yourself. Refer all servicing to qualified personnel.
- **Battery Handling:** The remote control uses a CR2032 battery. Ensure correct polarity when inserting. Dispose of used batteries responsibly.

PACKAGE CONTENTS

Verify that all items are present in your package:

- 4 x SURNICE Wireless Remote Control Outlets
- 1 x Remote Control (with 1 CR2032 battery included)
- 1 x User Manual (this document)

GERINGER STROMVERBRAUCH

Standby < 0.5W



Energieeinsparung



Sicher und zuverlässig



Mini-Größe



This image displays the complete SURNICE Wireless Remote Control Outlet Kit, including four white remote control outlets and a compact white remote control unit.

PRODUCT FEATURES

- **Extended Range:** Control devices up to 40 meters (130 feet) away in open areas. The strong signal can penetrate walls, allowing control from different rooms.
- **Plug and Play:** The outlets and remote are pre-programmed for immediate use, requiring no complex setup.
- **High Power Capacity:** Each outlet supports devices up to 2300W, suitable for various household appliances.
- **Enhanced Safety:** Features a child-protective plastic plate in the socket and an automatic overload shut-off mechanism.
- **Energy Efficient:** Low standby power consumption (less than 0.5W) helps reduce energy waste.
- **Compact Design:** Mini-sized outlets ensure they do not obstruct adjacent sockets.
- **Programmable and Expandable:** Easily program or re-program outlets to specific remote buttons (A, B, C, D) and expand your system with additional SURNICE remote control outlets.

SURNICE

4 ser set



Funksteckdosen mit Fernbedienung

Praktischer täglicher Helfer, befreien Sie Ihre Hände und machen Sie Ihr Leben bequemer.



This graphic emphasizes the energy-saving aspect of the SURNICE remote control outlets, indicating a standby power consumption of less than 0.5W. Icons for energy saving, safety, and mini-size are also shown.

SETUP

1. Remote Control Battery Installation

The remote control comes with a pre-installed CR2032 battery. If you need to replace it:

1. Locate the battery compartment on the back of the remote control.
2. Open the compartment cover.
3. Insert a new CR2032 battery with the positive (+) side facing up.
4. Close the battery compartment cover securely.

2. Pairing Outlets with Remote Control

The outlets are pre-programmed to the remote control. If re-pairing is needed or for new outlets:

1. Plug the remote control outlet into a wall socket.
2. Press and hold the small button on the side of the remote control outlet until its indicator light starts blinking.
3. While the indicator light is blinking, press the desired 'ON' button (A, B, C, or D) on the remote control.
4. The indicator light on the outlet will stop blinking and remain solid for a moment, then turn off, indicating successful pairing.
5. Repeat this process for each remote control outlet you wish to pair.



A close-up view of the SURNICE remote control outlets and the remote control, illustrating their compact design.

OPERATING INSTRUCTIONS

Once the outlets are plugged in and paired, you can control them using the remote control:


- **Individual Control:** Press the 'ON' button (A, B, C, or D) corresponding to the desired outlet to turn it on. Press the respective 'OFF' button to turn it off.
- **All On/Off:** Press the 'ALL ON' button to turn on all paired outlets simultaneously. Press the 'ALL OFF' button to turn off all paired outlets simultaneously.



Einfach zu verwenden

bequemes Leben

An illustration showing a hand holding the SURNICE remote control, demonstrating its use to wirelessly control an appliance plugged into a remote control outlet, with a television in the background.

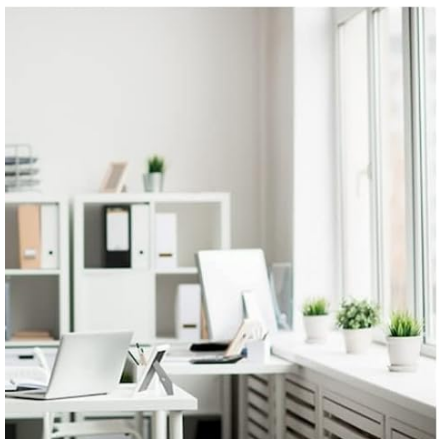

FÜR MEHRERE VERWENDUNGEN



This image showcases diverse applications for the SURNICE remote control outlets, including controlling Christmas decorations, bedside lamps, and office electronics, highlighting their versatility.

MAINTENANCE


- **Cleaning:** Disconnect the remote control outlets from power before cleaning. Use a dry, soft cloth to wipe the surfaces. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace the CR2032 battery in the remote control when its range decreases or it stops responding. Follow the battery installation steps in the Setup section.
- **Storage:** Store the outlets and remote control in a cool, dry place when not in use for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Outlet does not respond to remote.	1. Remote control battery is low or dead. 2. Outlet is not paired with the remote. 3. Outlet is out of range. 4. Obstructions blocking the signal.	1. Replace the CR2032 battery in the remote. 2. Re-pair the outlet with the remote (refer to Setup section). 3. Move closer to the outlet. 4. Reduce obstructions between remote and outlet.
Outlet turns off unexpectedly.	1. Connected device exceeds 2300W maximum load. 2. Power outage.	1. Disconnect high-power devices. Ensure total load is below 2300W. 2. Check household power supply.
Reduced remote control range.	1. Remote control battery is low. 2. Excessive interference from other devices. 3. Too many obstacles (walls, furniture).	1. Replace the CR2032 battery. 2. Try using the remote in a different location or away from other electronics. 3. Reduce physical obstructions.

SPECIFICATIONS

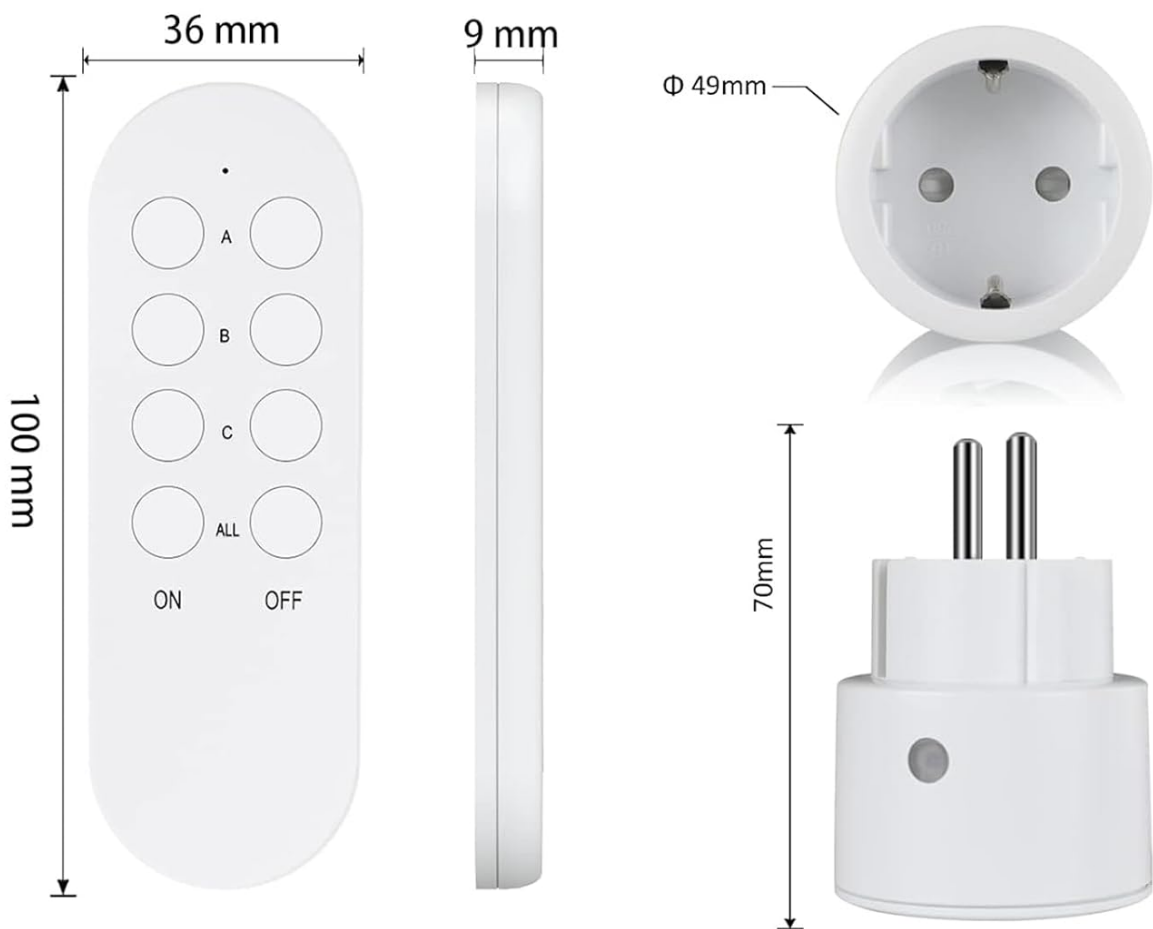

AC10A/2300W



**1 x CR2032
Batterien kostenlos**



**Programmierbar und
Erweiterungsfähig**



Inklusive Batterie



LED-Blitz



Standard Plug

A detailed diagram illustrating the physical dimensions of both the remote control (100mm length, 36mm width, 9mm thickness) and the remote control outlet (70mm height, 49mm diameter). Key features such as AC10A/2300W rating, included CR2032 battery, programmability, LED indicator, and standard Schuko plug type are highlighted.

Feature	Detail
Model Number	SN10032+SN20021
Brand	SURNICE
Max Power Rating	2300 Watts
Operating Voltage	230 Volts
Remote Control Range	Up to 40 meters (without obstacles)
Remote Control Battery	1 x CR2032 (included)

Feature	Detail
Outlet Dimensions (L x W x H)	6 x 5 x 7 cm
Outlet Weight	61 Grams
Connector Type	Schuko (Type F)
Contact Material	Copper
International Protection (IP) Rating	IP20
Certifications	CE
Control Method	Remote Control
Number of Positions	4 (for individual control)

WARRANTY AND SUPPORT

Specific warranty information is not available in this manual. For warranty details, product support, or any inquiries, please contact SURNICE customer service or refer to the product packaging and purchase documentation. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

